


Installation Manual

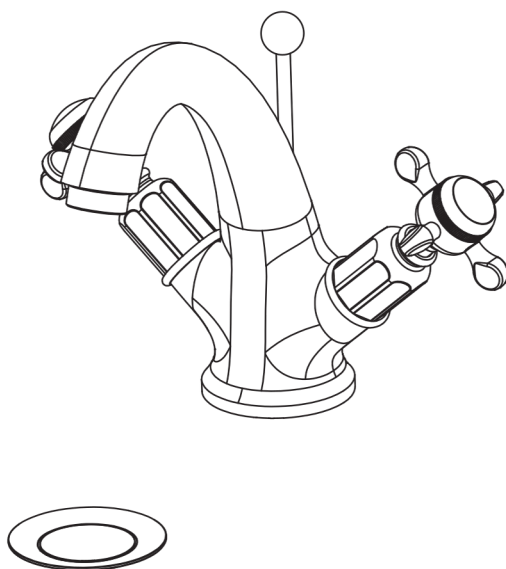

Apply for following models
11300/11301

Please keep this page for your online registration.

No. FIBTTBH30V1.0

Product image for reference


WARNING



CAUTION

If using solder for the installation of the tap; the tap seats, cartridges and washers will have to be removed before heating. Otherwise, the warranty will be voided on these parts.

TOOLS YOU MIGHT NEED

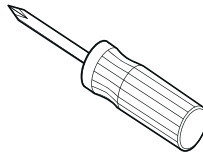

Screwdriver



Adjustable
Wrench

TECHNICAL DATA

Recommended water pressure: 7.25 - 43.5 psi


Max. Water pressure: 116 psi

Recommended hot water temp: 99.14 - 135.32 °F

Max. Hot water temp: 164.84 °F

Please know and follow all applicable local plumbing codes when setting the temperature on the water heater.

PARTS LIST

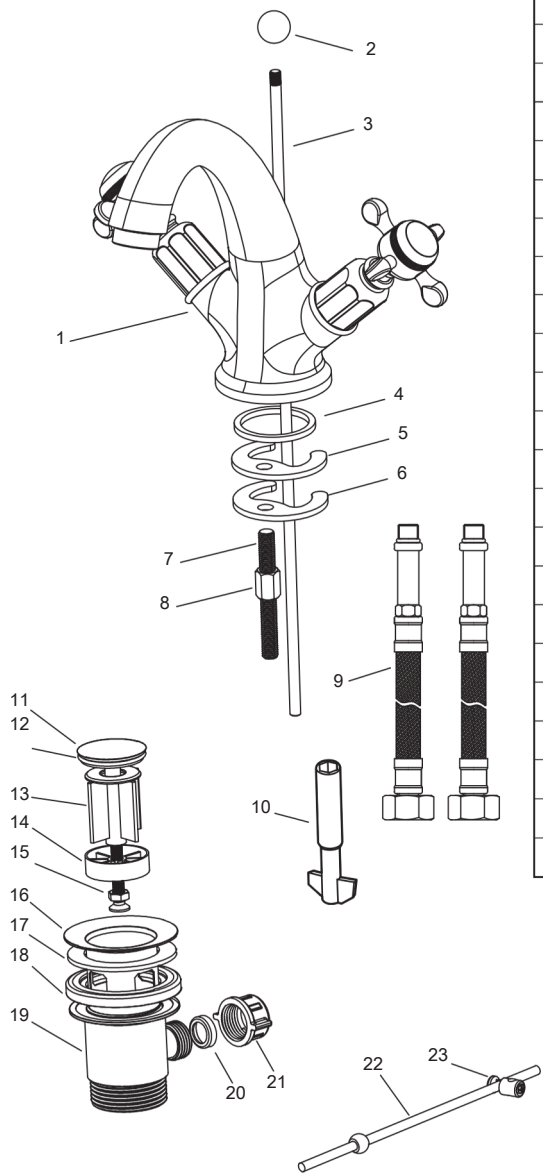



23	Connector	1
22	Connecting Rod	1
21	Nut	1
20	Plastic Washer	1
19	Waste Body	1
18	Washer	1
17	Washer	1
16	Flange	1
15	Screw	1
14	Plastic washer	1
13	Plastic Core	1
12	O-Ring	1
11	Plug	1
10	Fixing Tool	1
9	Flexible Hose	2
8	Fixing Nut	1
7	Threaded Rod	1
6	Metal Washer	1
5	Rubber Washer	1
4	Rubber Washer	1
3	Lift Rod	1
2	Lift Handle	1
1	Tap Body	1
No.	Description	Quantity

BEFORE INSTALLATION

- ⌘ Observe all local plumbing codes.
- ⌘ Make sure water supply is turned off.
- ⌘ Read these instructions carefully to ensure proper installation.
- ⌘ Cover your drain to avoid losing parts.
- ⌘ Check to make sure you have the following parts indicated below.



 
Please check you have all of these items in the box.

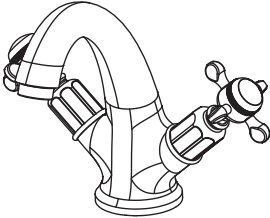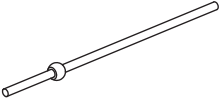 Tap Body X1	 Flexible Hose X2	 Threaded Rod X1
 Fixing Nut X1	 Rubber Washer X1	 Metal washer X1
 Basin Waste X1	 Lift Rod X1	 Connecting Rod X1
 Rubber Washer X1	 Connector X1	 Fixing Tool X1

INSTALLATION PROCEDURE

1


Fit flexible hoses (9) to tap body, making sure that you do not over tighten.

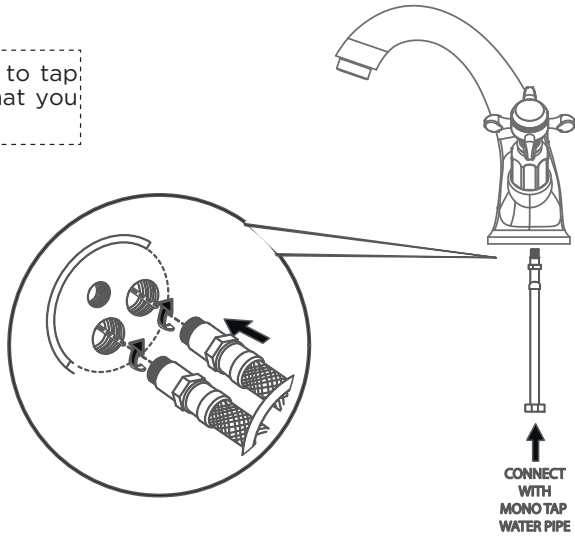

2

Slide rubber washer (4) onto flexible hose and push it to the bottom of tap body.



Secure the tap body to the basin using rubber washer (5), metal washer (6), threaded rod (7) and fixing nut (8).

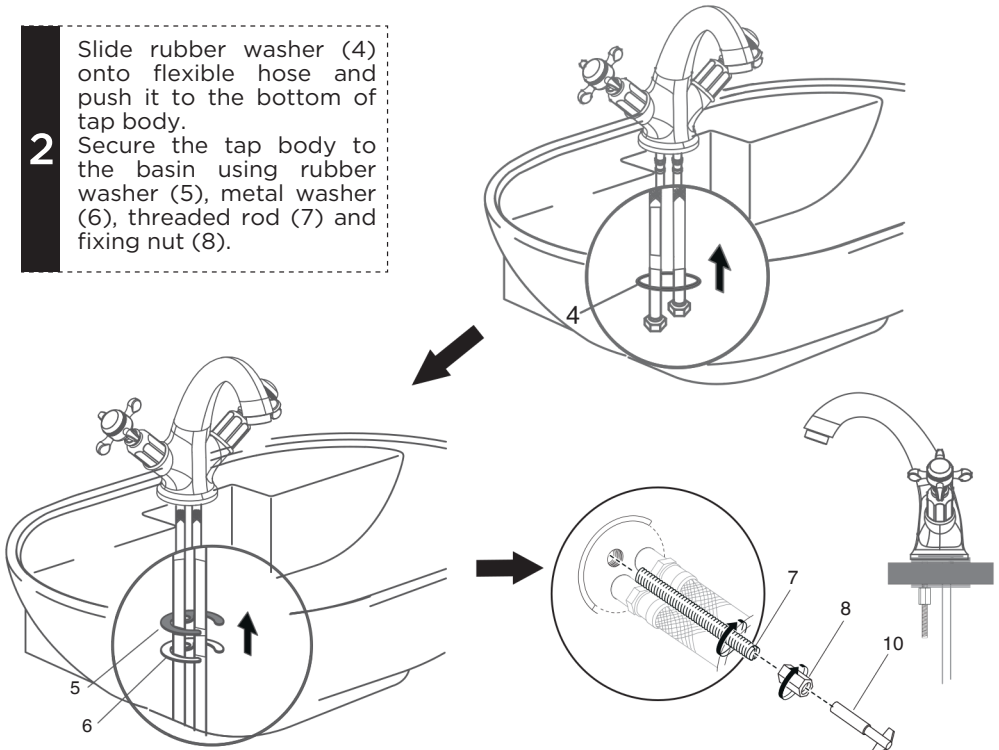

INSTALLATION PROCEDURE


3

Remove all parts from the basin waste. Slide washer (17) onto flange (16), then insert flange (16) through the basin from above. Install washer (18) and waste body (19) onto flange (16).

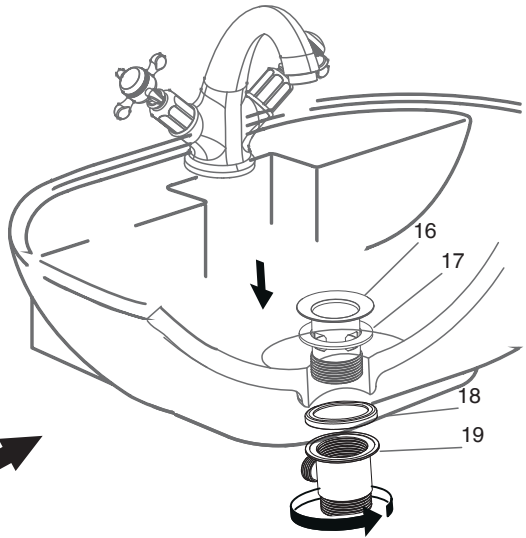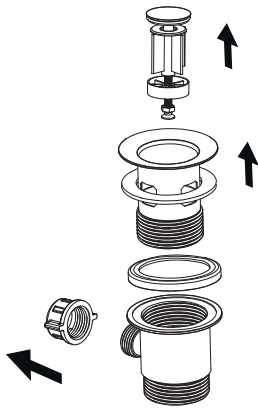

4


Insert connecting rod (22) into waste body (19), then tighten nut (21) slightly.

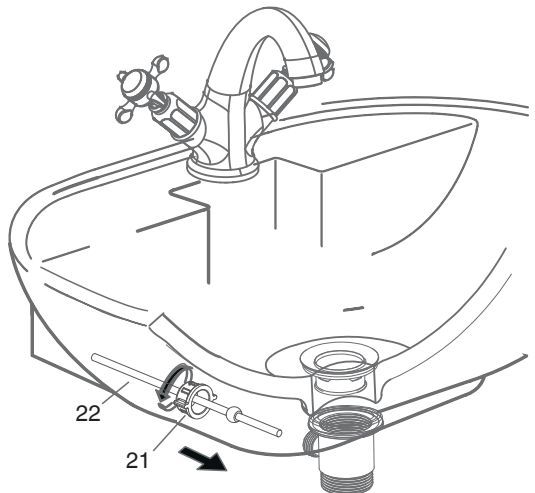

INSTALLATION PROCEDURE

5

Insert the large hole of connector (23) over connecting rod (22). Then pass lift rod (3) through back of tap and into small hole of connector (23). Finally, tighten screw with Phillips screwdriver.

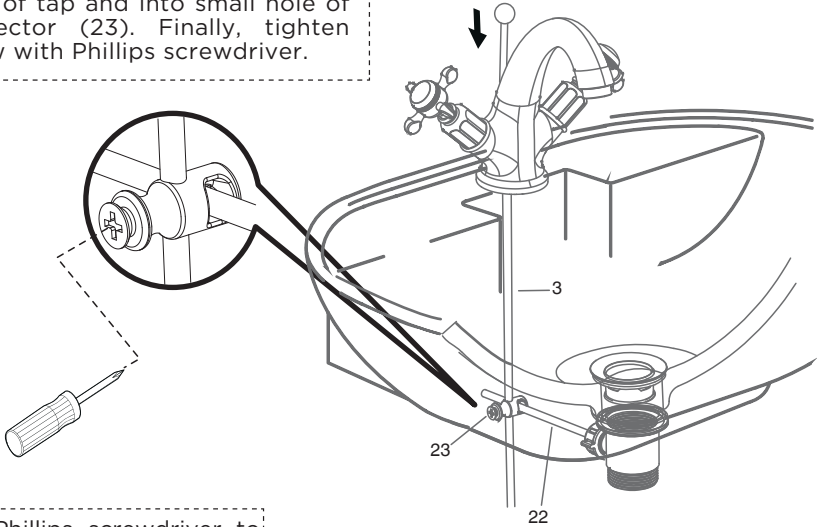



6

Use Phillips screwdriver to adjust screw on plug (11) to achieve proper lift position.



Lift rod up → basin waste plug close. Lift rod down → basin waste plug open. If above effects not achieved, readjust screw length on plug (11) with Phillips screwdriver.

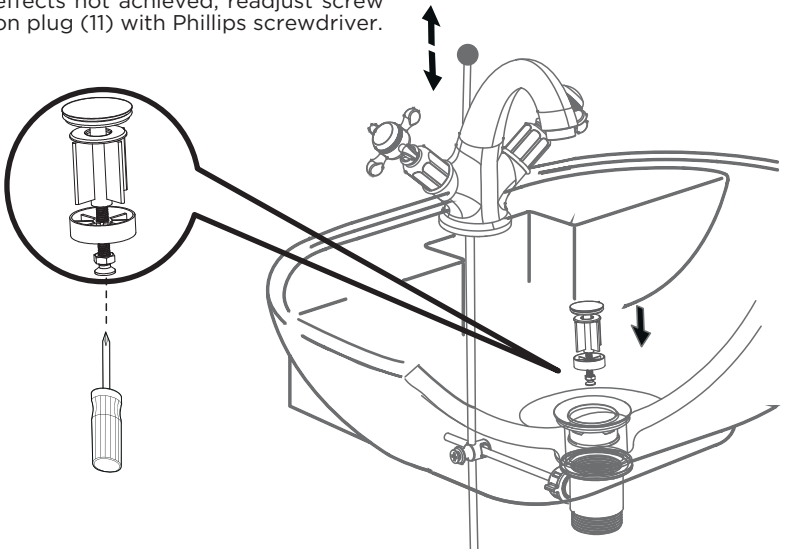

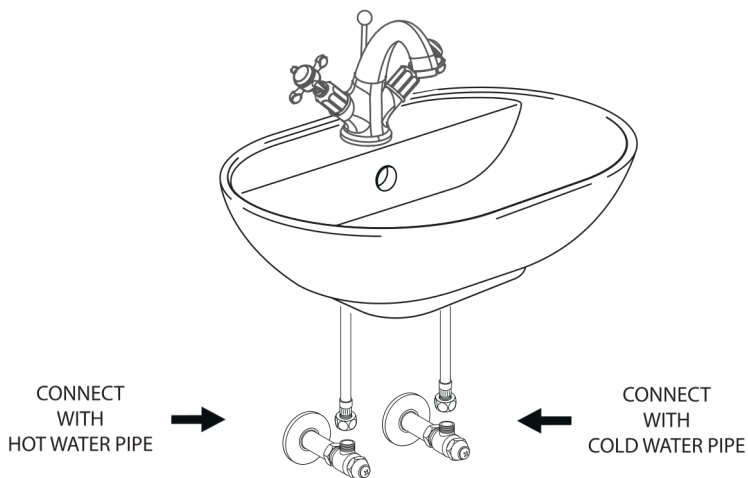

AFTER INSTALLATION

Ensure that all connections are tight. Ensure that the handle is in the off position. Turn on the drain and main water supply, and check for leaks. Repair as needed.

CARE & CLEANING

Your new tap is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with mild soap, rinse thoroughly with warm water and dry with a clean, soft cloth. Do not use abrasive cleaners, steel wool or harsh chemicals, as these will dull the finish. Failure to follow these instructions may void your warranty.

TROUBLE SHOOTING

If you've followed the instructions carefully and your tap still does not work properly, take these corrective steps.

Problem	Possible Cause	Solution
Insufficient water	- Aerator clogged	- Clean aerator, replace if necessary
Mixer stiff	- Cartridge defective	- Replace cartridge
Mixer dripping	- Cartridge defective	- Replace cartridge
Water leaks below handle	- Cartridge defective	- Replace cartridge
	- O-ring/rings defective	- Replace O-ring/rings
Water leaks at the connection	- Loose connection	- Tighten connection