


Installation Manual

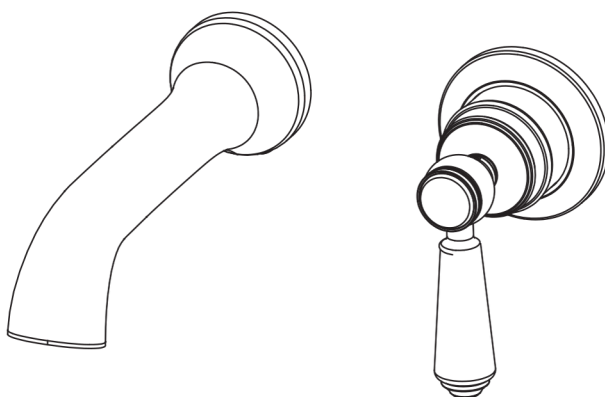

Apply for following models
11294/11295

Please keep this page for your online registration.

No. FIBTTBH31V1.0

Product image for reference


 


WARNING




CAUTION

If using solder for the installation of the tap; the tap seats, cartridges and washers will have to be removed before heating. Otherwise, the warranty will be voided on these parts.

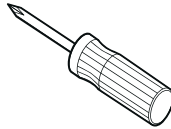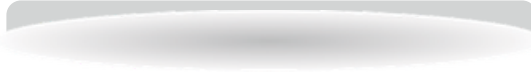

Screwdriver

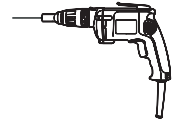

Electric Drill



Adjustable Wrench



Hexagon wrench

TECHNICAL DATA

Recommended water pressure: 7.25 - 43.5 psi

Max. Water pressure: 116 psi

Recommended hot water temp: 99.14 - 135.32 °F


Max. Hot water temp: 164.84 °F

Please know and follow all applicable local plumbing codes when setting the temperature on the water heater.

PARTS LIST

8	Cover	1
7	Rubber plug	2
6	Screw	2
5	Handle	1
4	Flange	1
3	Valve Body	1
2	Adapter Connector	1
1	Spout	1
No.	Description	Quantity

16	Plastic cover	1
15	G1/2" Plastic Stopper	1
14	Aerator Wrench	1
13	2.5mm Hex Key	1
12	1.5mm Hex Key	1
11	Wall Plug	3
10	Screw	3
9	Screw	1
No.	Description	Quantity





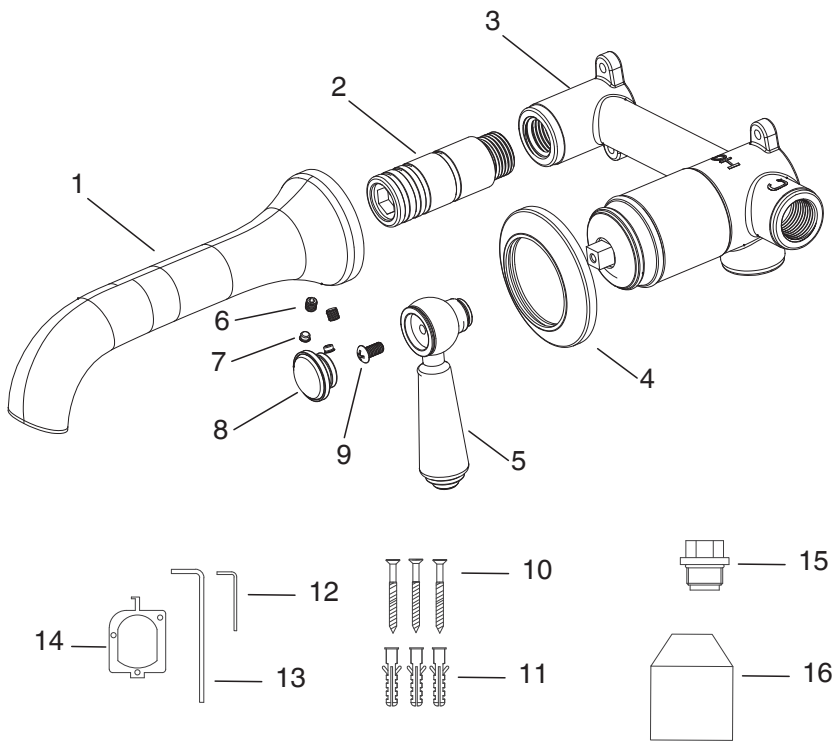


BEFORE INSTALLATION

- ⌘ Observe all local plumbing codes.
- ⌘ Make sure water supply is turned off.
- ⌘ Read these instructions carefully to ensure proper installation.
- ⌘ Cover your drain to avoid losing parts.
- ⌘ Check to make sure you have the following parts indicated below.



  
 
Please check you have all of these items in the box.

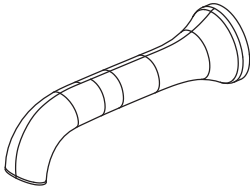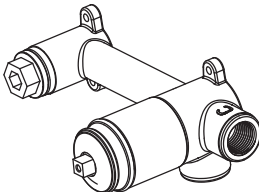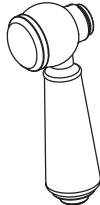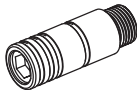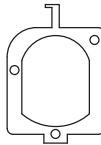			
Spout X1	Valve Body X1	Handle X1	
			
Adapter connector X1	Flange X1	2.5mm Hex Key X1	1.5mm Hex Key X1
			
Wall Plug X3	Screw X3	Aerator Wrench X1	

INSTALLATION PROCEDURE



1

Determine the fixing position for the valve and make a recess in the wall to house the valve. The depth of the recess should be 45mm to 55mm within the finished wall. Drill holes in the recess according to the valve body's center distance, then insert the wall plugs (11).

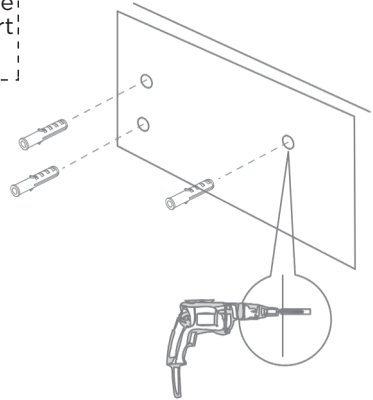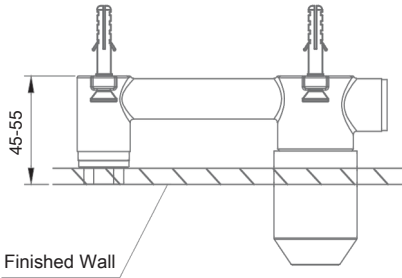

2


Tighten screws (10) to secure the valve body to the wall, connect the cold and hot water inlet pipes, check for leaks, and finally tile the wall.

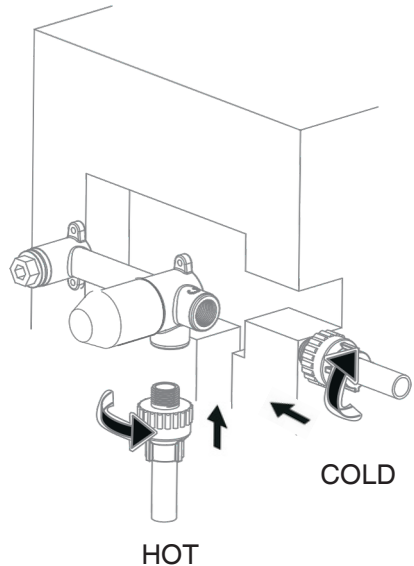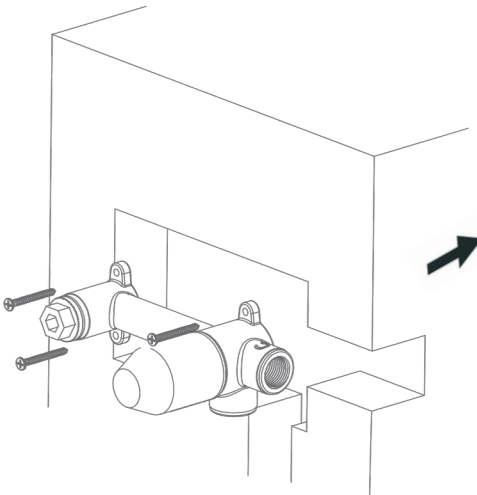

INSTALLATION PROCEDURE


3


Remove the plastic stopper (15) and plastic cover (16), screw the adapter connector (2) onto the tap body, and tighten it by hexagon wrench (not supplied). Then fit the spout (1) onto the connector and secure it with the grub screws underneath.

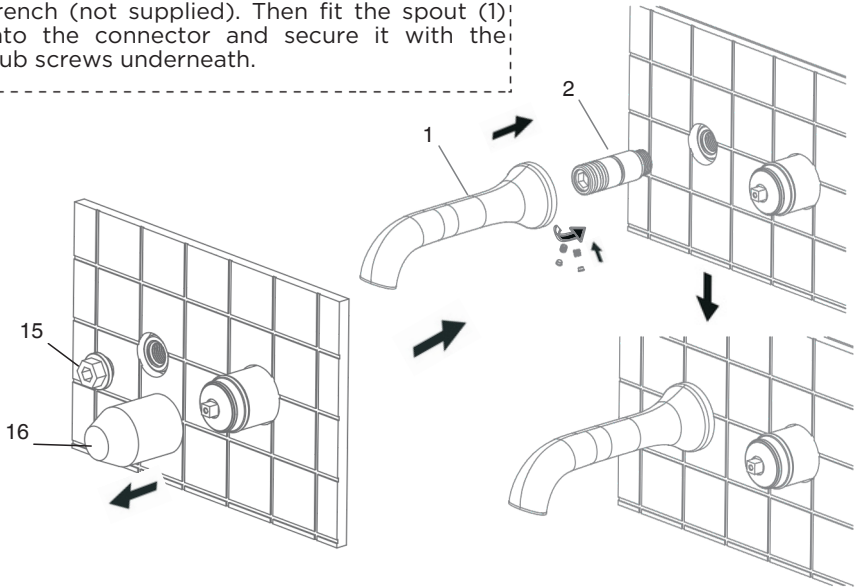

4

Remove the compression nut from the valve body, then place the flange (4) onto the valve body, reinstall the compression nut, and finally attach the handle and tighten the screw.

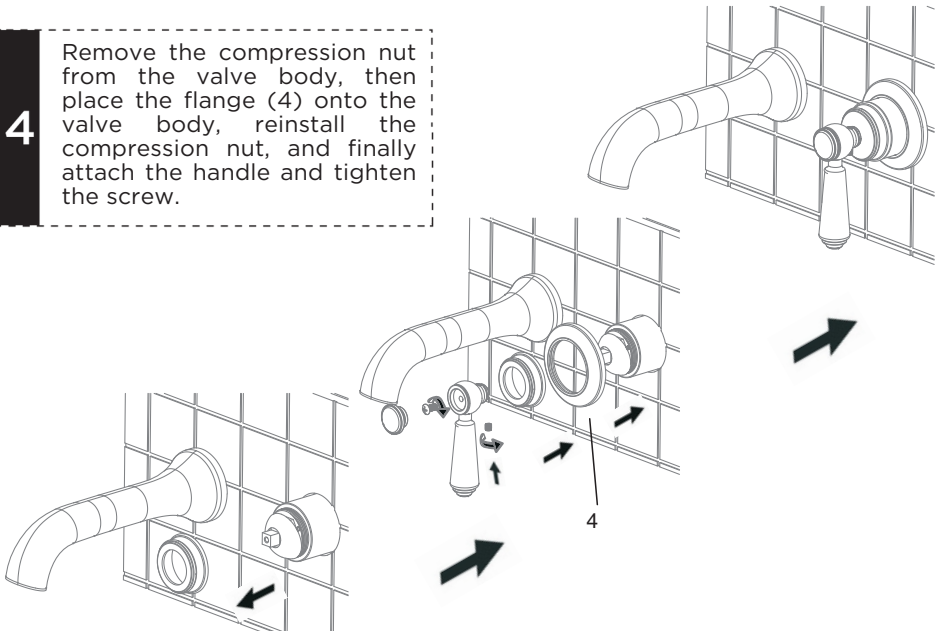

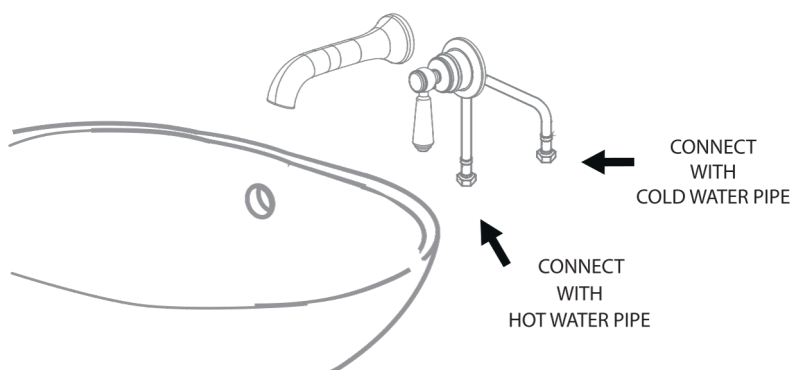

AFTER INSTALLATION

Ensure that all connections are tight. Ensure that the handle is in the off position. Turn on the drain and main water supply, and check for leaks. Repair as needed.

CARE & CLEANING

Your new tap is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with mild soap, rinse thoroughly with warm water and dry with a clean, soft cloth. Do not use abrasive cleaners, steel wool or harsh chemicals, as these will dull the finish. Failure to follow these instructions may void your warranty.

TROUBLE SHOOTING

If you've followed the instructions carefully and your tap still does not work properly, take these corrective steps.

Problem	Possible Cause	Solution
Insufficient water	- Aerator clogged	- Clean aerator, replace if necessary
Mixer stiff	- Cartridge defective	- Replace cartridge
Mixer dripping	- Cartridge defective	- Replace cartridge
Water leaks below handle	- Cartridge defective	- Replace cartridge
	- O-ring/rings defective	- Replace O-ring/rings
Water leaks at the connection	- Loose connection	- Tighten connection