


Installation Manual

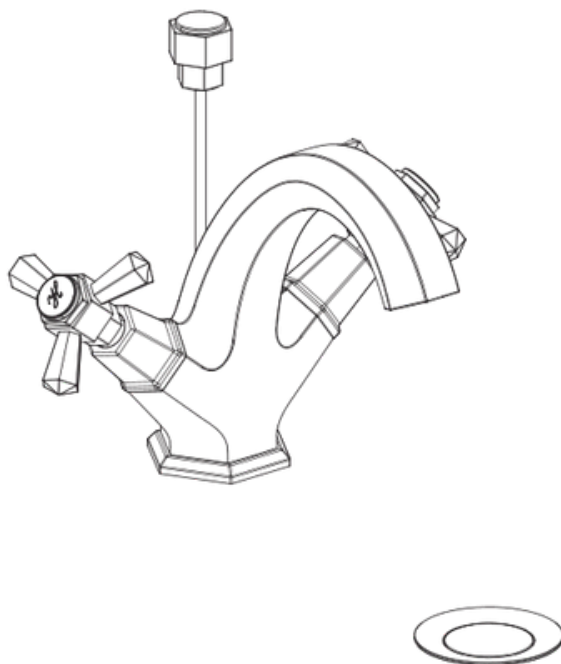

Apply for following models
14001/14002

Please keep this page for your online registration.

No. FIBTTBH37V1.0

Product image for reference


 


WARNING



CAUTION

If using solder for the installation of the tap; the tap seats, cartridges and washers will have to be removed before heating. Otherwise, the warranty will be voided on these parts.

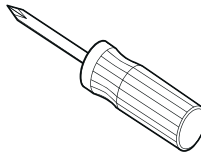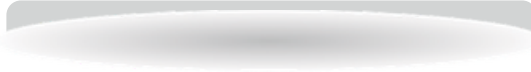

Screwdriver



Adjustable
Wrench

TECHNICAL DATA

Recommended water pressure: 7.25 - 43.5 psi


Max. Water pressure: 116 psi

Recommended hot water temp: 99.14 - 135.32 °F

Max. Hot water temp: 164.84 °F

Please know and follow all applicable local plumbing codes when setting the temperature on the water heater.

PARTS LIST

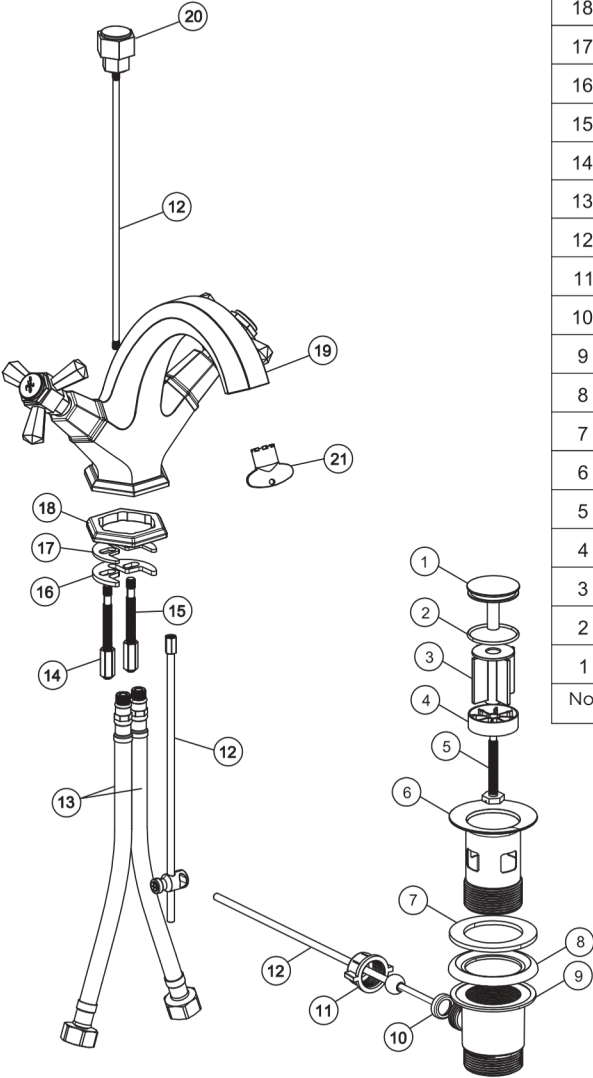


21	Plastic Spanner	1
20	Lifting Handle	1
19	Tap Body	1
18	Washer	1
17	Washer	1
16	Metal Washer	1
15	Fixing Bolt	2
14	Fixing Nut	2
13	Flexible Hose	2
12	Lift Rod Assembly	1 set
11	Nut	1
10	Plastic Washer	1
9	Waste Body	1
8	Washer	1
7	Washer	1
6	Flange	1
5	Screw	1
4	Plastic Washer	1
3	Pop-up Lift Core	1
2	O-Ring	1
1	Plug	1
No.	Description	Quantity

BEFORE INSTALLATION

- ⌘ Observe all local plumbing codes.
- ⌘ Make sure water supply is turned off.
- ⌘ Read these instructions carefully to ensure proper installation.
- ⌘ Cover your drain to avoid losing parts.
- ⌘ Check to make sure you have the following parts indicated below.



Please check you have all of these items in the box.

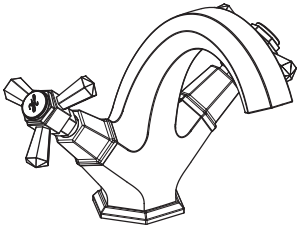


Tap Body
X1




Lift Rod Assembly
1 set



 Flexible Hose
X2



Metal Washer
X1

 

Washer
X1



Plastic Spanner
X1



Basin Waste
X1





Fixing Bolt With Nut
X2

INSTALLATION PROCEDURE


1

Fit the flexible hoses to the tap body, ensuring that you do not overtighten. Then install the fixing bolt into the screw hole of the tap body. Remove the fixing nut. Place the washer on the tap body.

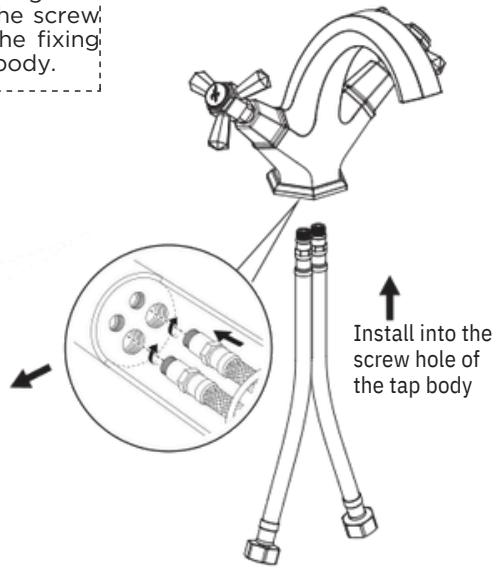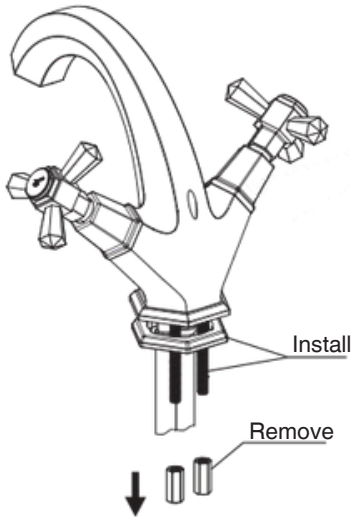

2


Secure the tap body to the basin using the rubber washer, metal washer and fixing nut.

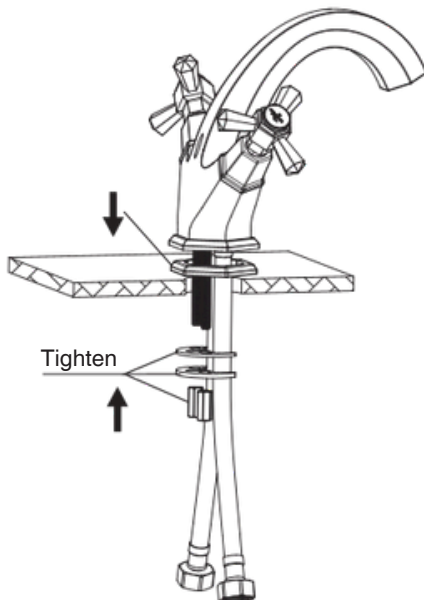

INSTALLATION PROCEDURE

3



Install the basin waste.

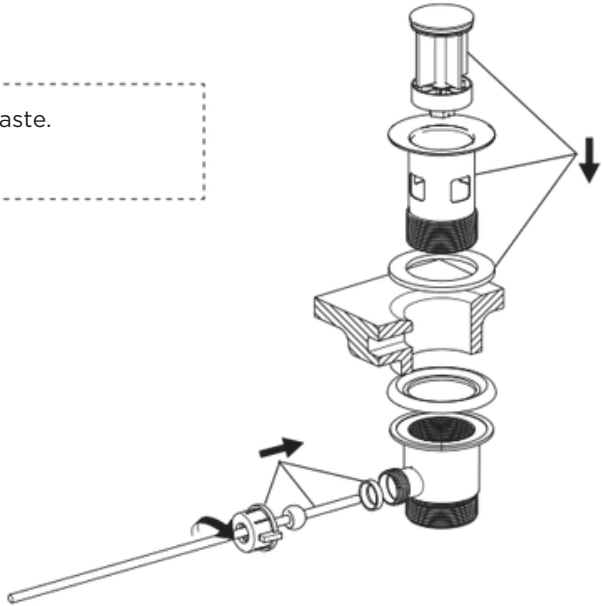


4

Install the lift rod assembly.

Insert the connection rod (2) into the connector (3), then insert the connector (3) into the rod (4). Pass the lift rod (1) through the tap body, connect the lift rod (1) to the connection rod (2) using the fixing nut. Tighten the screw on the connector (3). Adjust the screw on the waste plug to achieve the proper lift position. Check all joints and connections for leakage.

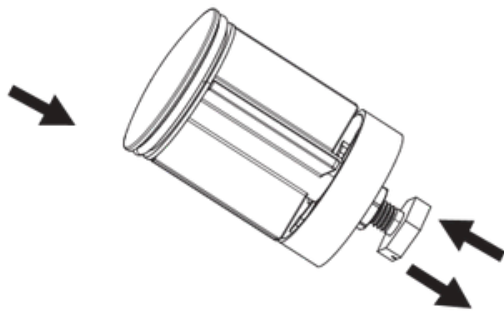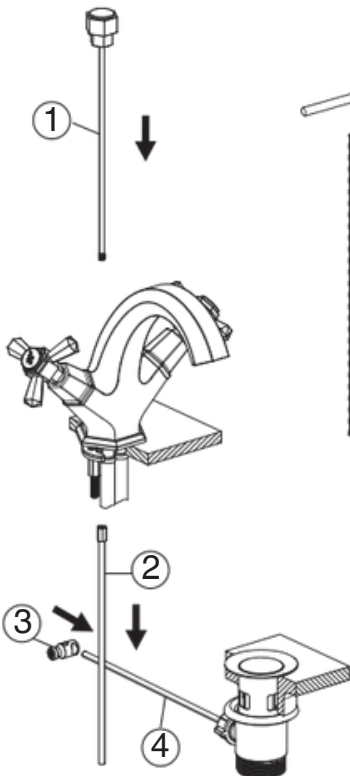

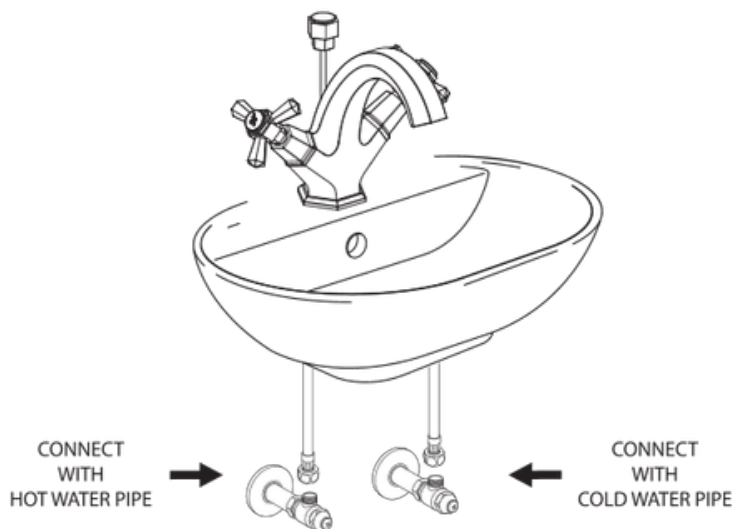

AFTER INSTALLATION

Ensure that all connections are tight. Ensure that the handle is in the off position. Turn on the drain and main water supply, and check for leaks. Repair as needed.

CARE & CLEANING

Your new tap is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with mild soap, rinse thoroughly with warm water and dry with a clean, soft cloth. Do not use abrasive cleaners, steel wool or harsh chemicals, as these will dull the finish. Failure to follow these instructions may void your warranty.

TROUBLE SHOOTING

If you've followed the instructions carefully and your tap still does not work properly, take these corrective steps.

Problem	Possible Cause	Solution
Insufficient water	- Aerator clogged	- Clean aerator, replace if necessary
Mixer stiff	- Cartridge defective	- Replace cartridge
Mixer dripping	- Cartridge defective	- Replace cartridge
Water leaks below handle	- Cartridge defective	- Replace cartridge
	- O-ring/rings defective	- Replace O-ring/rings
Water leaks at the connection	- Loose connection	- Tighten connection