 


Installation Manual

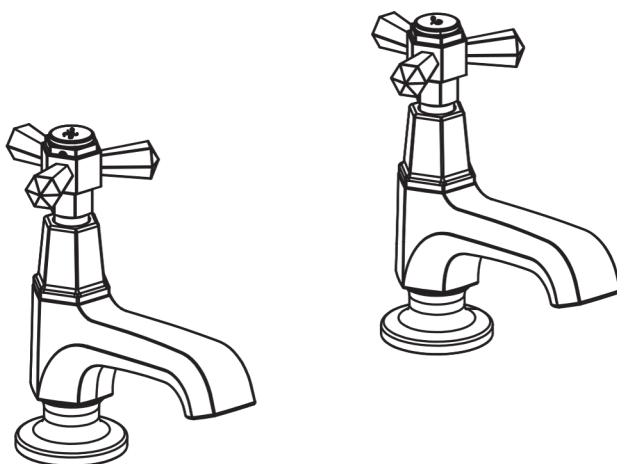

Apply for following models
11296/11297

Please keep this page for your online registration.

No. FIBTTBH38V1.0

Product image for reference

 


BEFORE INSTALLATION


- ⌘ Observe all local plumbing codes.
- ⌘ Make sure water supply is turned off.
- ⌘ Read these instructions carefully to ensure proper installation.
- ⌘ Cover your drain to avoid losing parts.
- ⌘ Check to make sure you have the following parts indicated below.
- ⌘ If using solder for the installation of the tap, the tap seats, cartridges and washers will have to be removed before heating. Otherwise, the warranty will be voided on these parts.



Please check you have all of these items in the box.

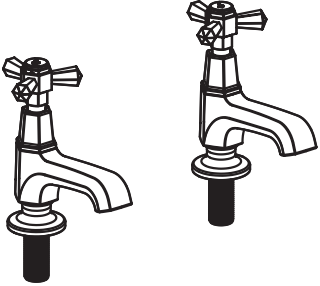			
Main Tap X2		Washer X1	Washer X1
			
Nut X2	Plastic Spanner X1		

 TOOLS YOU MIGHT NEED



Screwdriver

 
 


Adjustable
Wrench

INSTALLATION PROCEDURE


1


Remove the washer and the nut

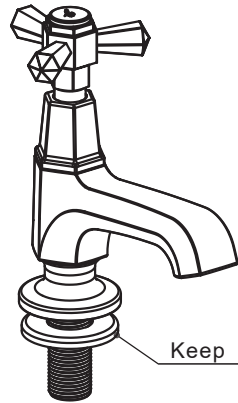

2

  Fit the taps to the basin using the supplied washer and nut.

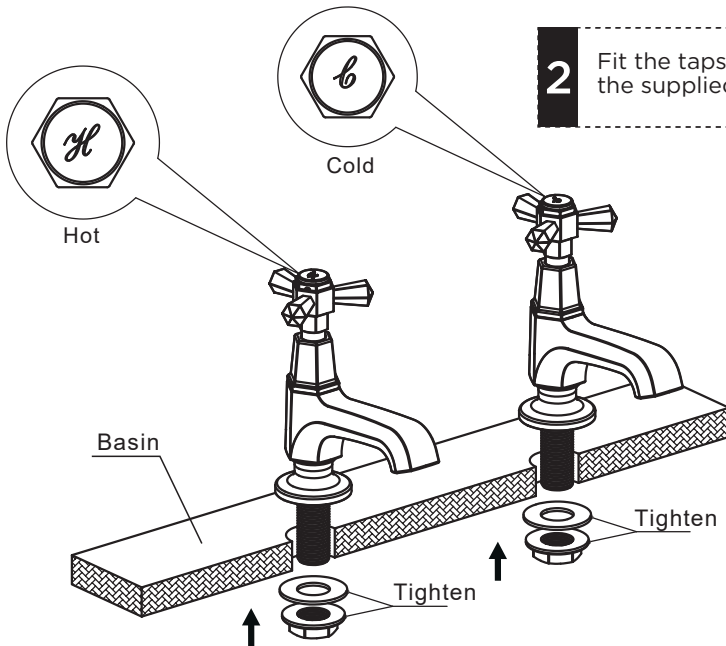

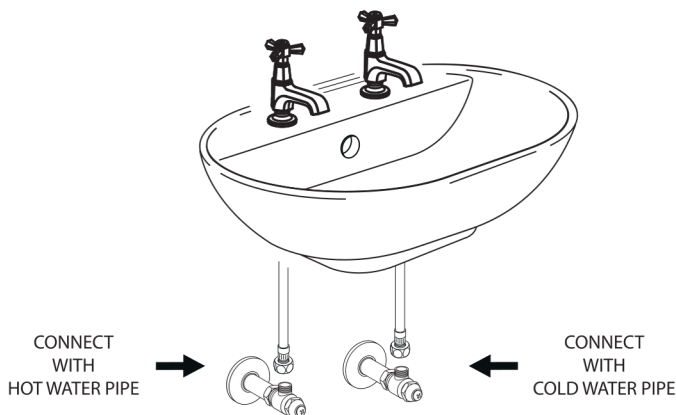

AFTER INSTALLATION

Ensure that all connections are tight. Ensure that the handle is in the off position. Turn on the drain and main water supply, and check for leaks. Repair as needed.

CARE & CLEANING

Your new tap is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with mild soap, rinse thoroughly with warm water and dry with a clean, soft cloth. Do not use abrasive cleaners, steel wool or harsh chemicals, as these will dull the finish. Failure to follow these instructions may void your warranty.

TROUBLE SHOOTING

If you've followed the instructions carefully and your tap still does not work properly, take these corrective steps.

Problem	Possible Cause	Solution
Insufficient water	- Aerator clogged	- Clean aerator, replace if necessary
Mixer stiff	- Cartridge defective	- Replace cartridge
Mixer dripping	- Cartridge defective	- Replace cartridge
Water leaks below handle	- Cartridge defective	- Replace cartridge
	- O-ring/rings defective	- Replace O-ring/rings
Water leaks at the connection	- Loose connection	- Tighten connection

TECHNICAL DATA

Recommended water pressure: 7.25 - 43.5 psi

Max. Water pressure: 116 psi

Recommended hot water temp: 99.14 - 135.32 °F

Max. Hot water temp: 164.84 °F

Please know and follow all applicable local plumbing codes when setting the temperature on the water heater.