


Installation Manual

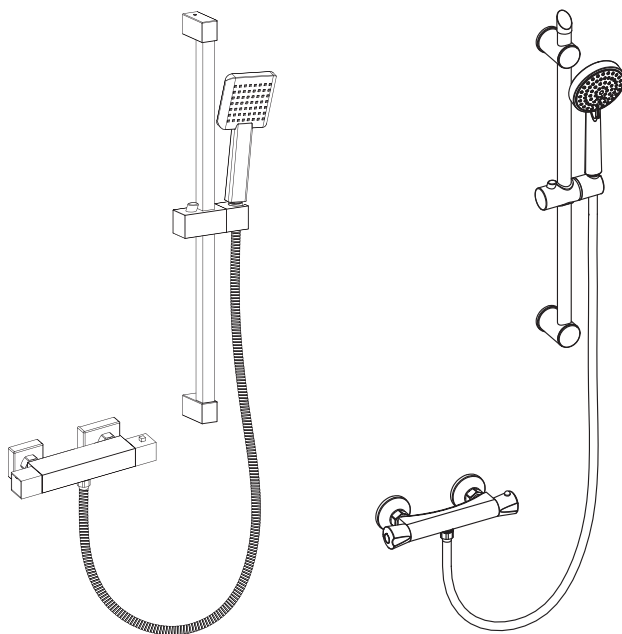

Apply for following models

23003/23004

Please keep this page for your online registration.

No. FISHTBX07V1.0



TECHNICAL DATA

Conditions of use for thermostatic mixer valves.

	Low Pressure	High Pressure
Max static pressure(Bar)	10	10
Flow Pressure,Hot&Cold(Bar)	0.1-1.0	0.5-5.0
Hot Supply Temperature(C)	55-65	55-65
Cold Supply Temperature(C)	Equal to or less than 25	Equal to or less than 25

 
TOOLS YOU MIGHT NEED



Electric Drill




Drill Bit



Hammer



 Pencil



Cross Head
Screwdriver



 
Spirit Level




PTFE Tape



Wrench




Wrench

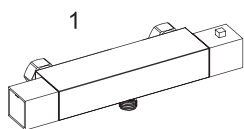

[01]x1



 [02]x2



[03]x2




[04]x2




[05]x2




[06]x2

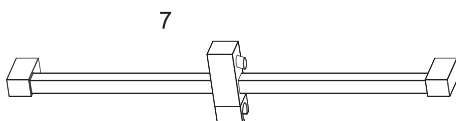

[07]x1

 



[08]x1

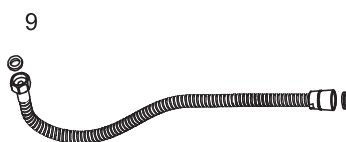

[09]x1

PART LIST

ARTICLE	DESCRIPTION	QTY
1	Mixer	1
2	S connect	2
3	Cover	2
4	Flat washer	2
5	Wall plug	2
6	Screw	2
7	Riser rail	1
8	Hand held shower	1
9	Shower hose	1

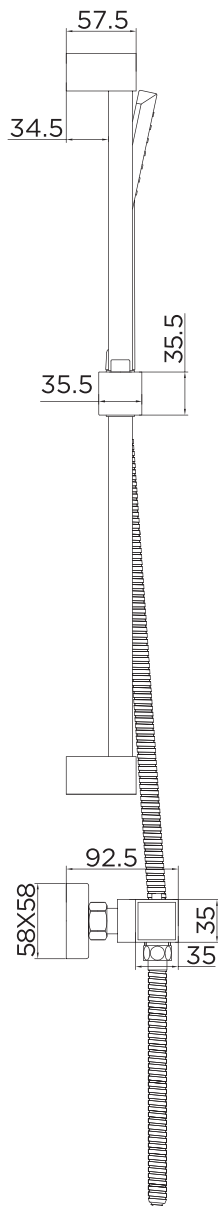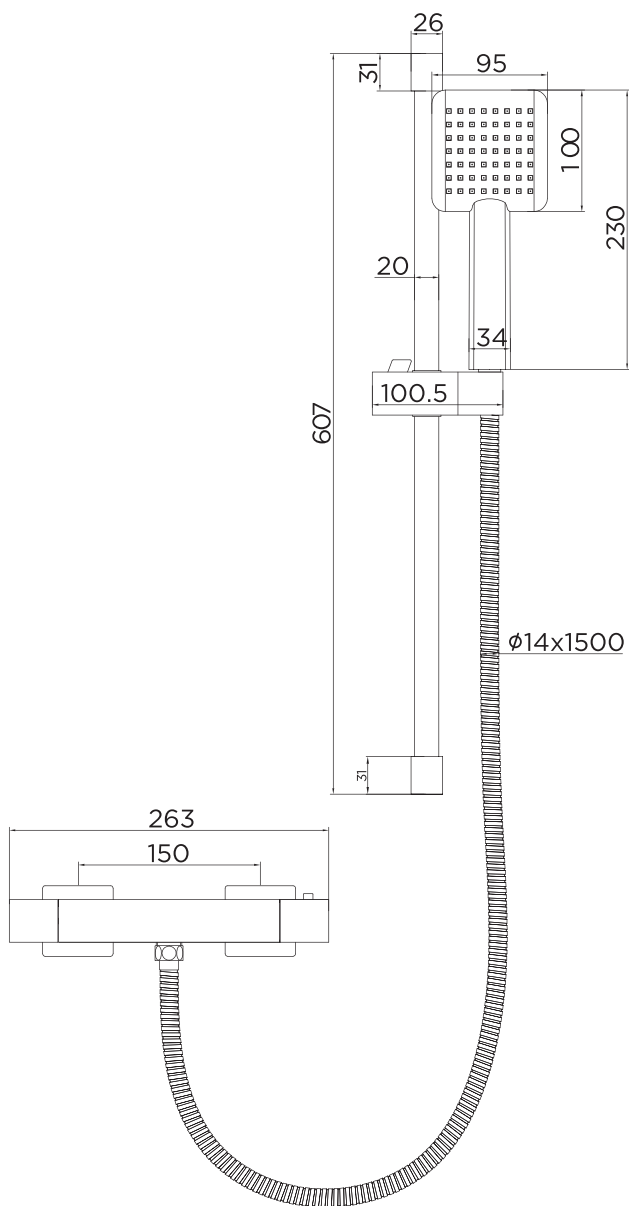


INSTALLATION PROCEDURE




1



 [02]








shut inlet valve

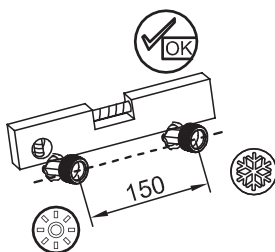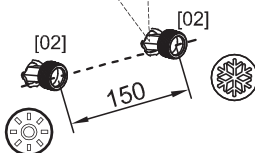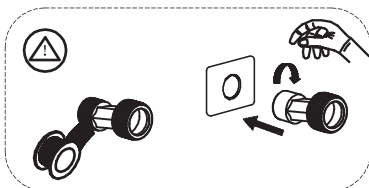




INSTALLATION PROCEDURE

 2

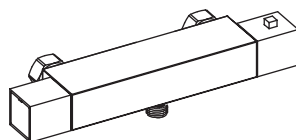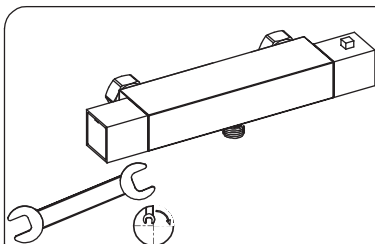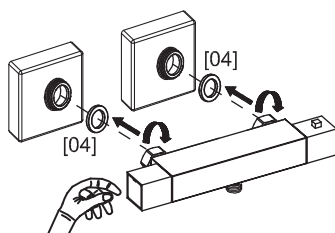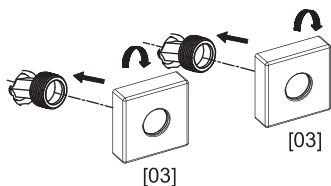


INSTALLATION PROCEDURE

 3

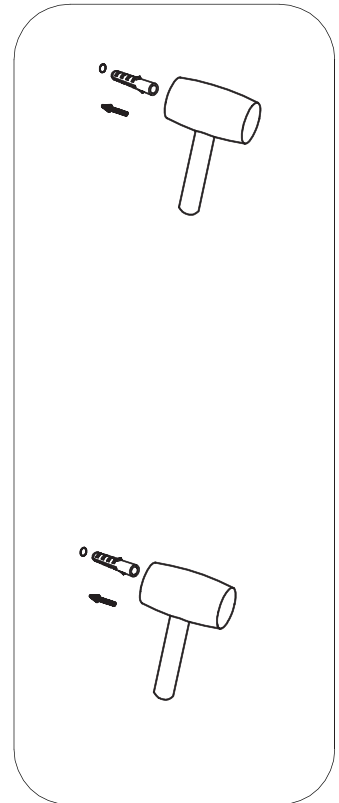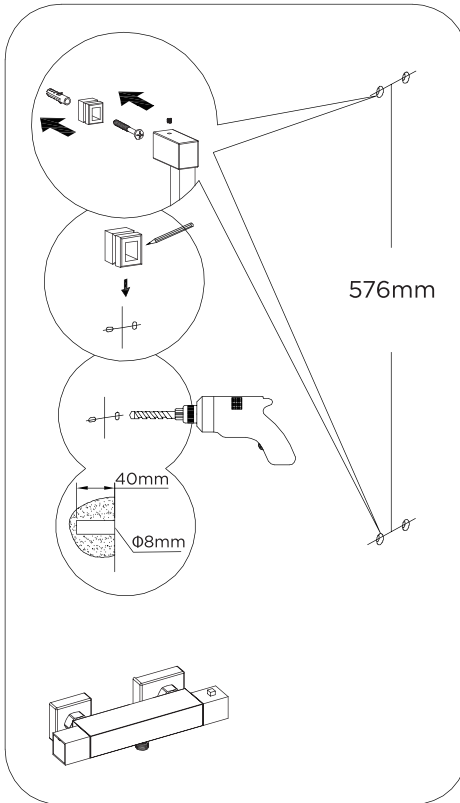


INSTALLATION PROCEDURE

 4




[07]

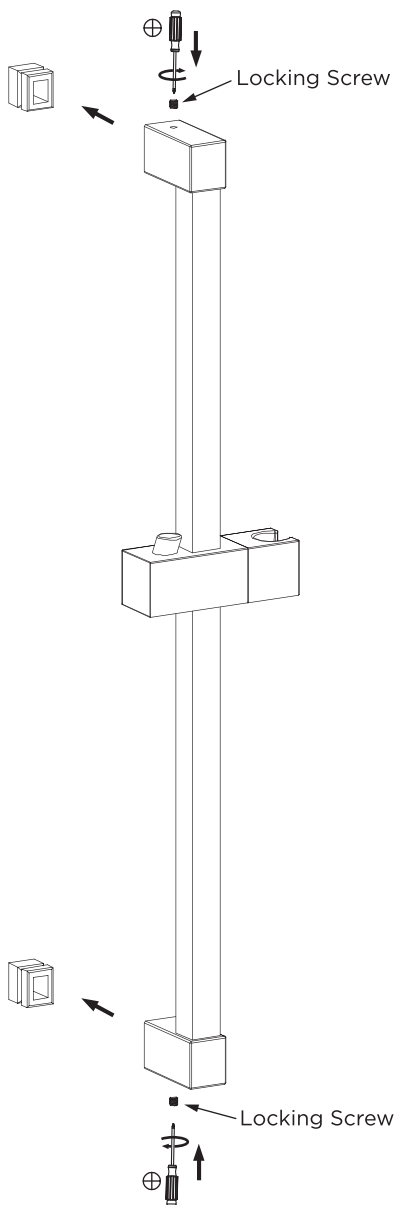

INSTALLATION PROCEDURE


 
5



[09]




[08]

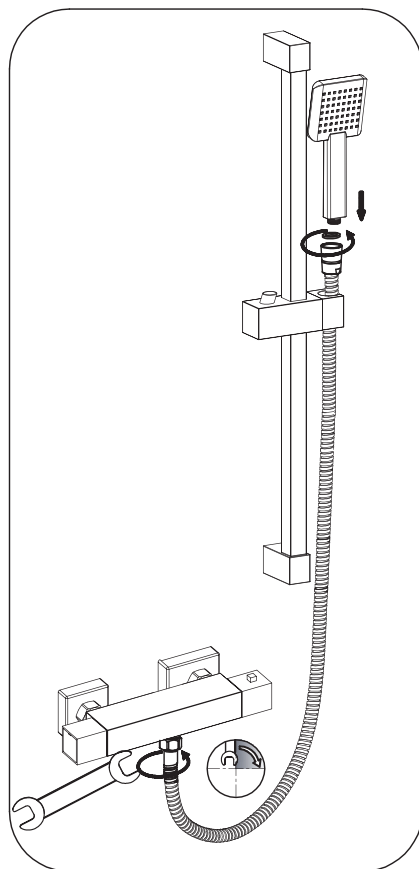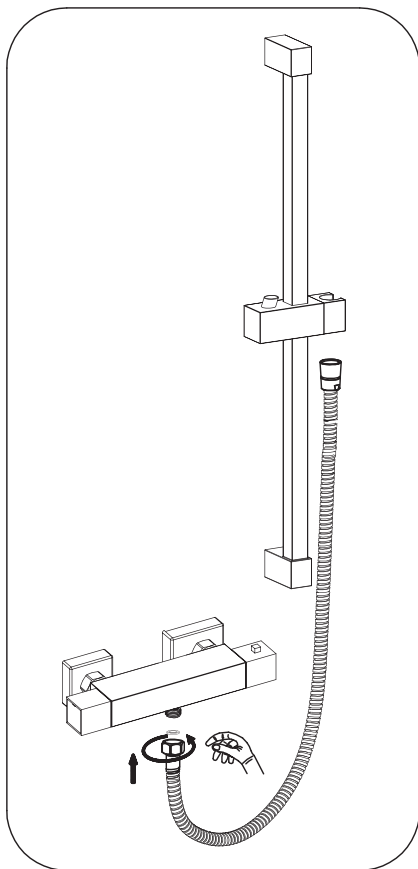


INSTALLATION PROCEDURE

6

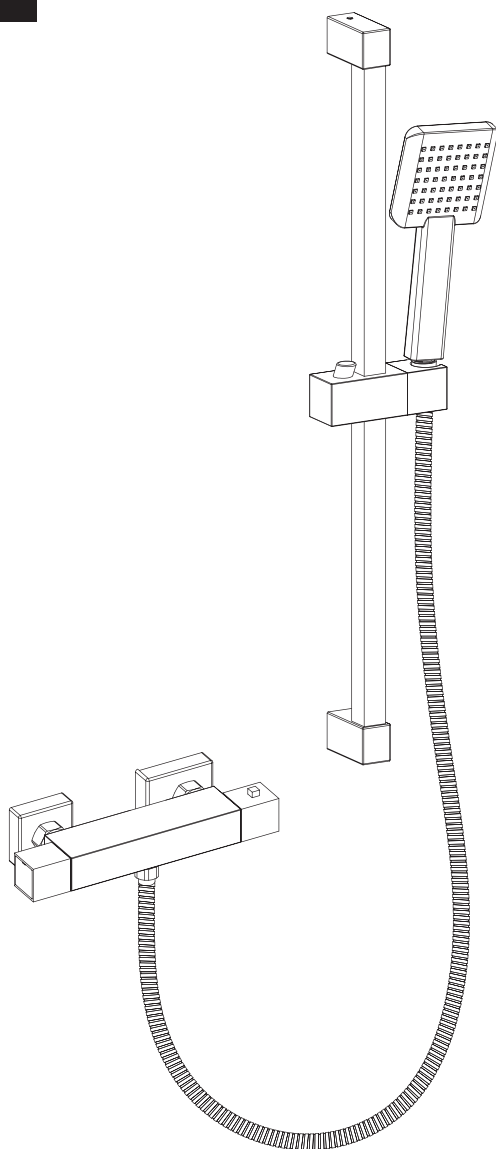


open inlet valve

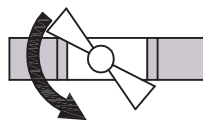

OPERATION

Turn the Flow control handle to turn on and off and to increase/decrease the flow of water. Turn the Temperature control handle to increase/decrease the temperature. Push down on the Override button and turn the handle towards you to override the set temperature.

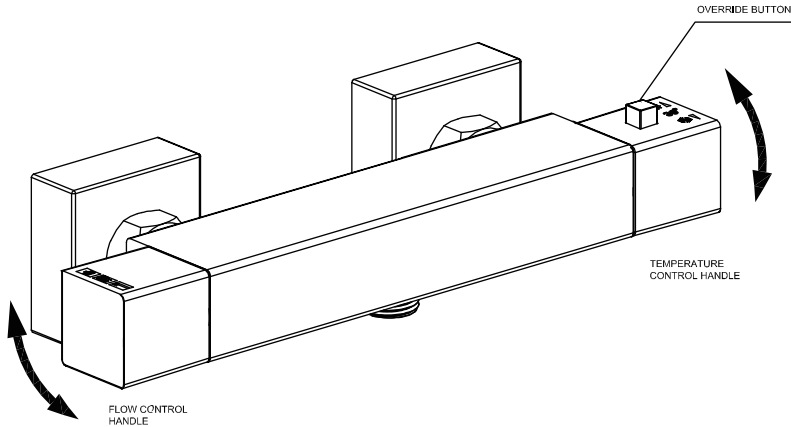


TEMPERATURE SETTING

Removing the handle - pull off the cap and remove the washer & screw, pull off the handle/cover.

Rotate the exposed thermostatic spindle (clockwise for cold, and anti-clockwise for hot) until the maximum desired showering temperature is set (38°C - suggested maximum "pre-set" temperature).

Then line up the button on the top of the handle/cover with the stop on the stop ring itself. Push the handle/cover onto the splines, tighten the screw, refit the cap.

The thermostat is now set to its new temperature and can only be increased or decreased by repeating this process.

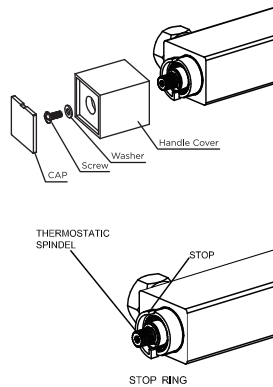

TROUBLE SHOOTING

SYMPTOM	SOLUTION
After installation the shower/bath runs HOT or COLD and will not mix.	Hot and cold supplies are plumbed the wrong way round.
Shower/bath will not run hot enough when first installed.	Maximum temperature needs adjusting, see 'temperature setting'.
Cold water tracking through the valve into the hot water system.	Check and clean the filters.
Very low flow or no flow (gravity).	Check hot and cold feeds (the valve will shut down if either the hot or cold supply fails).

This product should only be fitted by a qualified plumber to NVQ (National Vocational Qualification) or SNVQ (Scottish National Vocational Qualification) Level 3. Should the installation be completed by a non-qualified person then the guarantee may be considered invalid.

For a claim made under our warranty written certification of your installers credentials can be required. For further information or to find a qualified installer in your area please visit the Institute of Plumbers website - www.iphe.org.uk