 


Installation Manual

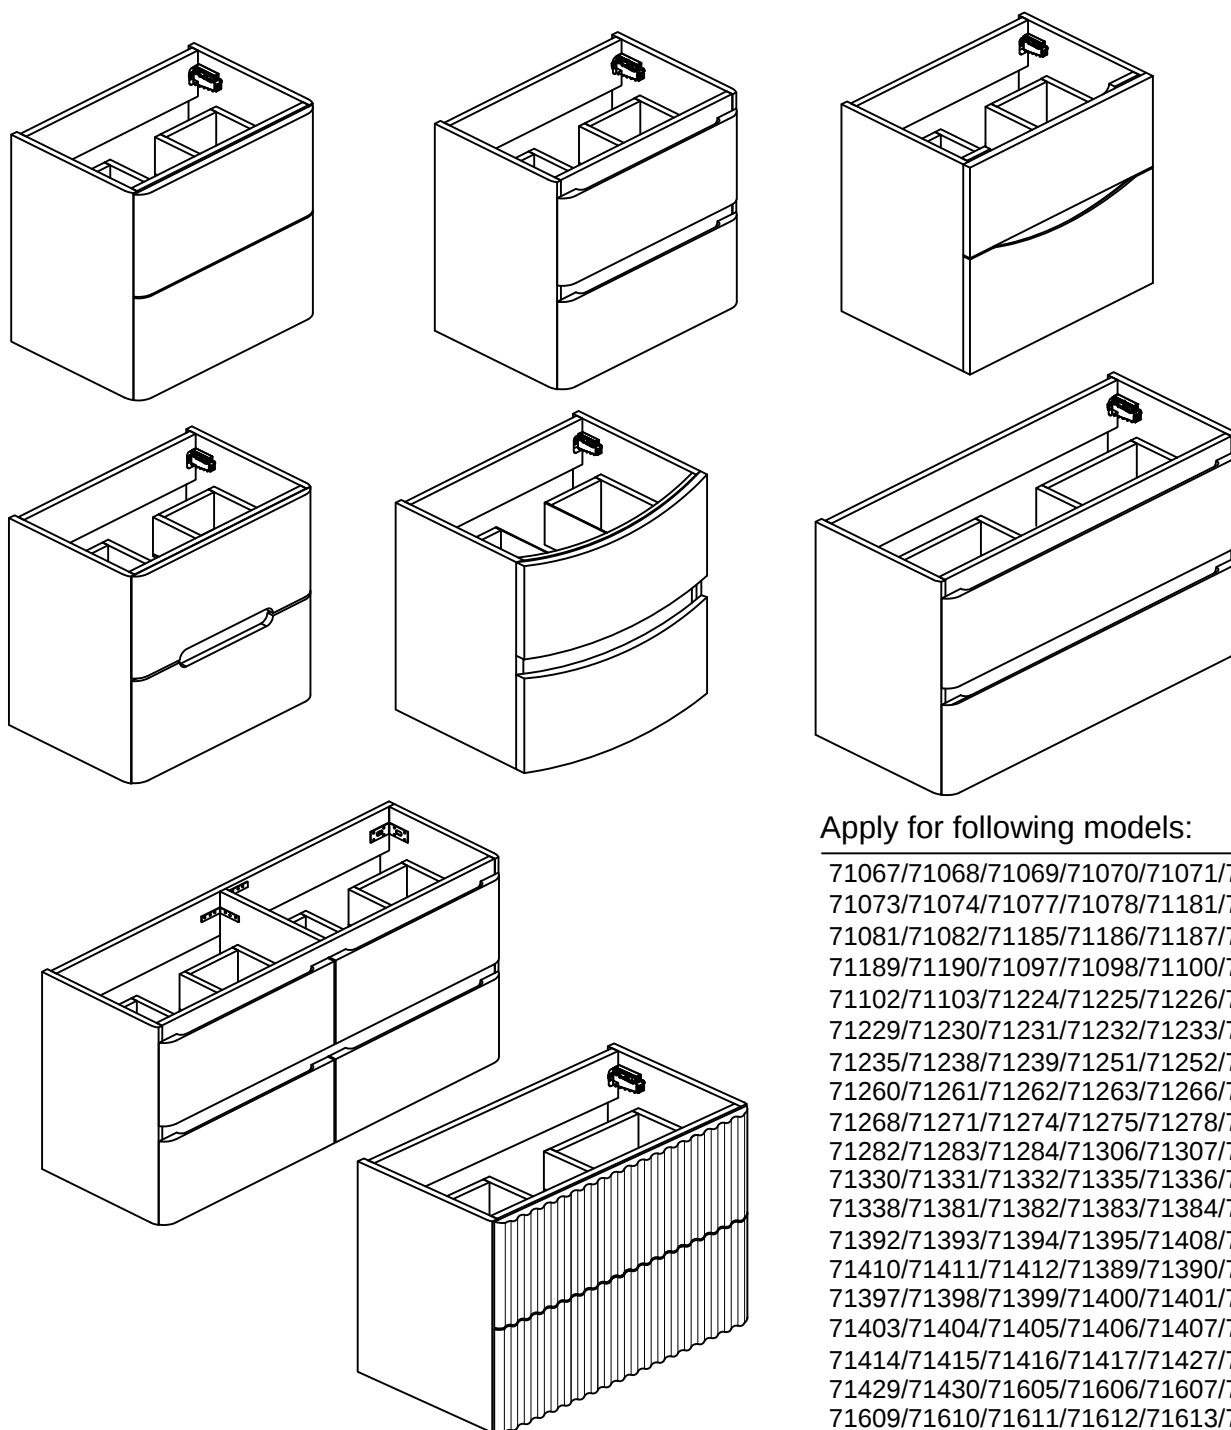

Apply for following models:

71067/71068/71069/71070/71071/71072/
71073/71074/71077/71078/71181/71182/
71081/71082/71185/71186/71187/71188/
71189/71190/71097/71098/71100/71101/
71102/71103/71224/71225/71226/71228/
71229/71230/71231/71232/71233/71234/
71235/71238/71239/71251/71252/71259/
71260/71261/71262/71263/71266/71267/
71268/71271/71274/71275/71278/71281/
71282/71283/71284/71306/71307/71308/
71330/71331/71332/71335/71336/71337/
71338/71381/71382/71383/71384/71391/
71392/71393/71394/71395/71408/71409/
71410/71411/71412/71389/71390/71396/
71397/71398/71399/71400/71401/71402/
71403/71404/71405/71406/71407/71413/
71414/71415/71416/71417/71427/71428/
71429/71430/71605/71606/71607/71608/
71609/71610/71611/71612/71613/71614/
71615/71616/71617/71618/71619/71620/

Please keep this page for your online registration.

No. FIFUMCU013V7.0

 





Do not place unit near where it is susceptible to be in contact with water, such as Bathtub or Shower Enclosure.

Do not place unit in Zone 1 or Zone 2.


Dry unit with a cloth after every use.

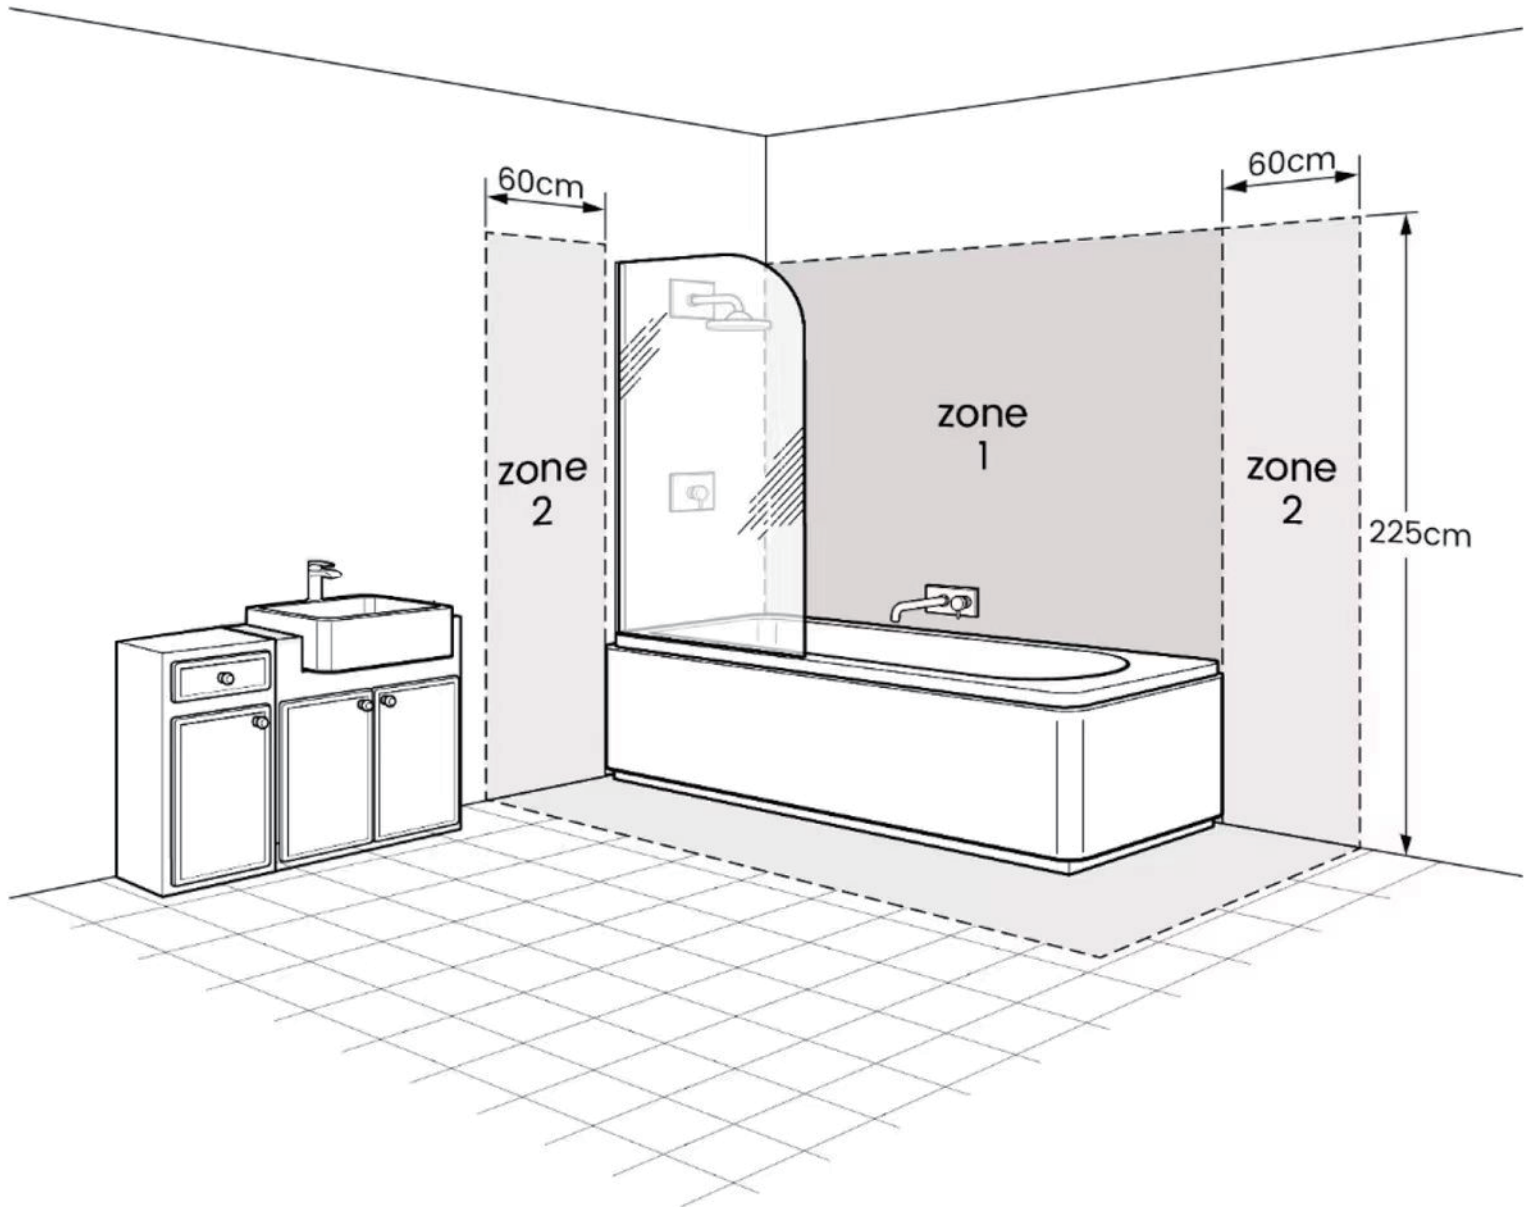

Tools required(Tools not provided)

 


Spirit Level

 



Hammer



 Pencil




Screw Driver

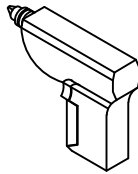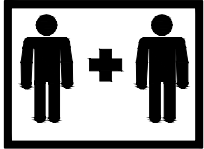  

Electric Drill




 
Drill Bit

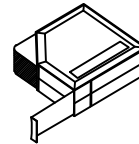




Tape

Important information Please read carefully.Keep this information for further reference.Serious or fatal crushing injuries can occur if furniture is not secured correctly.To prevent furniture from tipping over it must be permanently fixed to the wall.

  Fittings for the wall are not included since different wall materials require different types of fittings.Use fittings suitable for the walls in your home.For advice on suitable fittings,contact your local dealer.

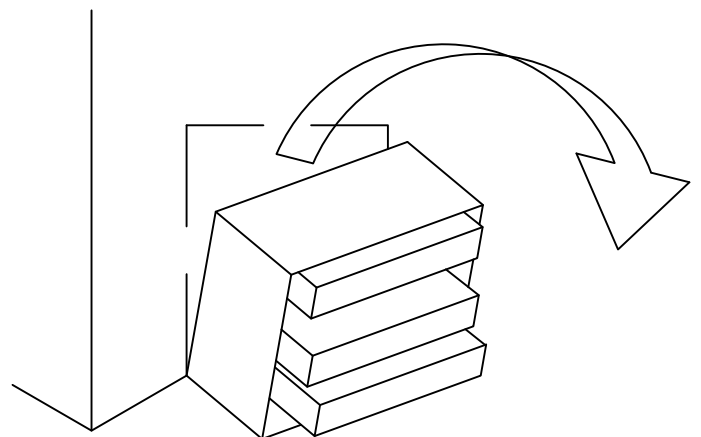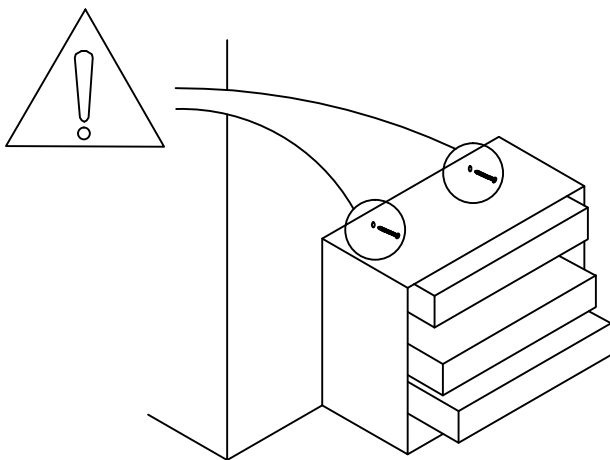


Gap Adjustment

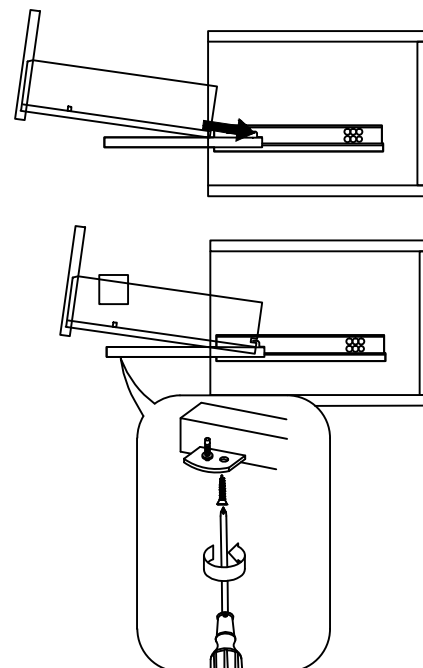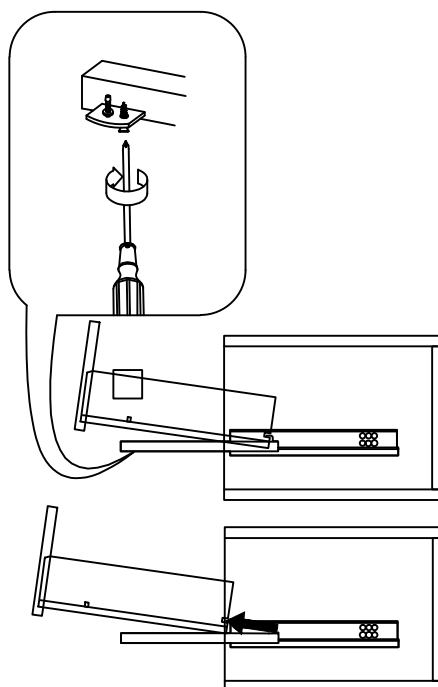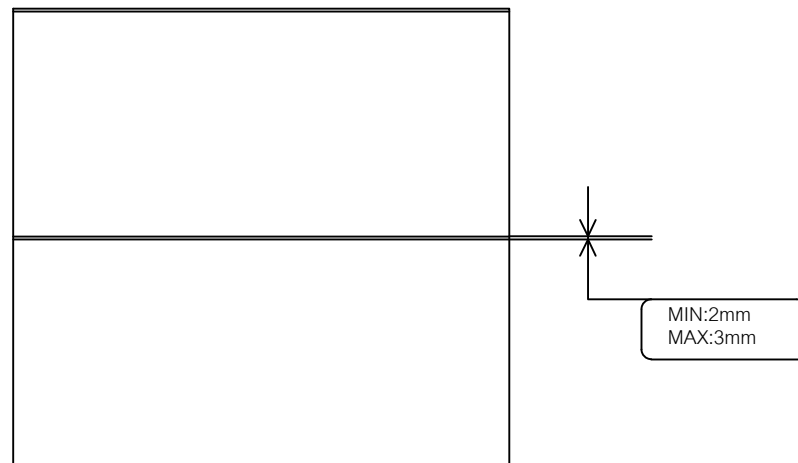   

01


Please note - wall fixings are not supplied
These can be purchased from a local DIY store

 71067/71068/71073/71074/71097/71098/71251/71271

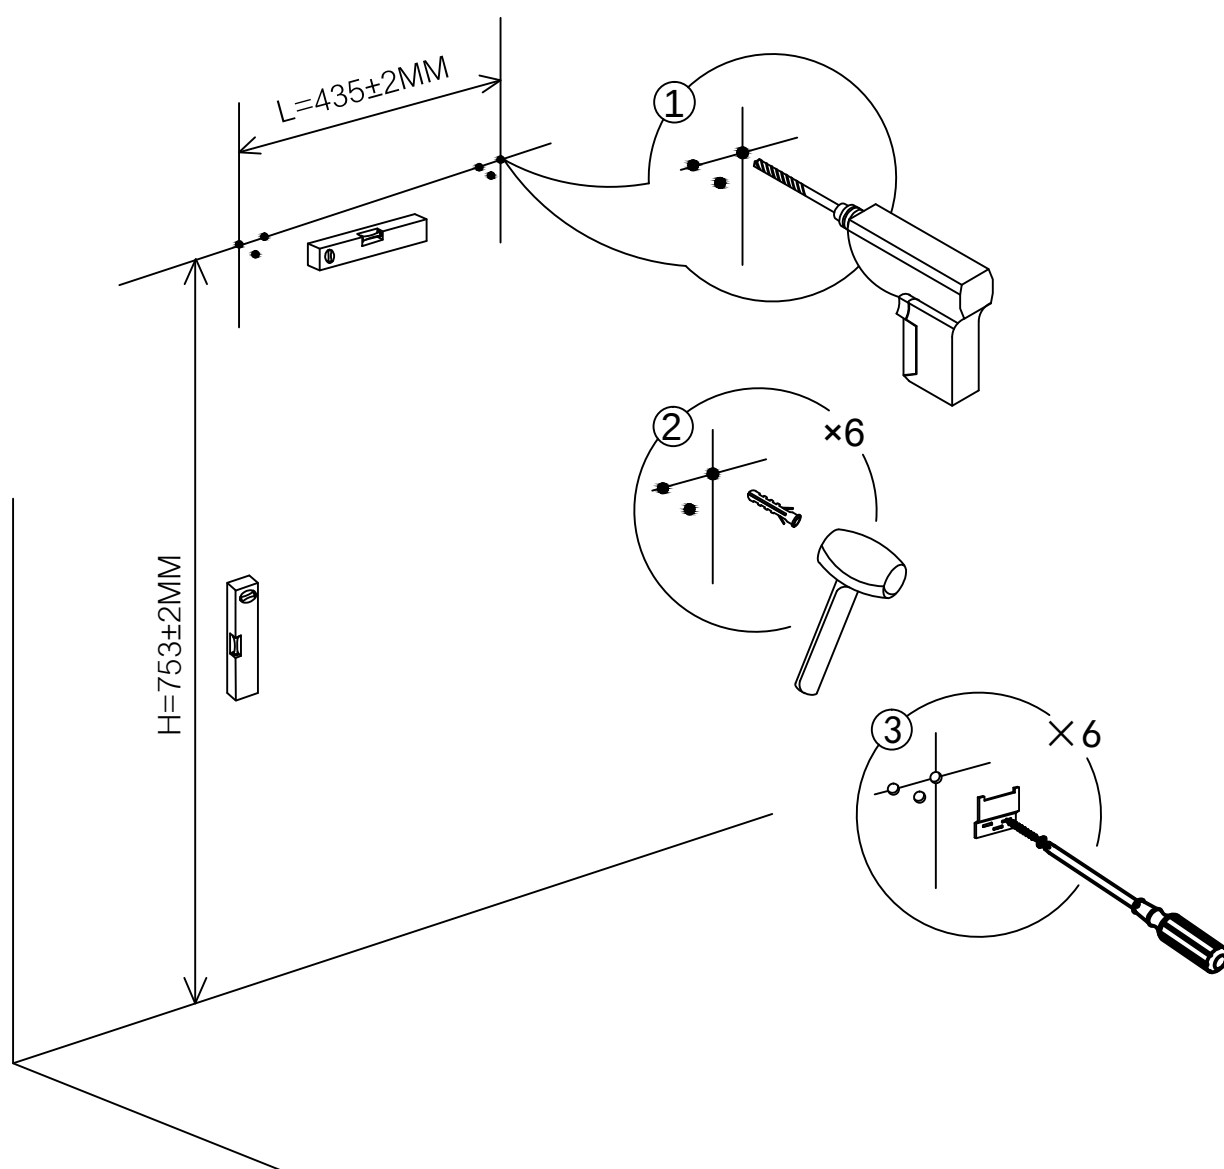


Please note - wall fixings are not supplied
These can be purchased from a local DIY store

 71185/71186/71224/71228/71229/71266/71306/71307/71427/

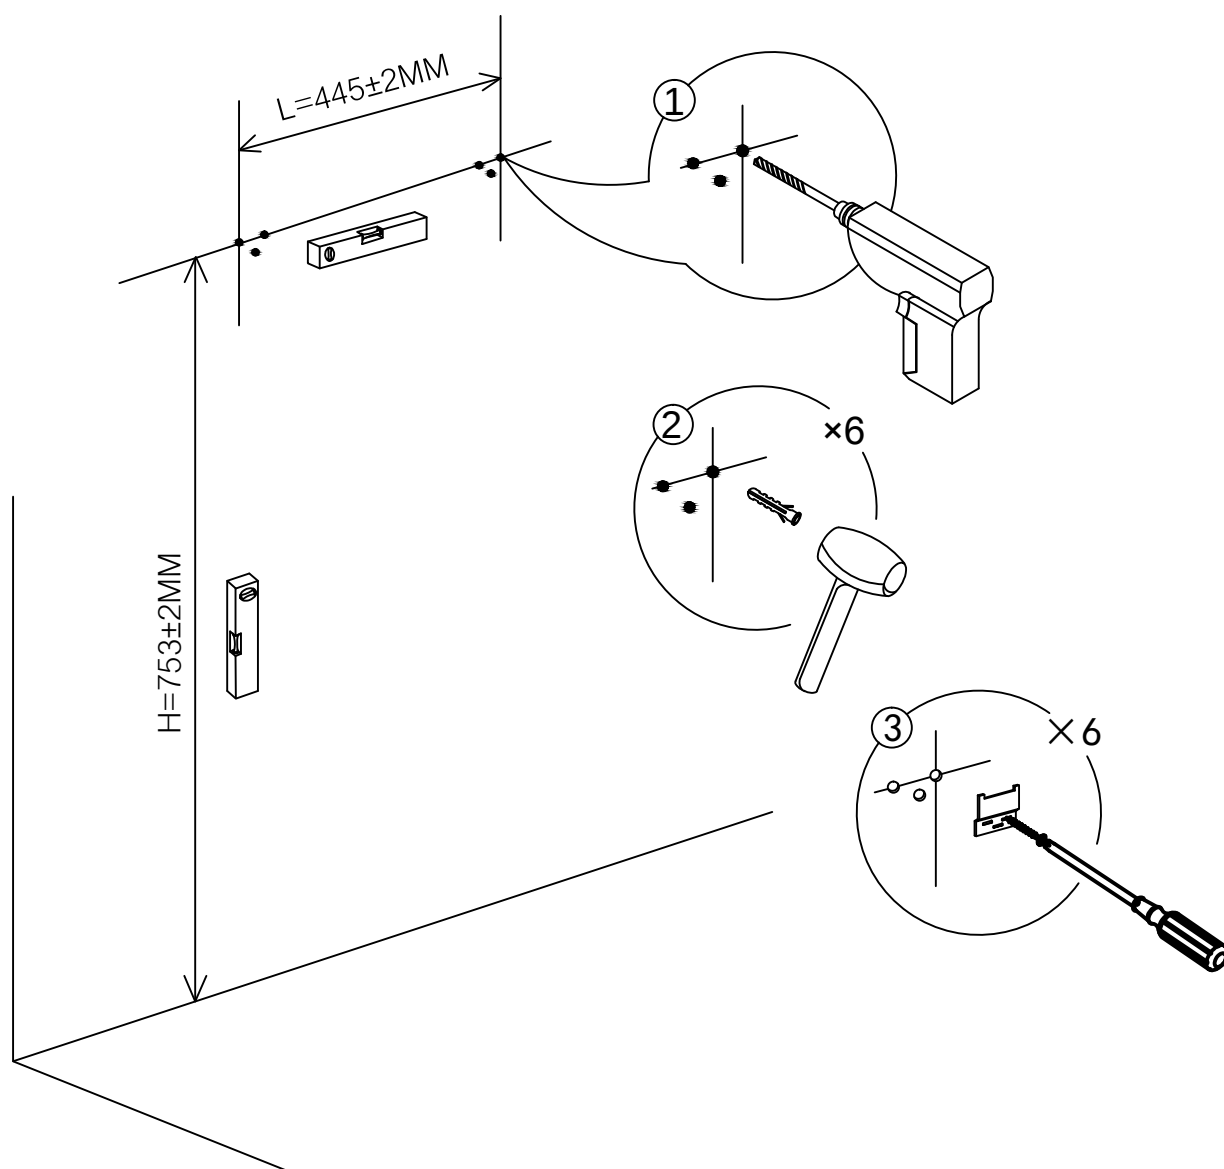


Please note - wall fixings are not supplied
These can be purchased from a local DIY store

 71069/71070/71077/71078/71181/71182/71100/71101/
71259/71260/71274/71275/71335/71336/71337/71338/
71398/71399/71400/71401/71402/71605/71606/71607/
71608/71609/

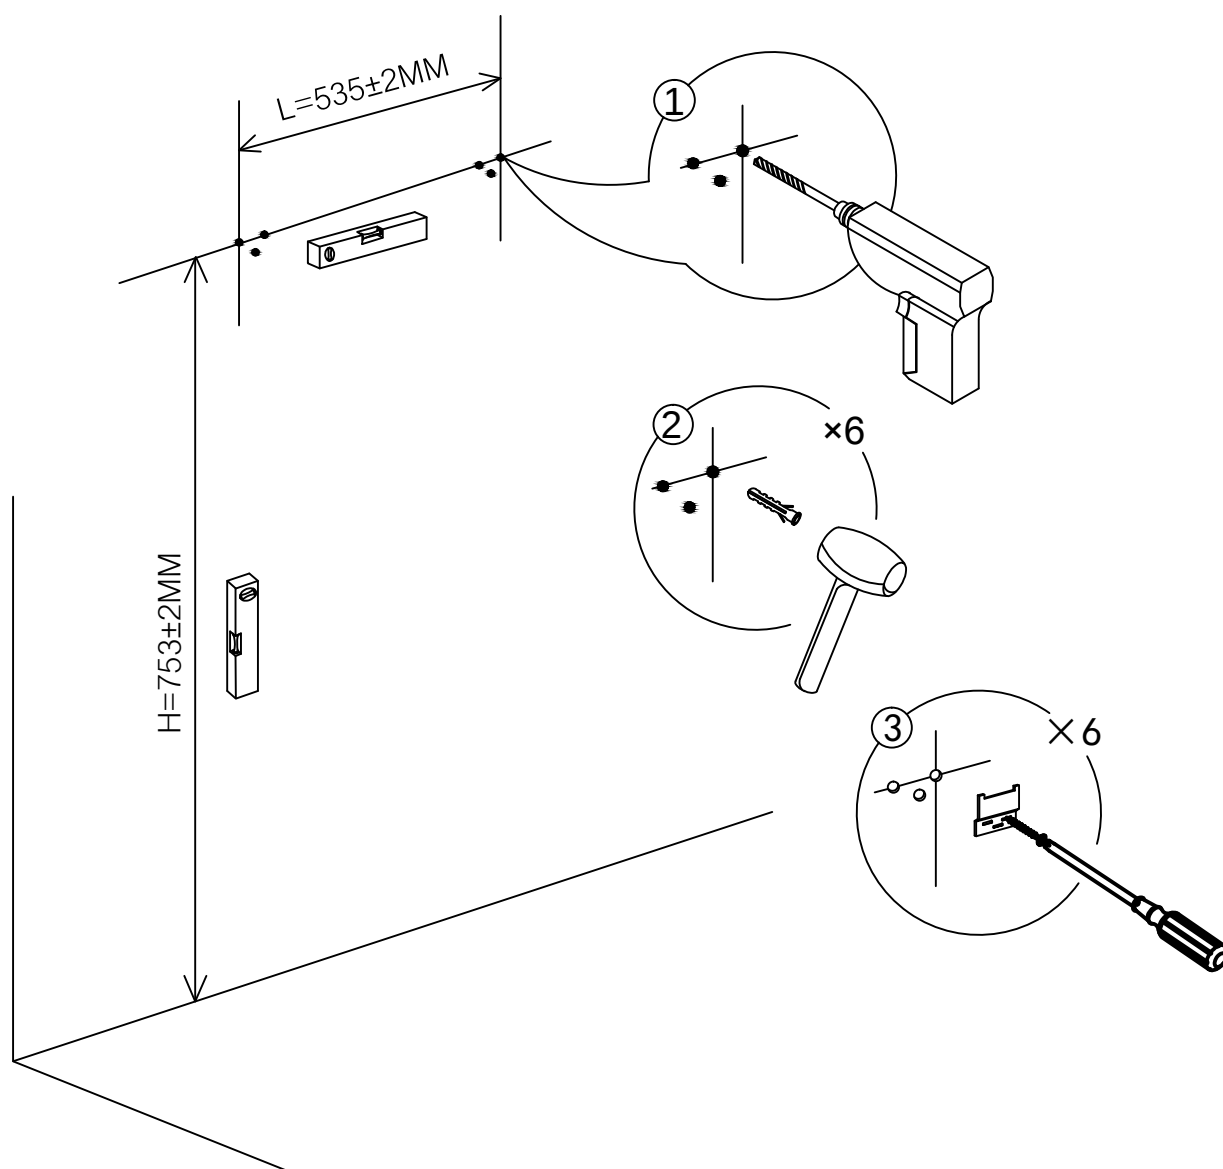


Please note - wall fixings are not supplied
These can be purchased from a local DIY store

 71187/71188/71225/71230/71231/71234/71235/71261/71262
71267/71389/71396/71428/

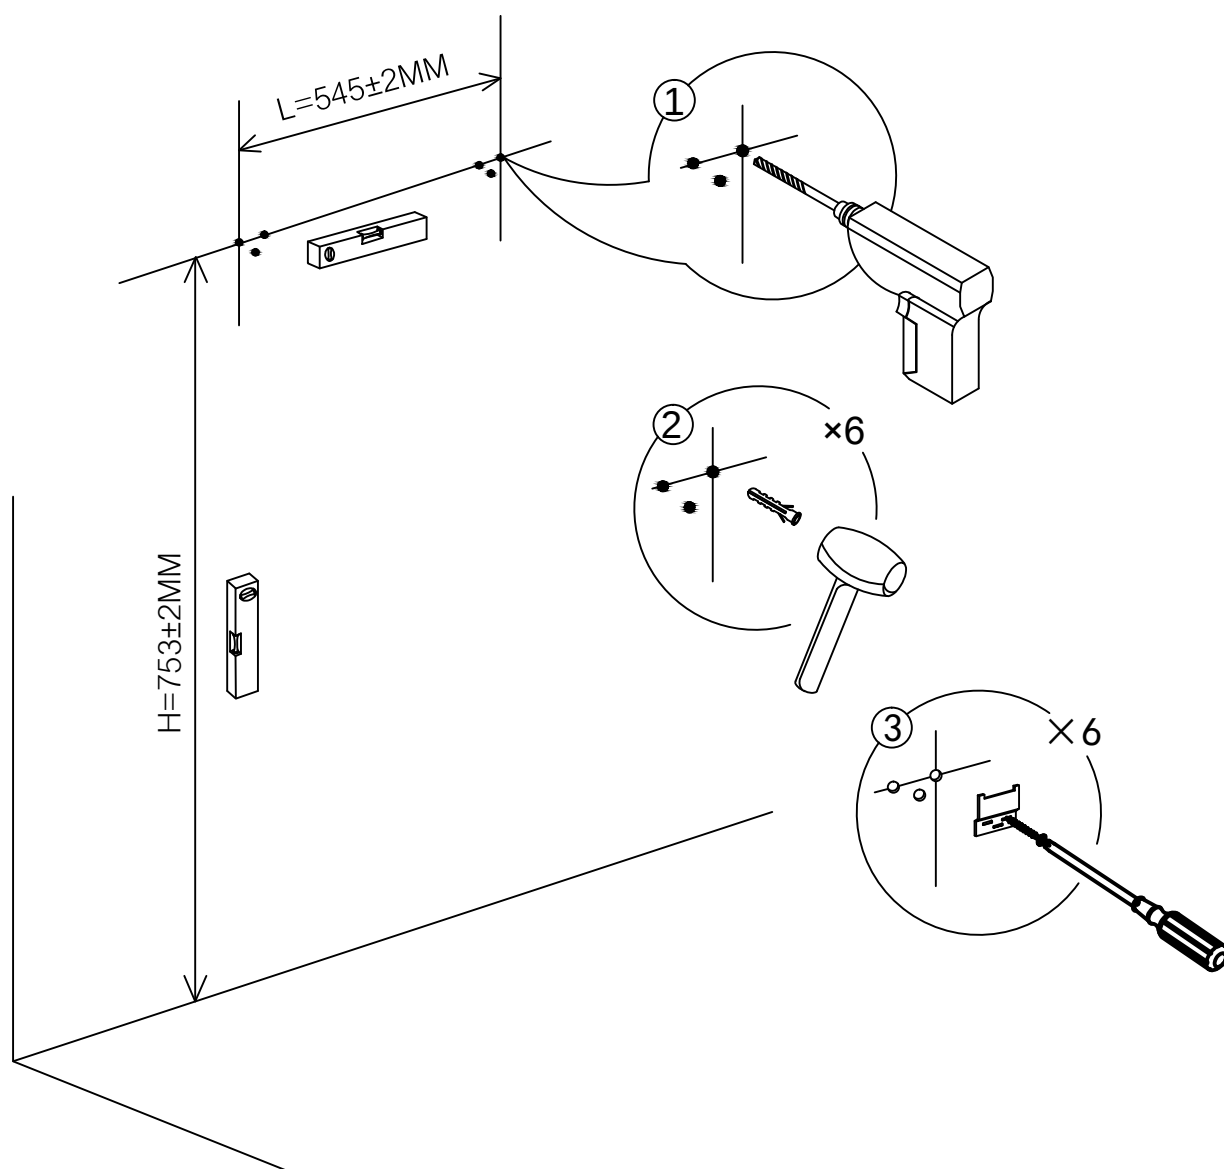


Please note - wall fixings are not supplied
These can be purchased from a local DIY store

 71071/71072/71081/71082/71102/71103/71232/71233/71252/
71263/71268/71278/71308/71330/71331/71332/71390/71397/
71403/71404/71405/71406/71407/71429/71610/71611/71612/
71613/71614/

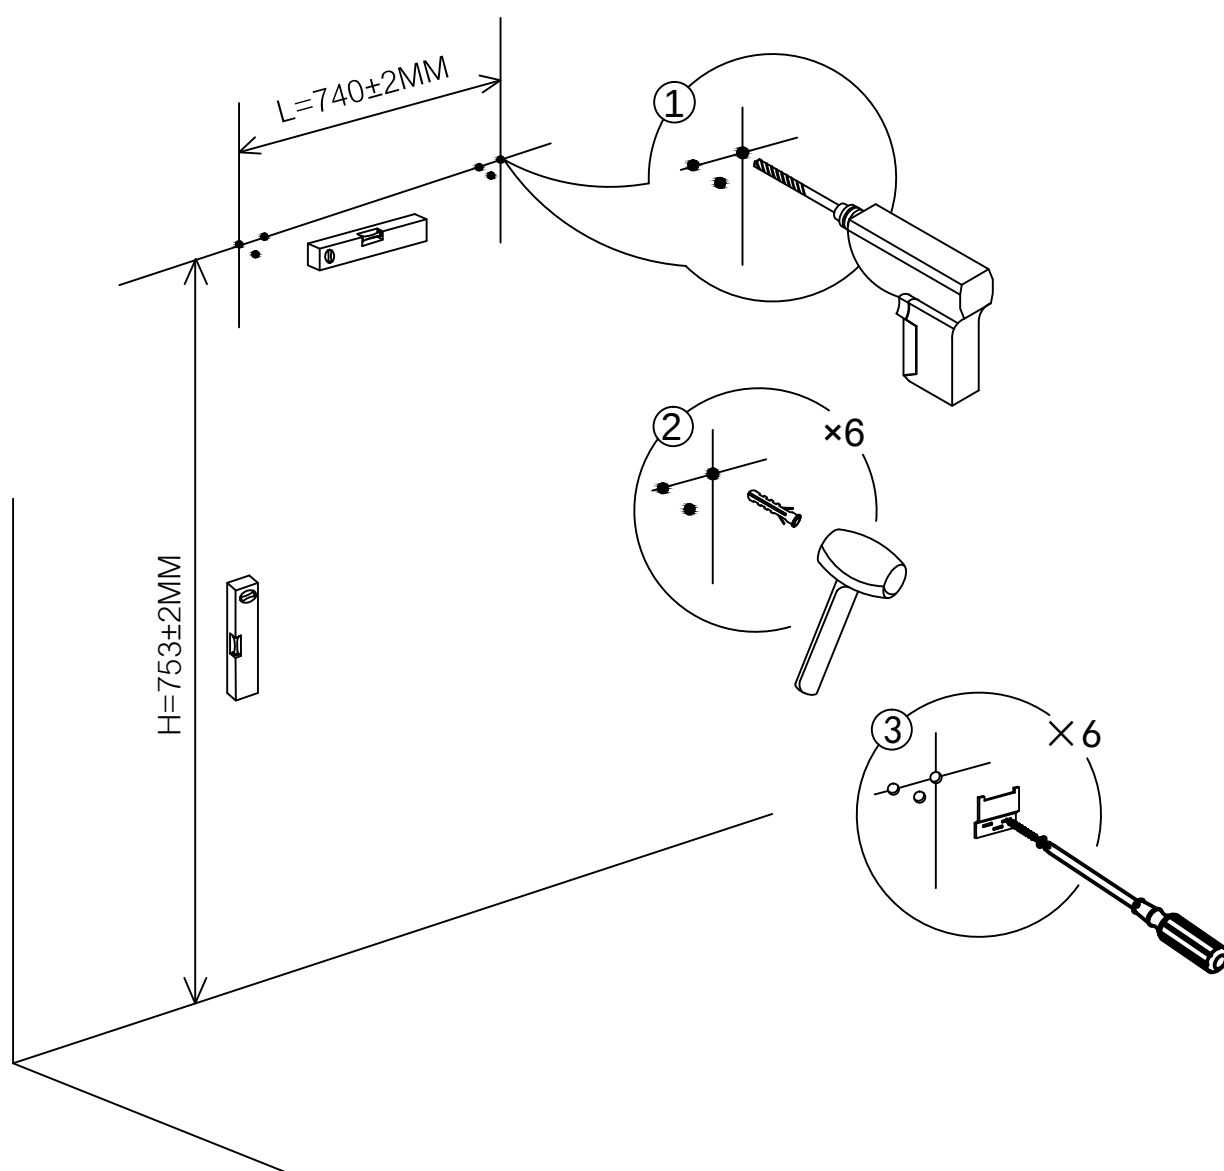

Please note - wall fixings are not supplied
These can be purchased from a local DIY store

 
71189/71190/71226/71238/71239

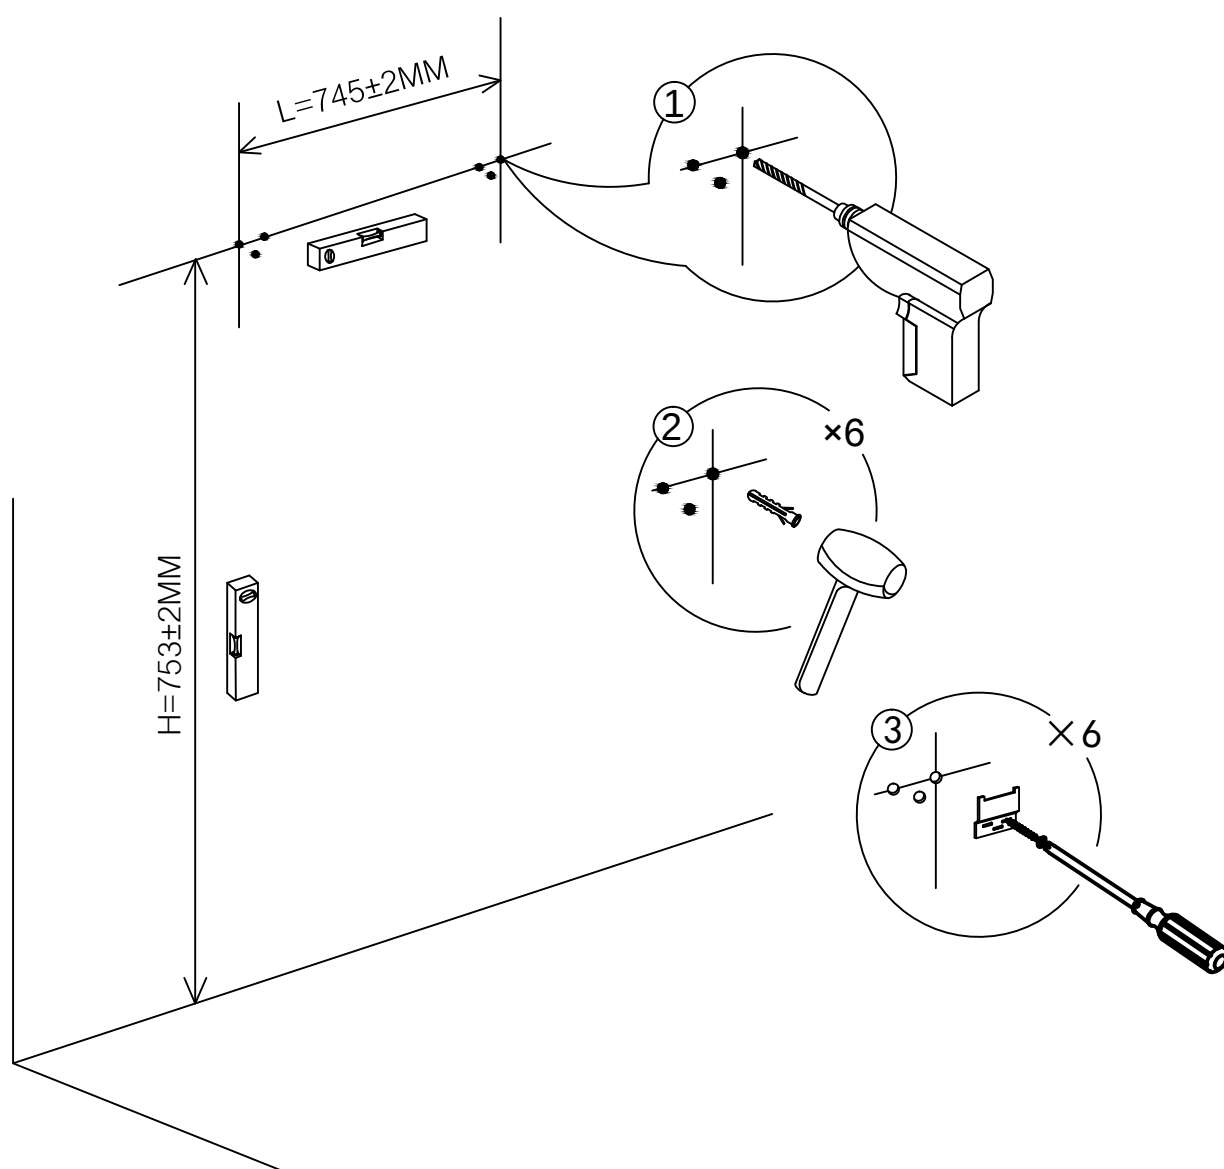

07


Please note - wall fixings are not supplied
These can be purchased from a local DIY store

 71381/71382/71383/71384/71391/71392/71393/71394/
71395/71408/71409/71410/71411/71412/71430/71615/
71616/71617/

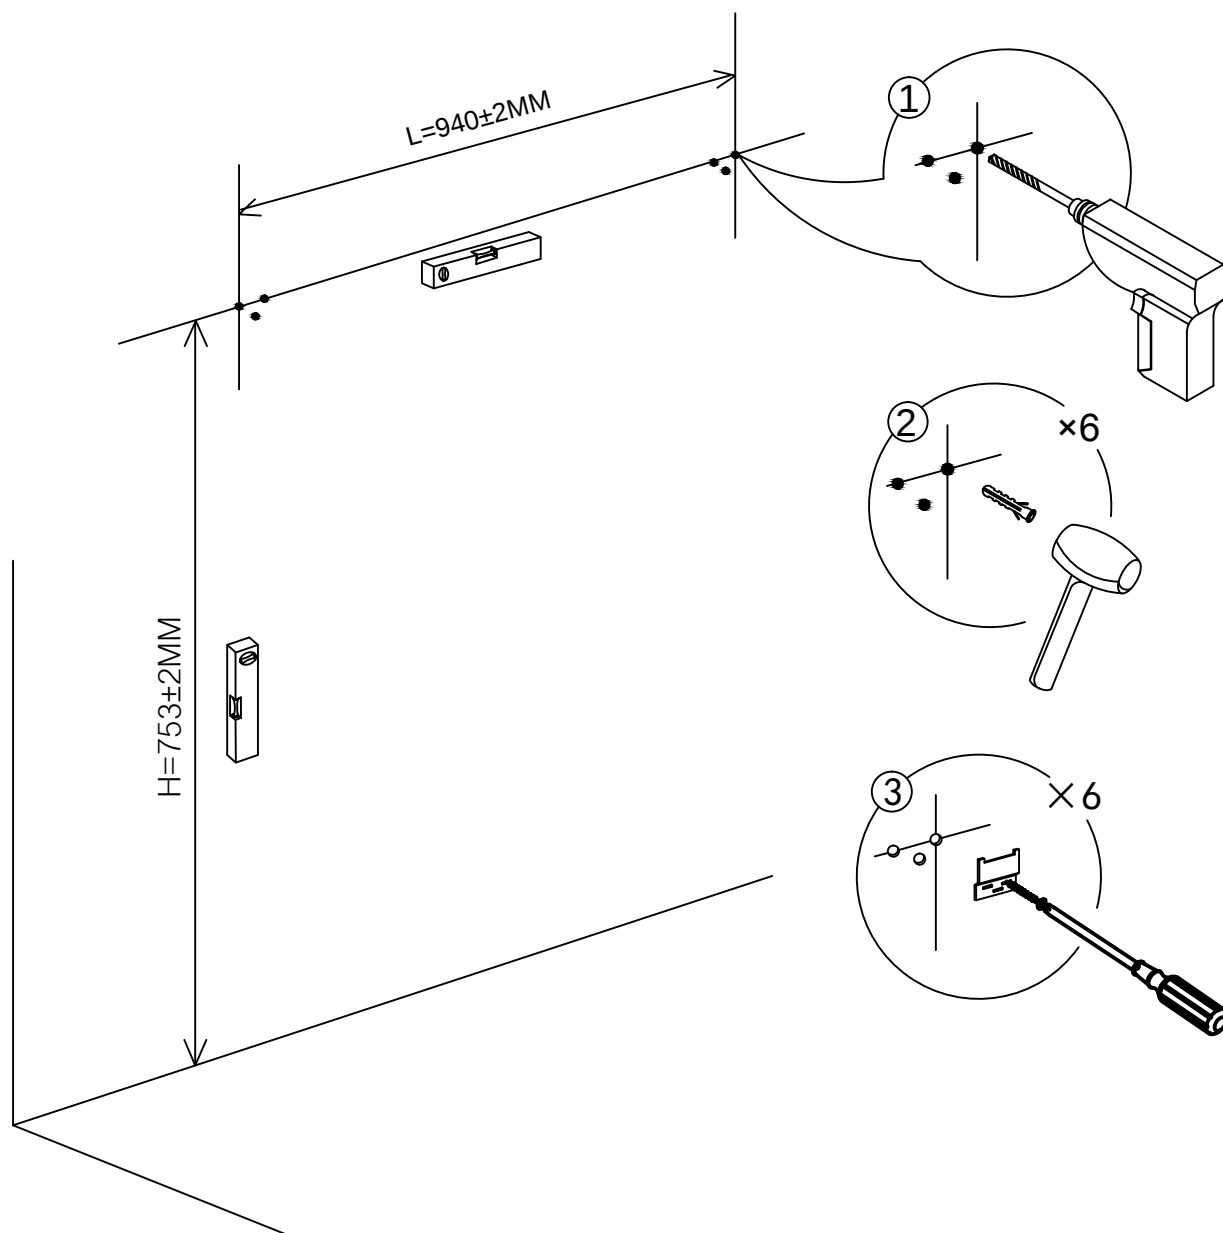

Please note - wall fixings are not supplied
These can be purchased from a local DIY store

 
71281/71282/71283/71284/71413/71414/71415/71416/71417

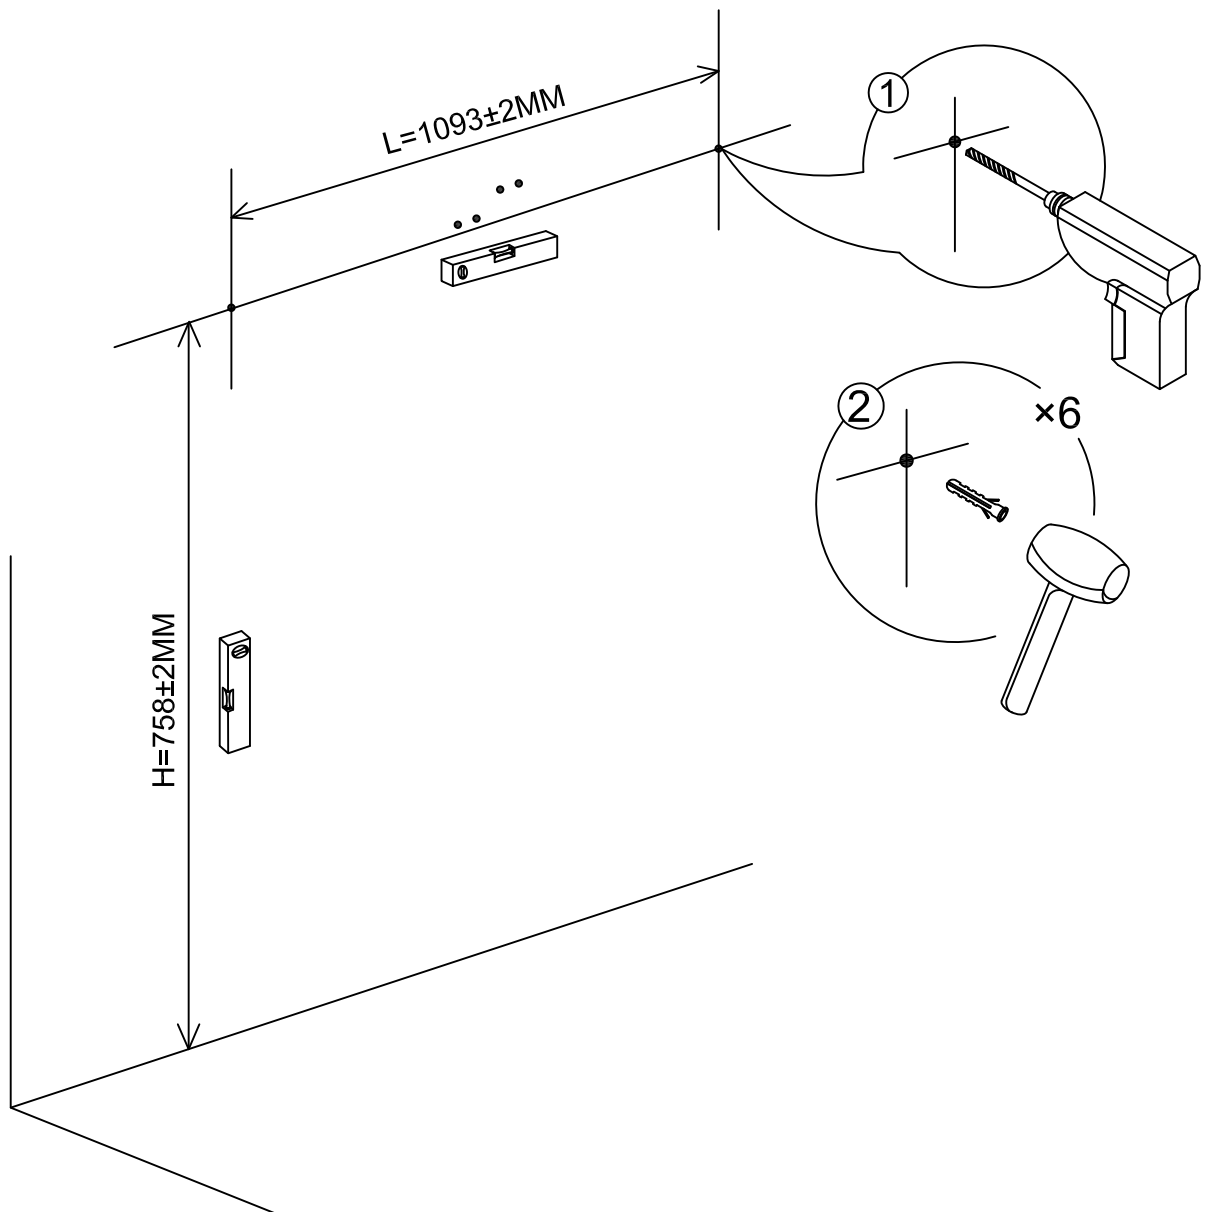


09

Please note - wall fixings are not supplied
These can be purchased from a local DIY store

 
71618/71619/71620/

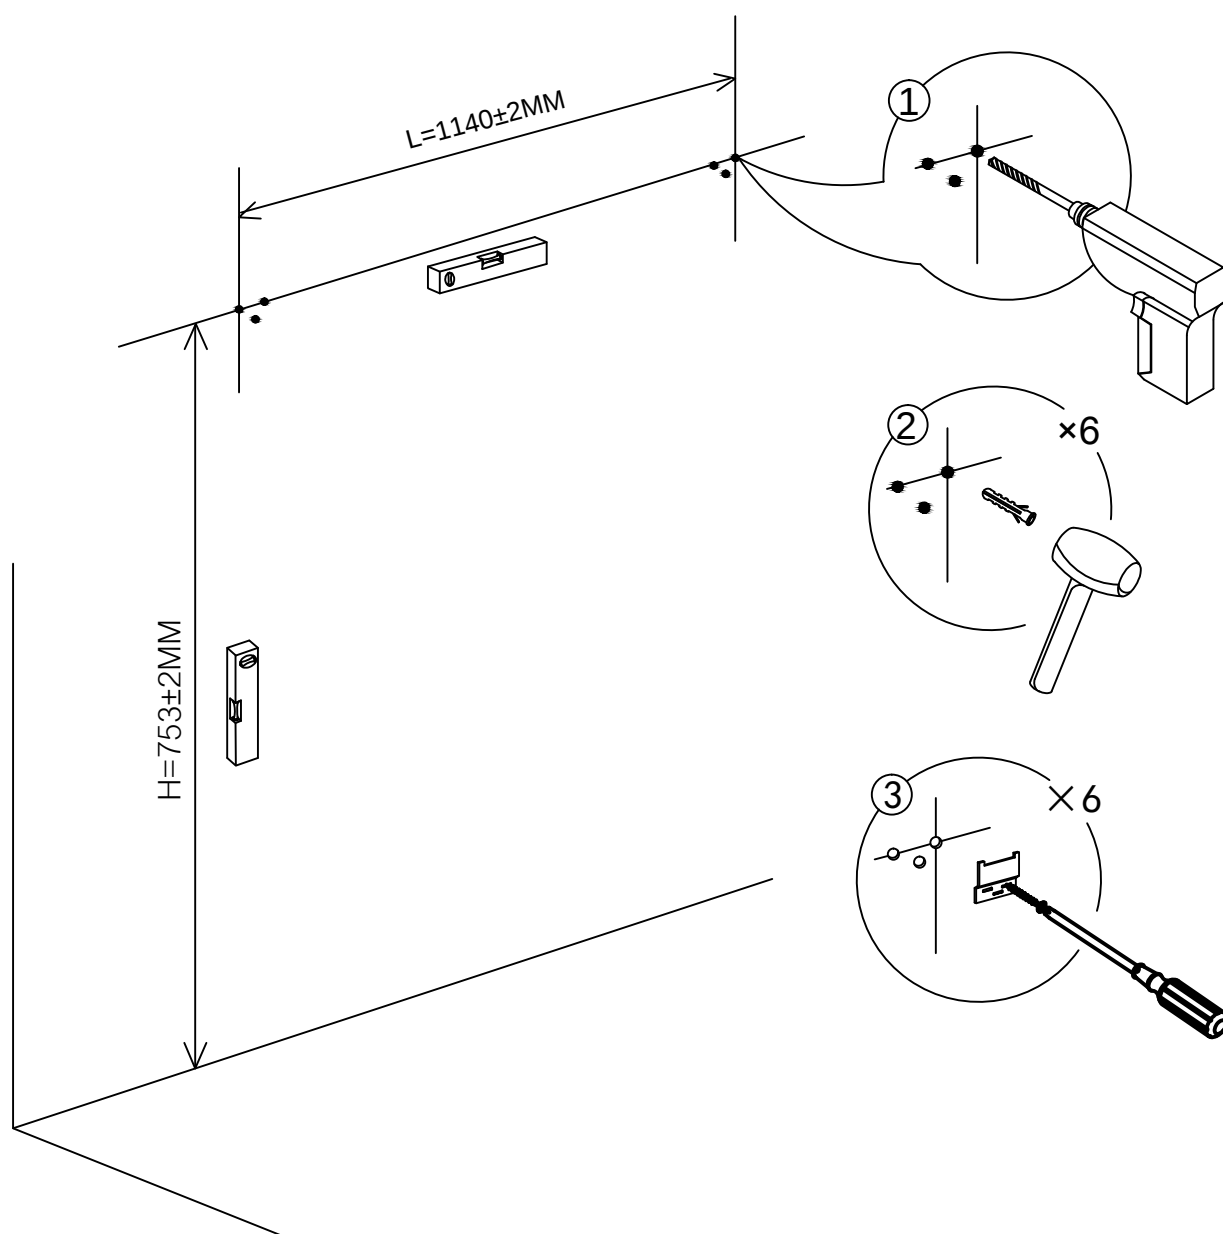

10

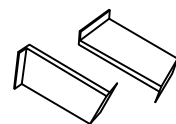 


1PC

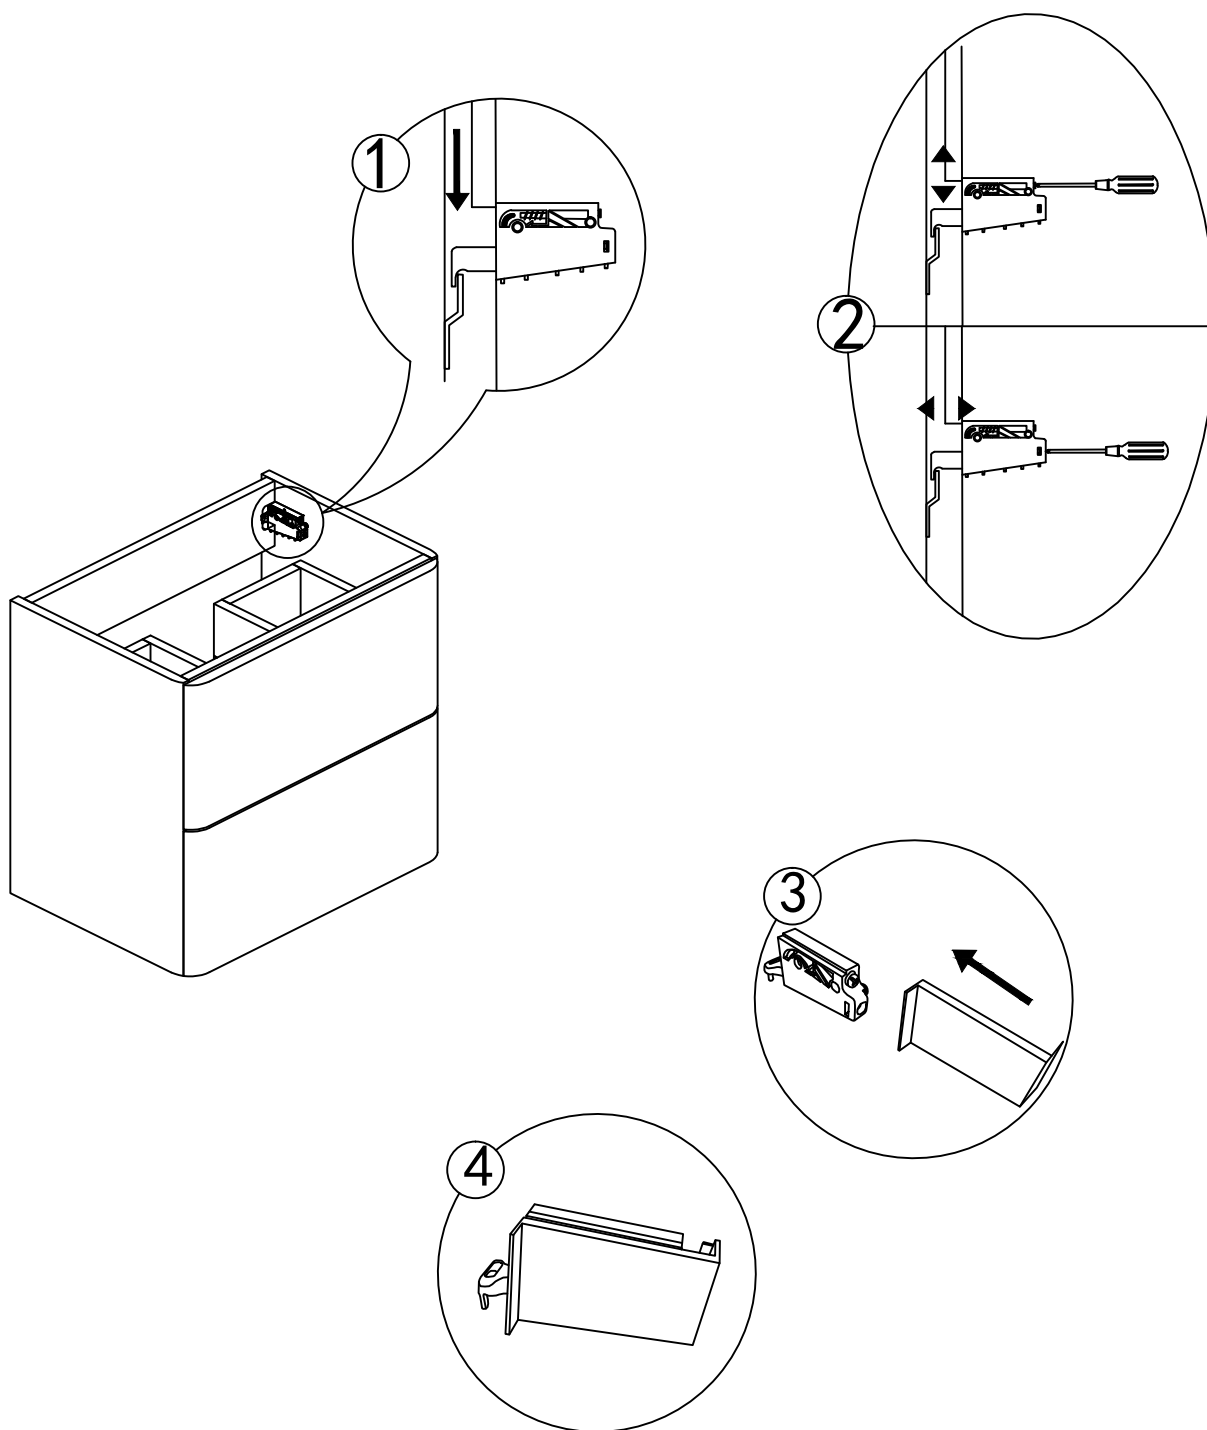 

11


Please note - wall fixings are not supplied
These can be purchased from a local DIY store

 71281/71282/71283/71284/71413/71414/71415/71416/71417

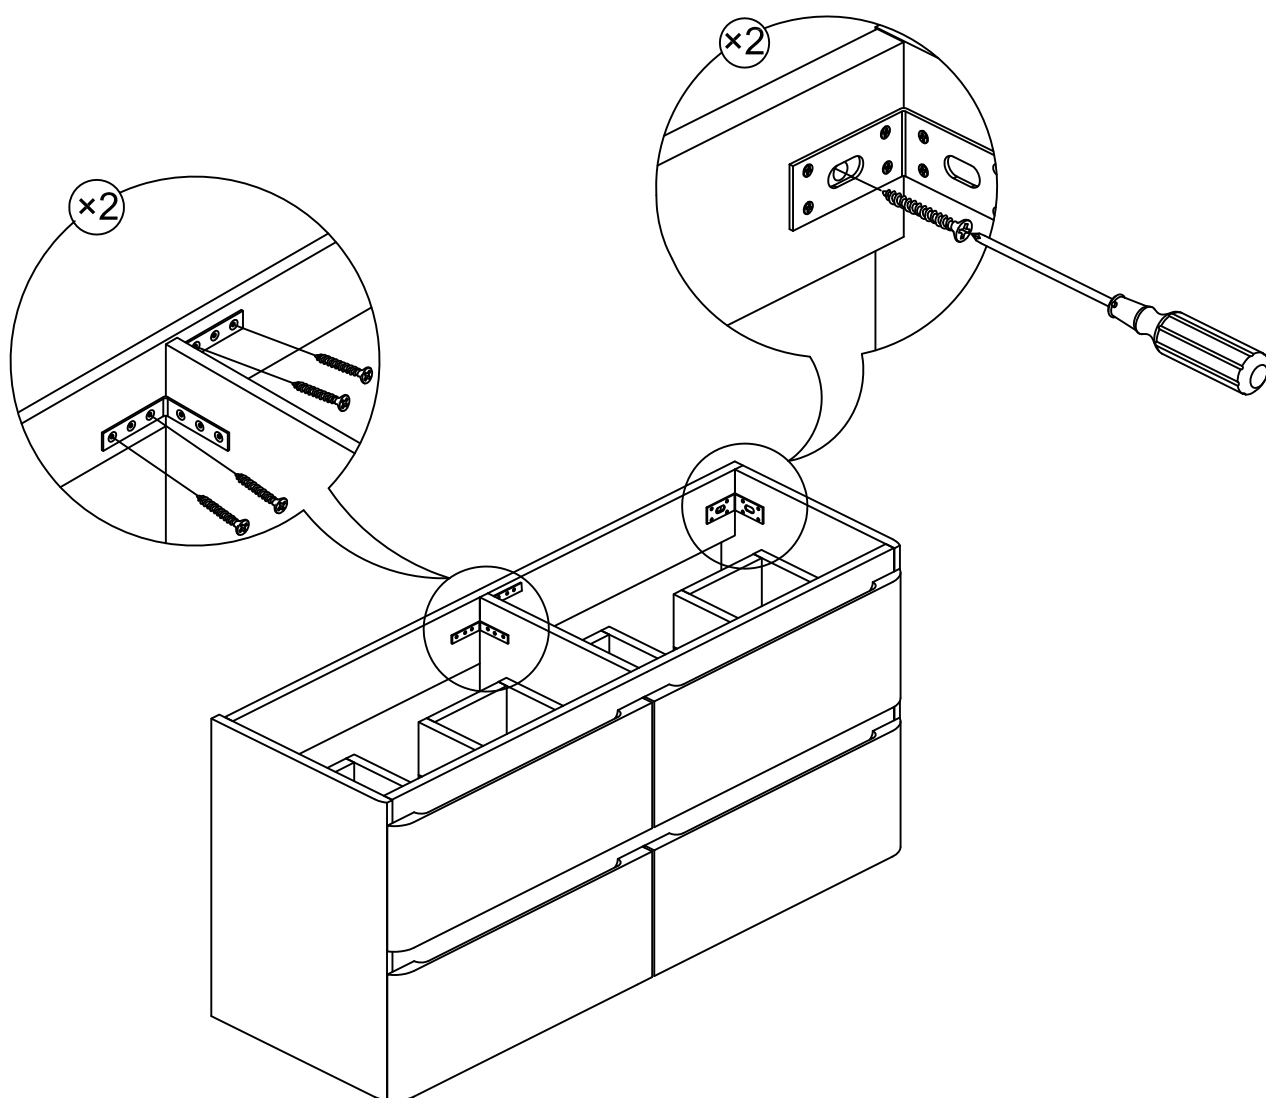


Please note - wall fixings are not supplied
These can be purchased from a local DIY store

 
71618/71619/71620/

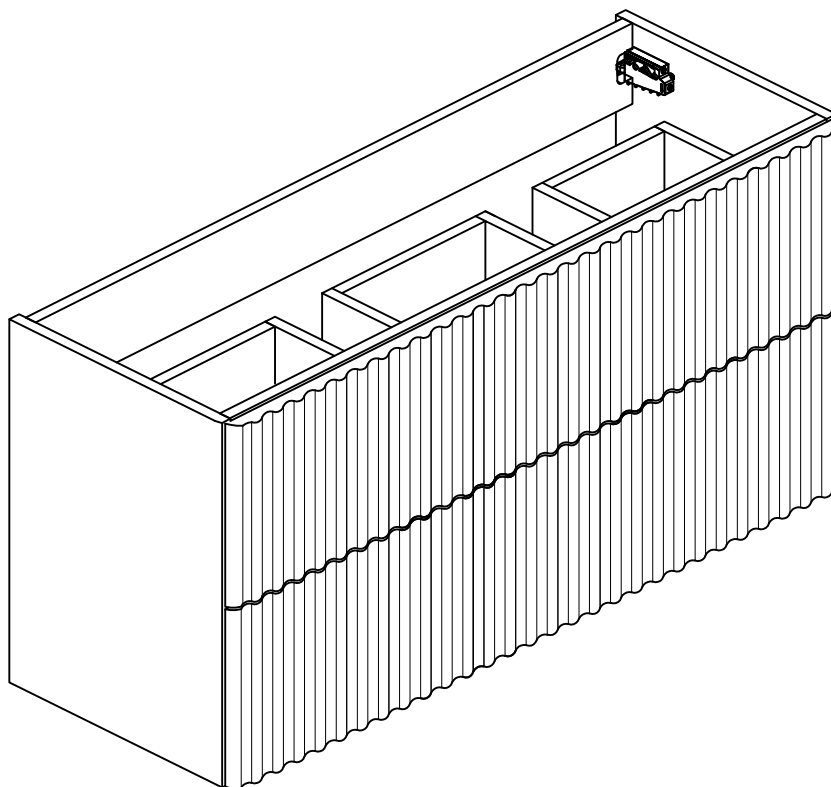


Adjustment

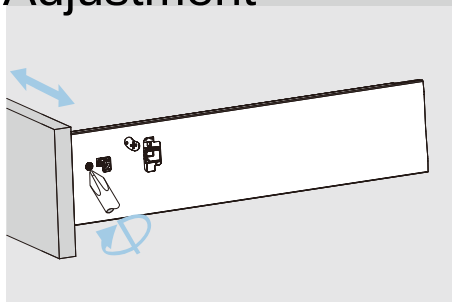 

Left&right adjustment

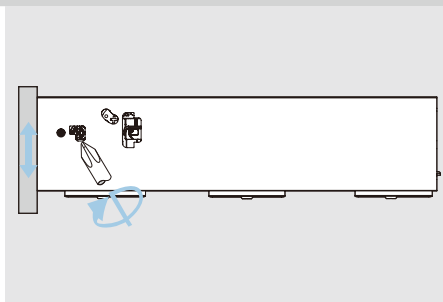 


Up&down adjustment

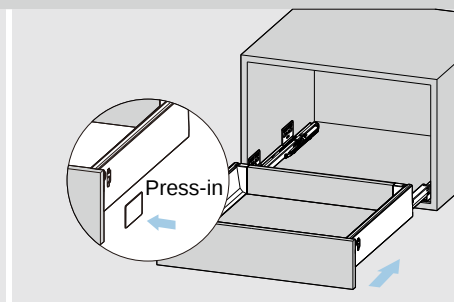 


Slide into the cabinet

 
Removal

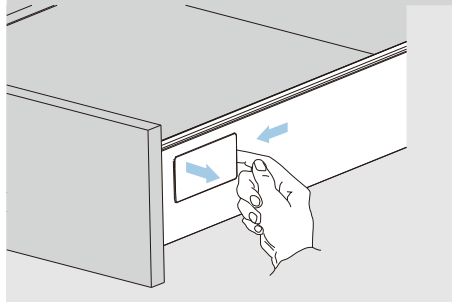

Tip up the cover and pull out

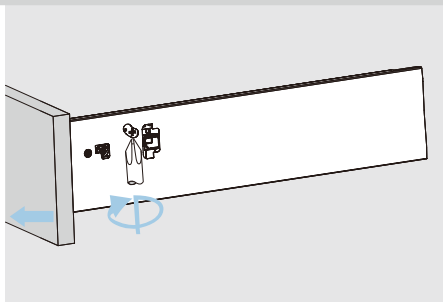 


 Turn screw driver to release the drawer front

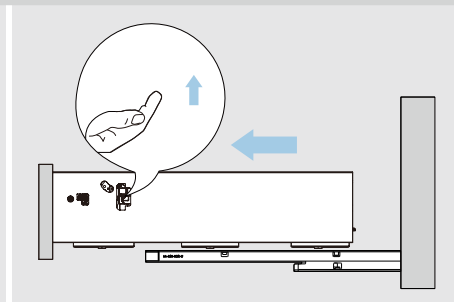



Lift the release handle,hold it and pull out the drawer

 
13



1PC

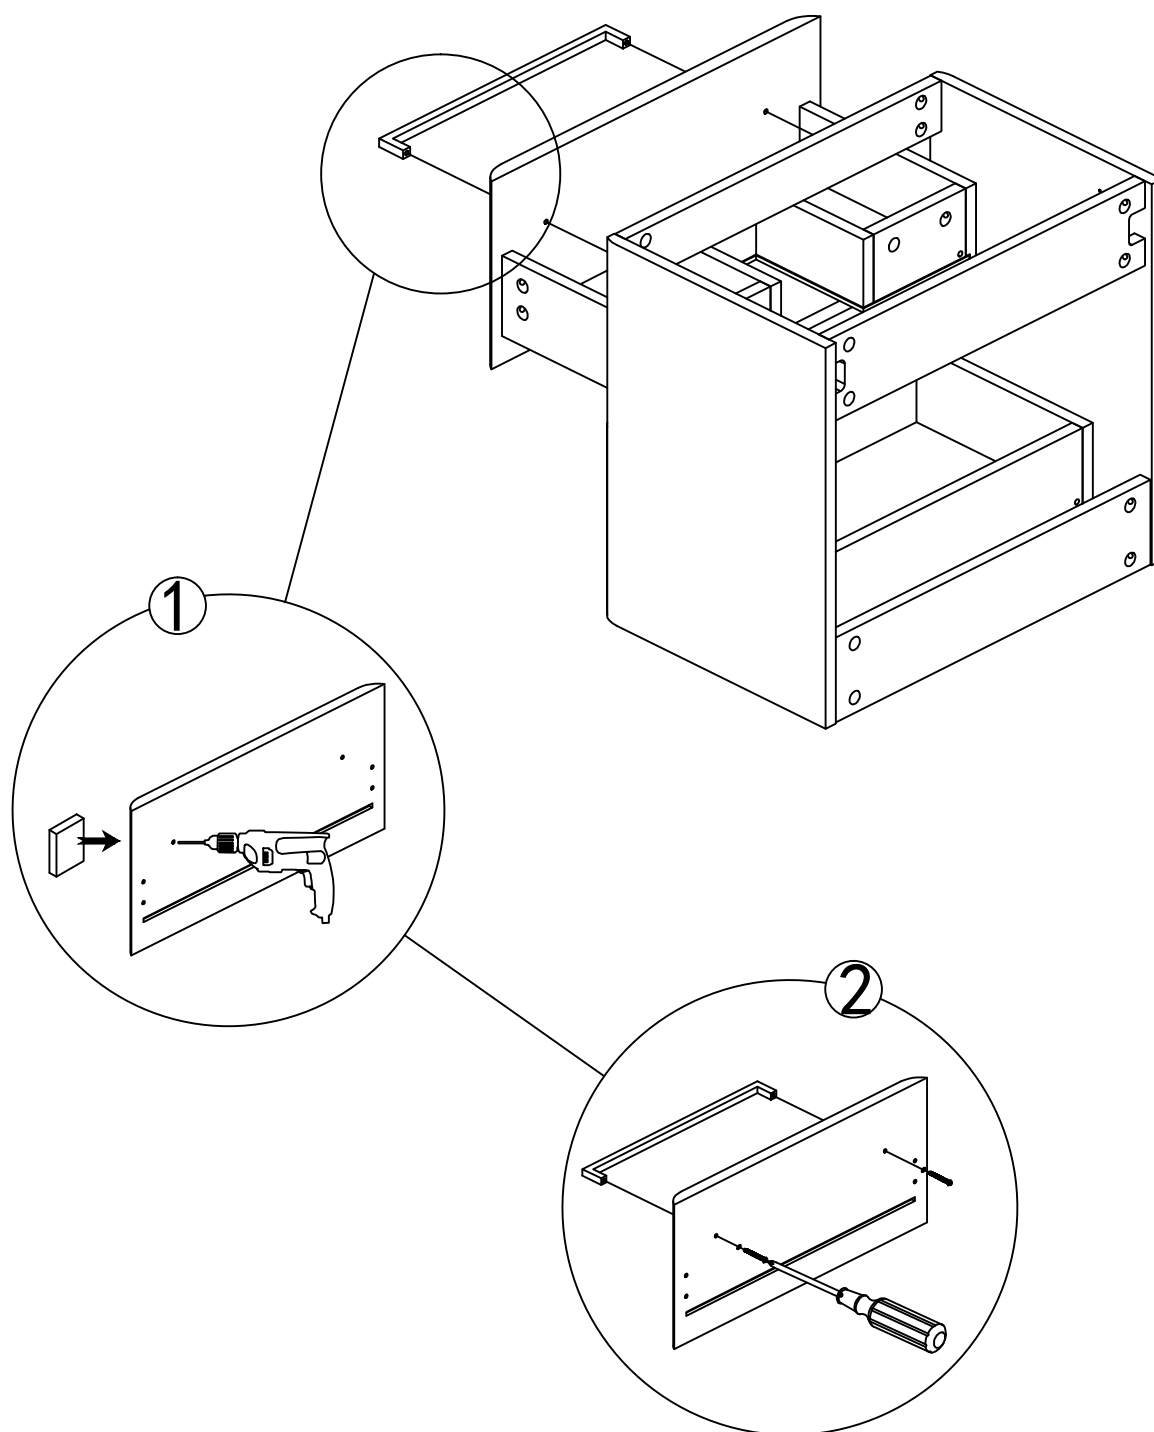 

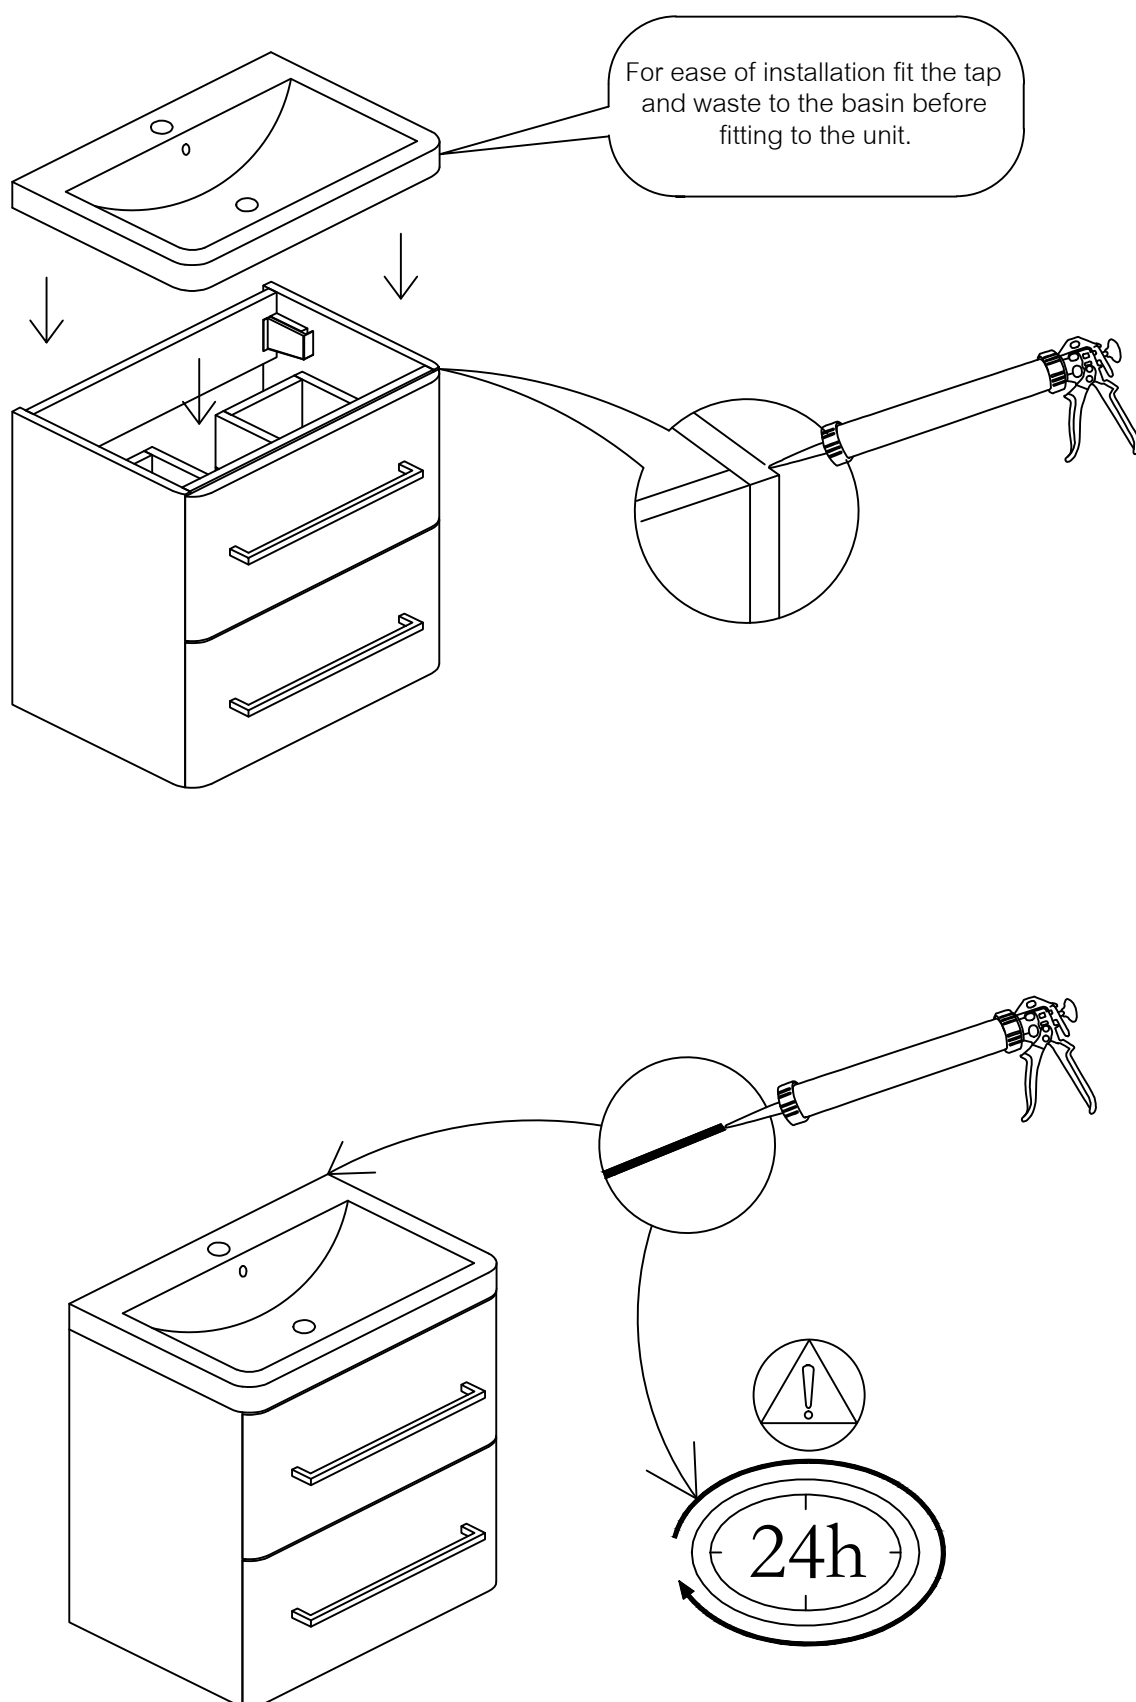 

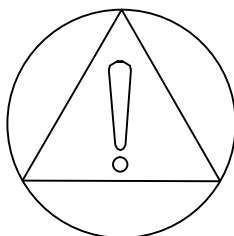 

- Clean with a soft cloth & warm soapy water only
- Do not use abrasive cleaning agents

