


Installation Manual

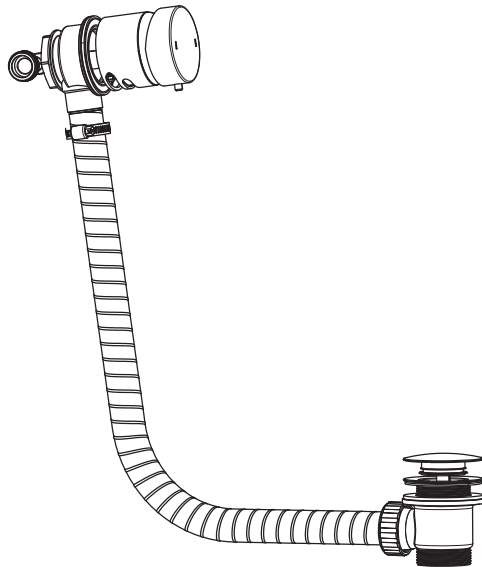

Apply for following models
55231/55232/55233/55234/
55235/55236

Please keep this page for your online registration.

No. FIACTBH13V1.0

Product image for reference



Parts List

1. Mixer body	x1
2. Adapter connector	x2
3. White washer	x1
4. Overflow ring	x1
5. Lock nut	x1
6. High pressure hose	x1
7. Waste body	x1
8. Washer	x1
9. Washer	x1
10. Nut	x1
11. Washer	x1
12. Washer	x1
13. Flange	x1
14. Cover	x1
15. Clamp	x1
16. Blue washer	x1
17. S2.5 Allen Key	x1

Figure II


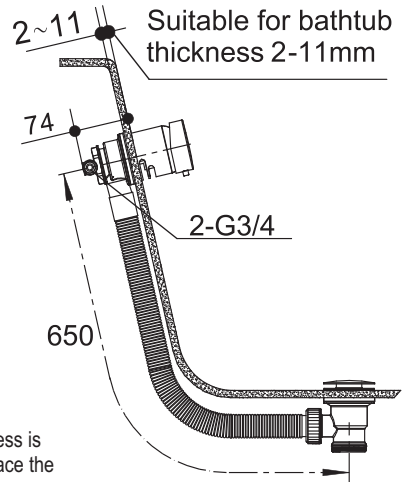


Figure I

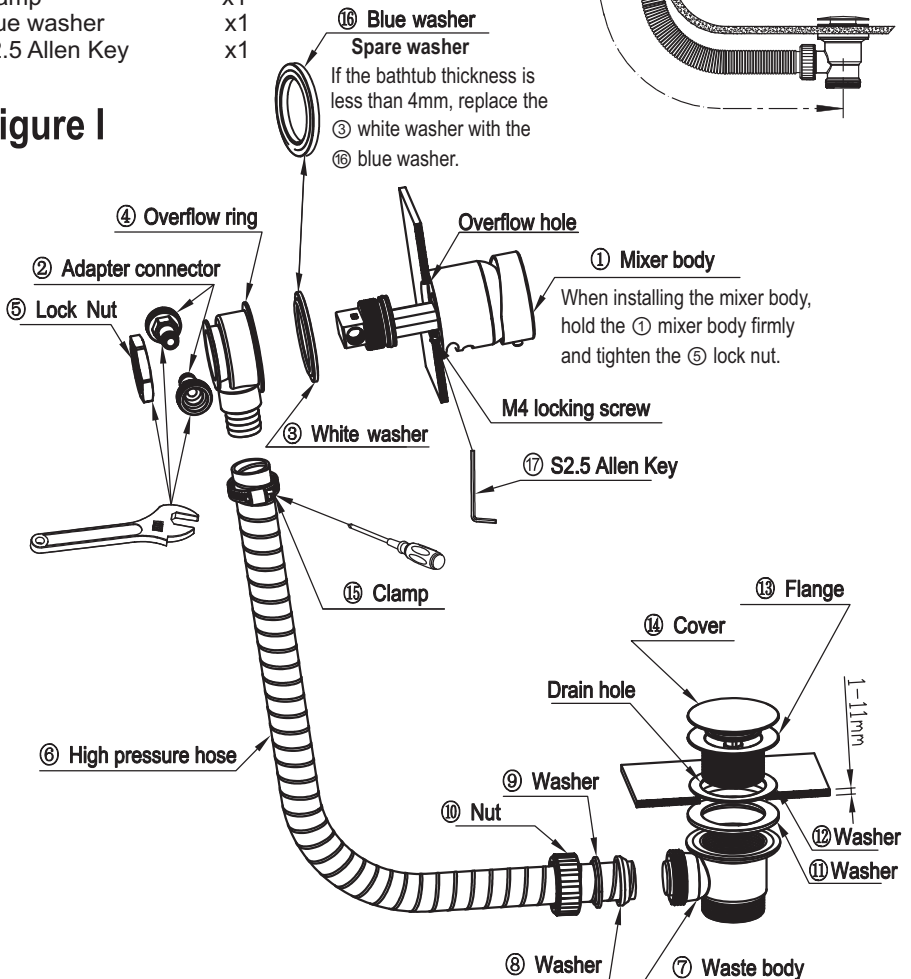

Installation and operation instructions

Installatilon Notice

1. Flush pipes before installation.
2. After installation, ensure all connections are secure and there are no leaks.

Operation Notice

1. The product is designed for water pressure between 0.5 bar and 4 bar, and water temperature between 0°C and 70°C.
2. This bath filler waste is suitable for a bathtub with thickness from 2mm to 11 mm.
3. Regularly clean the product with a soft, damp cloth. Surfaces should be maintained using a clean damp cloth, no corrosive and abrasive agents or materials should be used or come into contact with the surface finish, as this will invalidate your product warranty.
4. Read all instructions carefully before proceeding.

Installation steps

1. Remove the two adapter connectors ② from the mixer body.
2. Remove lock nut ⑤, then remove overflow ring ④ and white washer ③ from the mixer body ①.
3. Mixer body ① should be placed in the bath overflow hole. Using the S2.5 Allen key ⑰ and M4 locking screw, adjust the height of the mixer body ① so it is central in the overflow hole.
4. Choose the white washer ③ or blue washer ⑯ depending on the thickness of your bath. Slide the washer ③ then overflow ring ④ onto the mixer body ①. Add the lock nut ⑤ (loose) and adjust the direction of the mixer body outlet, then secure lock nut ⑤.
5. Place the washer ⑫ over the drain hole of bath, then proceed to feed the flange ⑬ through the drain hole. Place the washer ⑪ onto the flanged part of the waste body ⑦, then screw the waste body ⑦ to the flange on the underside of the drain hole. Install the cover ⑭ on the flange ⑬.
6. Slide parts ⑧, ⑨, and ⑩ onto high pressure hose ⑥ in order, then connect it to bath waste ⑦. Use plastic nut ⑩ to secure the connection.
7. Attach high pressure hose ⑥ to overflow ring ④ using the provided clamp ⑮, then tighten the clamp with a screwdriver.
8. Screw the two adapter connectors ② into mixer body ① and connect water inlet tub (not supplied), ensuring the hot and cold connections are on the correct sides. See Figure III.
9. Turn on the water supply and check all connections for leaks. Fill the bath to above the overflow (see Figure V) and check again for leaks. Repeat this leak check regularly.

Figure III


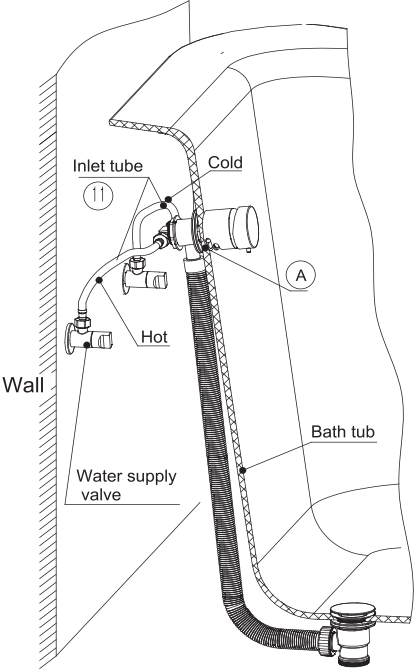


Figure IV

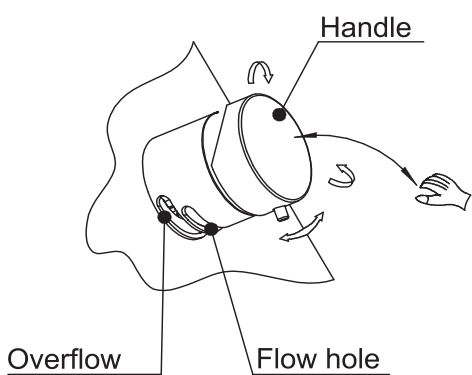

IV. Operating Instruction (Figure IV).

1. Adjust flow rate and water temperature by turning the handle left or right.

Figure V

Note: Once assembled, fill the bath with water, check for leaks.

