

VANITY TOP INSTALLATION

TOOLS AND MATERIALS REQUIRED:

A



B



C



D



A

Cloth

B

Carpenter's Level

C


Silicone Latex Caulk

D

Wooden Shims (Wooden Strips)

1

Make sure the top fits onto the vanity by doing a trial fit (Figure 1). The top should sit flush and level against the vanity. If the top rocks, then wooden shims will be needed to secure a firm fit.

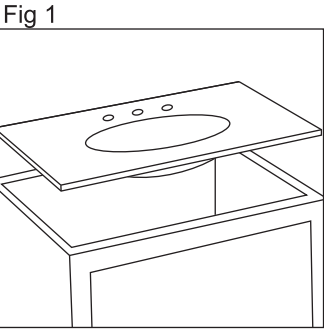


2

Install the faucet and the drain assembly (not provided) onto the top according to drain manufacturer's instructions. Note: DO NOT OVERTIGHTEN

3


Apply silicone latex caulk onto the entire edge of the vanity (Figure 2). Set top in place.

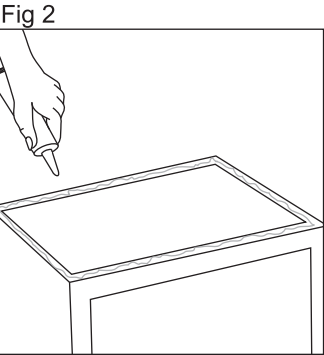

VANITY TOP INSTALLATION

- 4

Trim wood shims if necessary. Wipe off any excess silicone with a damp cloth and allow to dry (Figure 3). Try not to move or slide the top in any way for at least 24 hours.

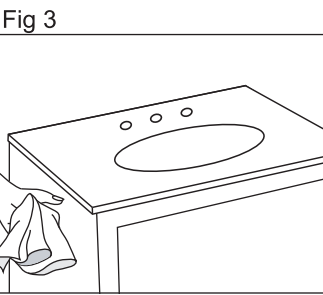

- 5

Back Splash and Side Splash Installation (optional):
Apply silicone to the back and the bottom of the back splash / side splash.
Carefully set the back splash / side splash into place and push firmly against the wall.
Note: always install the back splash before side splash. Wipe off any excess silicone with a damp cloth (Figure 4).

