



TREPANEL

WATERPROOF PANEL SOLUTIONS



www.bathroommountain.co.uk



Looking for a quick and stylish way to upgrade your bathroom or kitchen? Our Trepanel Aqua Luxe® panels offer a luxurious, high-end look while being incredibly easy to install - no need for specialist tools or professional fitters. Designed for modern living, these fully waterproof panels are perfect for bathroom walls, kitchen splashbacks, and even within showers, providing a seamless, low-maintenance finish.

In this guide, we'll walk you through how to install SPC panels step by step, ensuring a smooth, professional looking result.

Installing Trepanel Aqua Luxe® Waterproof

You will need:

- ☐ Utility knife/Stanley knife
- ☐ Measuring tape
- ☐ Spirit level
- ☐ Saw (Circular/jigsaw)
- ☐ Drill
- ☐ Suitable adhesive
(Mapei Ultrabond Eco MS Easy Panel Adhesive)
- ☐ Silicone Sealant
- ☐ Caulking gun

Before you start

Before beginning your installation, follow these key preparation steps:

Inspect the panels

Check for any visible defects, damage, or inconsistencies in colour of finish before installation. If you do notice anything, please contact our customer service team on 01782 405047, or customer.service@bathroommountain.co.uk

Check the wall surface

The substrate must be flat, clean, and free from dust, grease, or moisture. Any uneven surfaces should be leveled before installation.


Suitable substrates

Trepanel Aqua Luxe® SPC Wall Panels can be installed over drywall, cement board, plywood or existing tiles. For wet areas (such as showers), ensure the substrate is properly waterproofed with an approved barrier, such as a waterproof membrane.

Remove wall fixtures

Take off electrical plates, vents, and other fixtures before installation. You may need longer screws when reattaching them.

GREY STONE
EFFECT MATT
SKU: 802748 / 802755

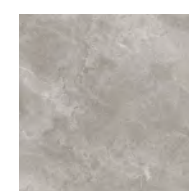


IVORY STONE
EFFECT MATT
SKU: 802749 / 802756



GREY MARBLE
EFFECT MATT
SKU: 802750 / 802757



BLACK MARBLE
EFFECT
SKU: 802751 / 802758

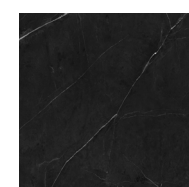

CARRARA MARBLE
EFFECT SATIN
SKU: 802752 / 802759



CARRARA MARBLE
EFFECT GLOSS
SKU: 802753 / 802760



CALACATTA
MARBLE EFFECT
SKU: 802754 / 802761




GREEN MARBLE
EFFECT
SKU: 802762



BLUE MARBLE
EFFECT
SKU: 802763



GOLD MARBLE
EFFECT
SKU: 802764

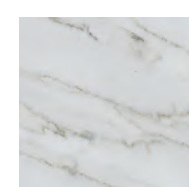

GREEN ONYX
MARBLE EFFECT
SKU: 802765



Step 1 - Prepare the Wall

Start by ensuring your wall is appropriate for installation. This means flat, stable, and moisture resistant.

If you are installing your panels into a wet area such as the shower, ensure you have water-proofed your space first. We recommend the Mapei Shower Waterproofing kit.

Step 2 - Layout & Cutting

To make sure you have the right amount of panels and they are cut to the correct sizes, do a dry fit before adhering to the wall.

If you need to make cuts to your panels, measure these with a tape measure and mark onto the panel where you need to make your cut.

Cut our smaller panels with a utility knife, by scoring and snapping, or cut our larger panels with a saw. To cut holes out for outlets or obstacles, do so with a drill and jigsaw.

Step 3 - Applying Adhesive

Using a strong adhesive, we recommend Mapei Ultrabond Eco MS Easy Panel Adhesive, apply in a zigzag pattern, with a border around the edge of the panel.

Starting left to right, or the bottom left to top right for our smaller panels, press the panel firmly against the wall.

Step 4 - Sealing & Waterproofing

Apply silicone sealant into the tongue and groove seams and edges to ensure secure and waterproof fit.


Step 5 - Finishing Touches

Be sure to clean off excess adhesive and silicone immediately.

In wet areas of the home, be sure to use silicone sealant around all edges, joints, and cut outs, maintaining the waterproof integrity of the panels.

Maintenance

To maintain your panels, clean with a damp cloth or mild detergent. Avoid abrasives, harsh chemicals, and solvents. Do not attach any heavy objects directly onto the panels - secure them to the underlying wall.

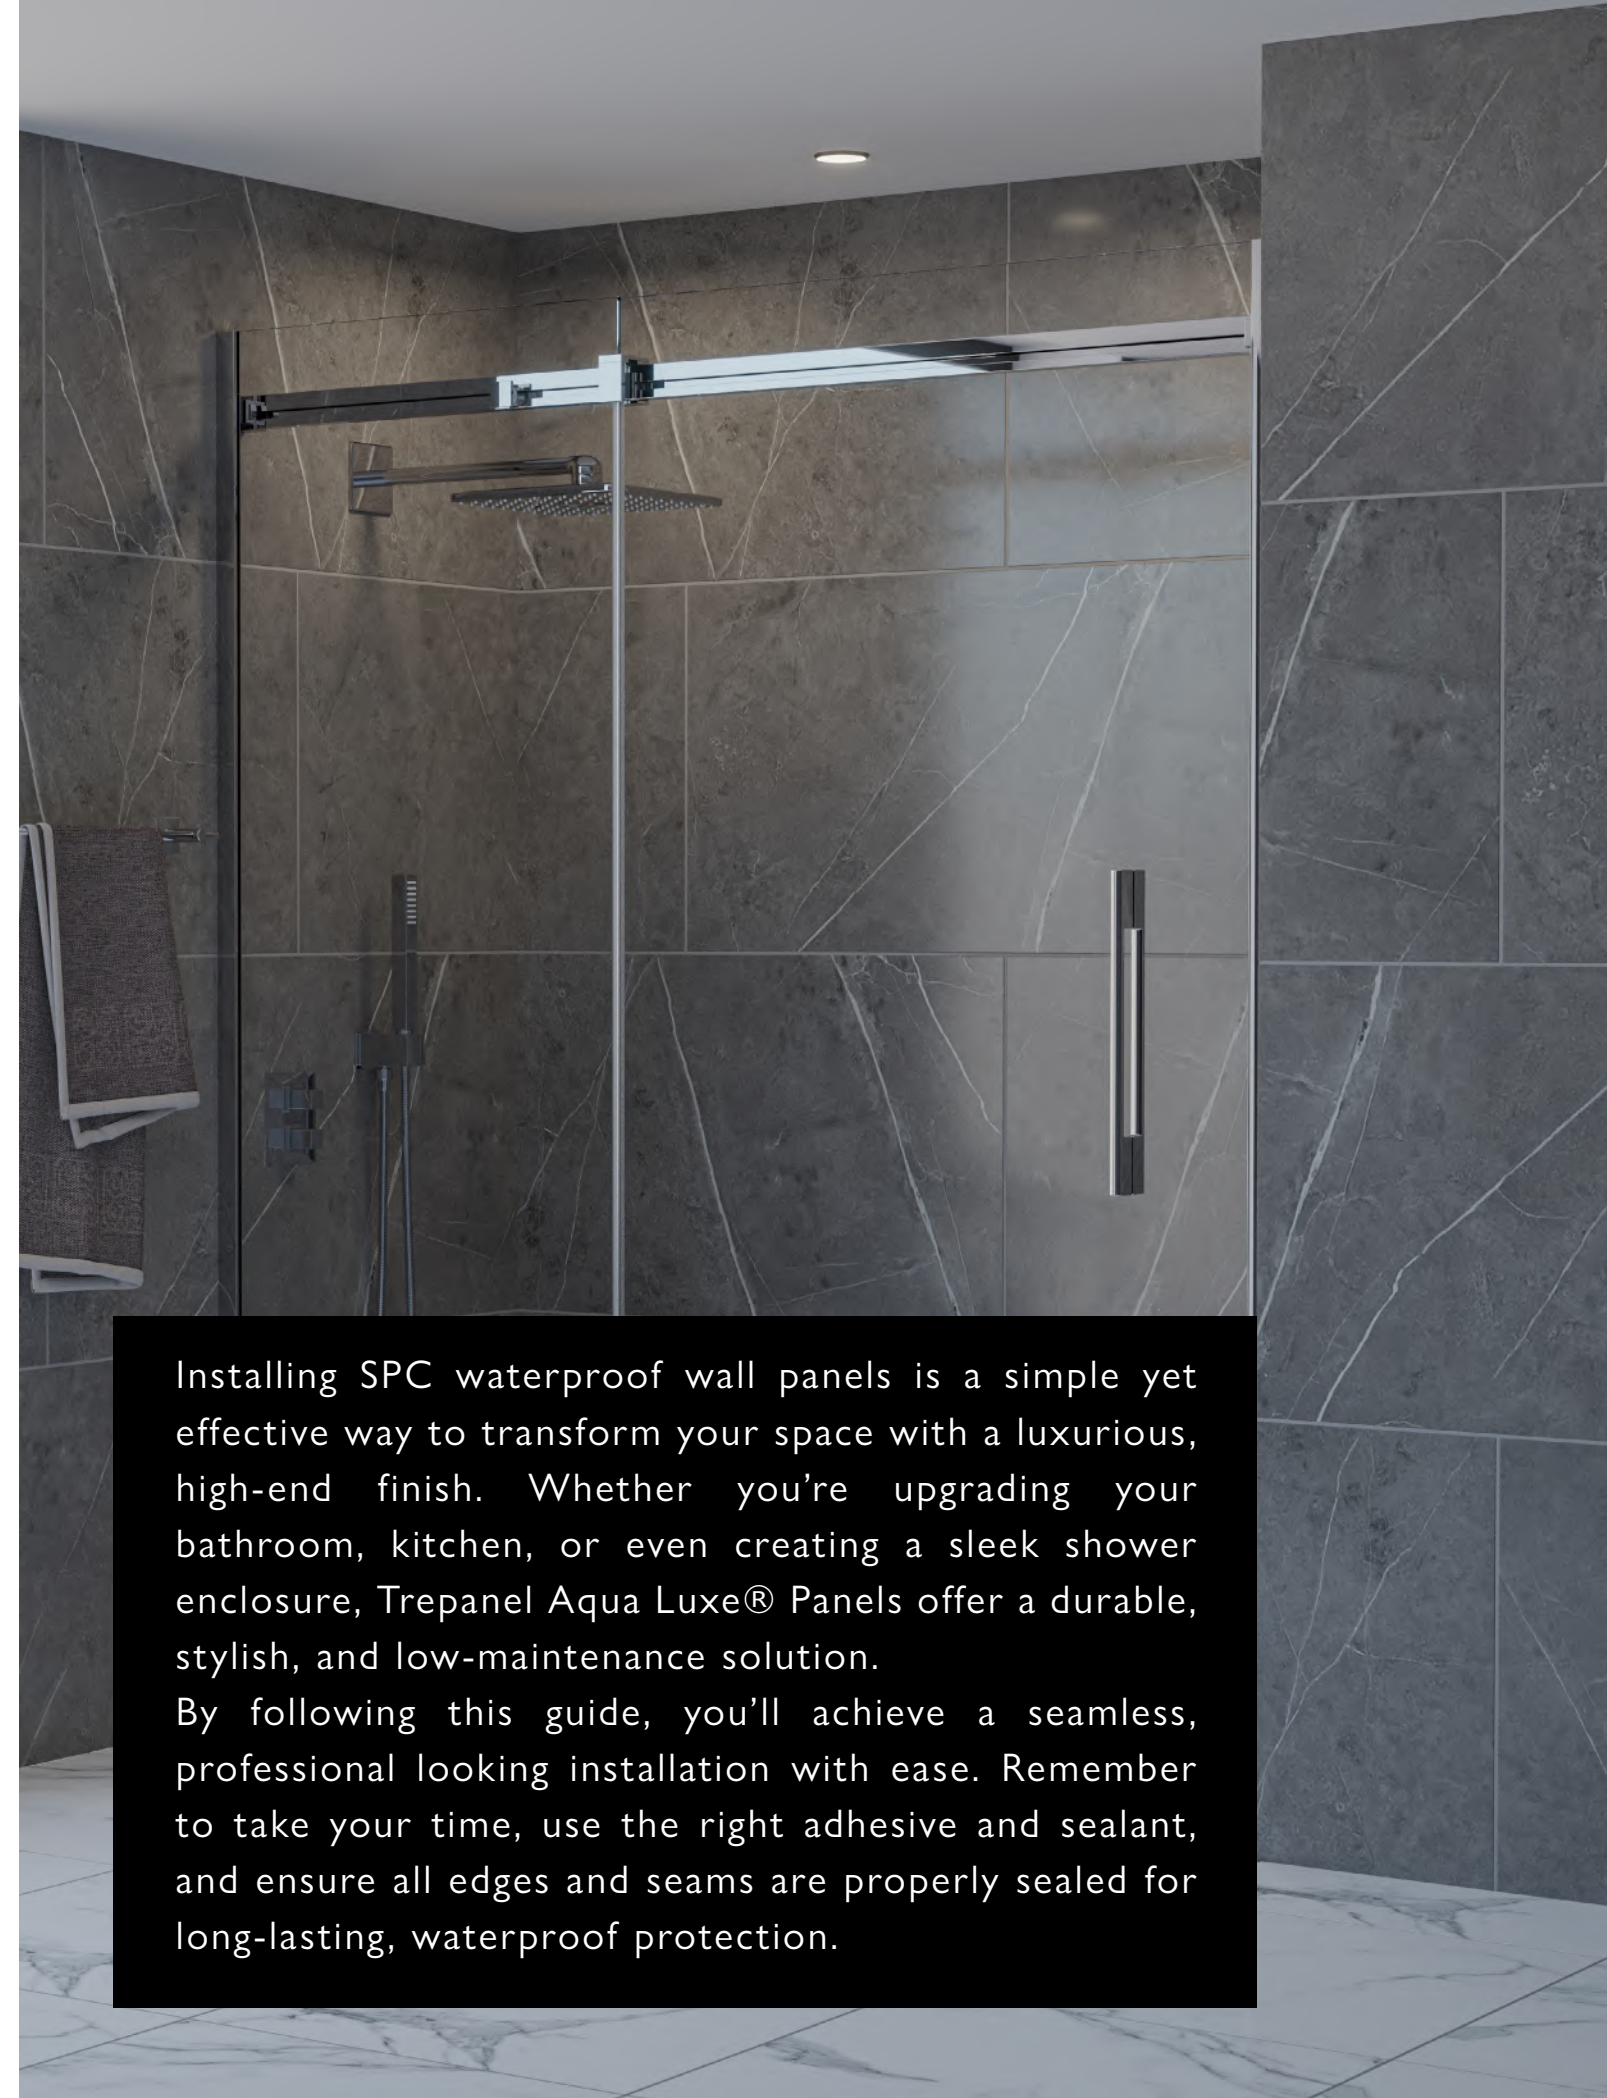

Installing SPC waterproof wall panels is a simple yet effective way to transform your space with a luxurious, high-end finish. Whether you're upgrading your bathroom, kitchen, or even creating a sleek shower enclosure, Trepanel Aqua Luxe® Panels offer a durable, stylish, and low-maintenance solution.

By following this guide, you'll achieve a seamless, professional looking installation with ease. Remember to take your time, use the right adhesive and sealant, and ensure all edges and seams are properly sealed for long-lasting, waterproof protection.

We'd love to see how you've styled your panels! Tag us on Instagram, @bathroommountainuk and share your transformations with us. Your project could even be featured on our page!