



Shower tray installation instruction

BEFORE YOU BEGIN

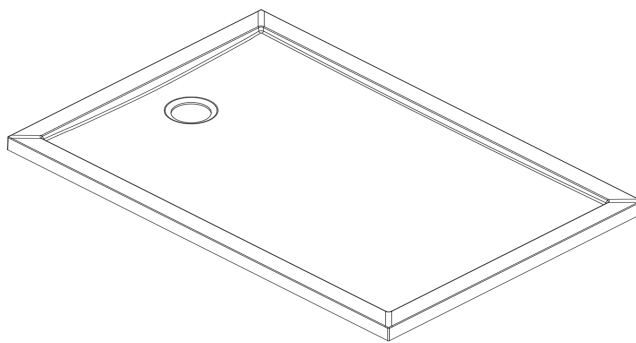


- Ensure Showertray must be installed on a flat, leveled surface, free of any bumps or protrusion.
- Ensure the base of showertray is fully supported.

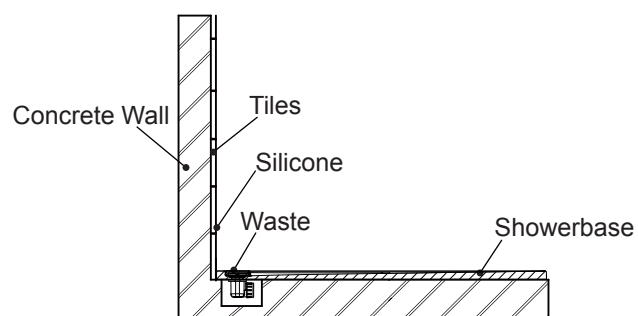


SHOWERTRAY INSTALLATION


1. Prepare showertray and tools.
Peel off the protective film around waste hole area only to allow to fit waste outlet.

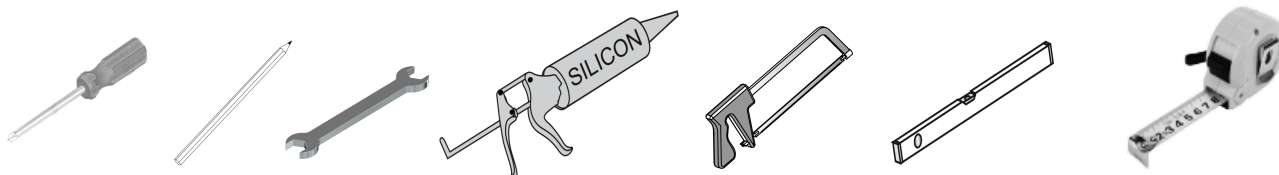

2. Fit the showertray with waste.

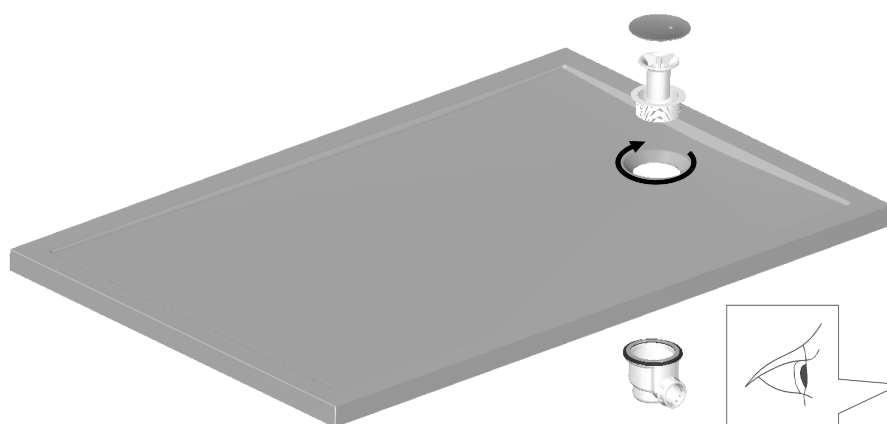


Remarks :
This tray package does not include this waste, If you need it, please order it separately.

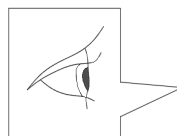


Use appropriate force to tighten the screws



Don' t over tight the screws to damage the shower tray

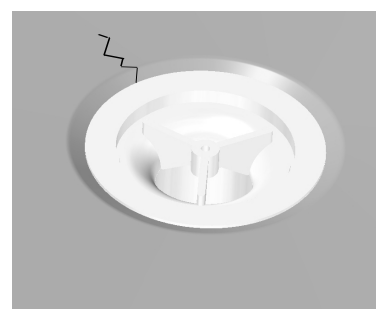


3. Ensure that the drainer and shower tray are installed and sealed without leakage.

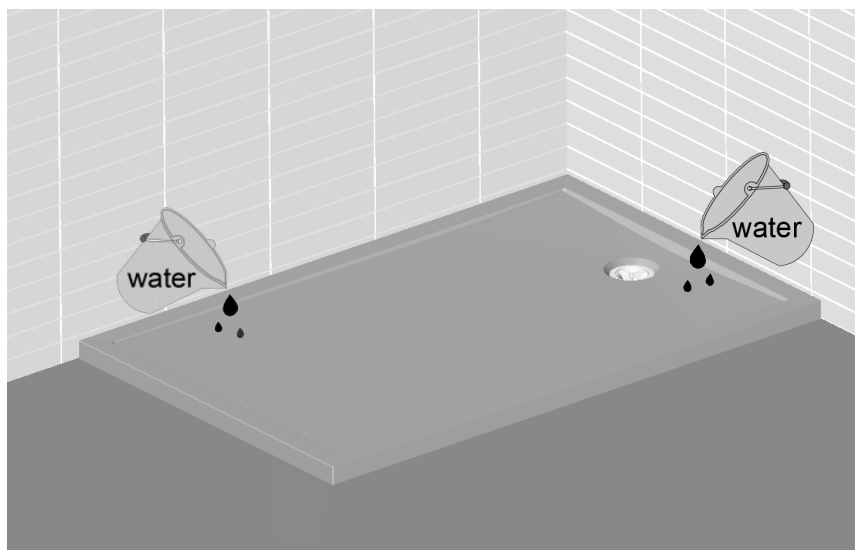


OK

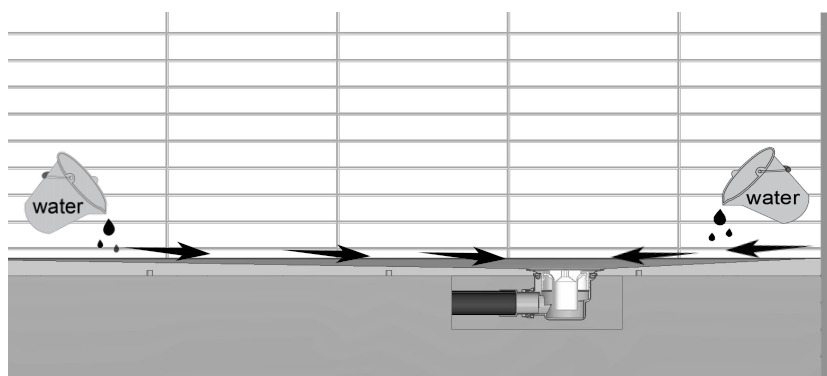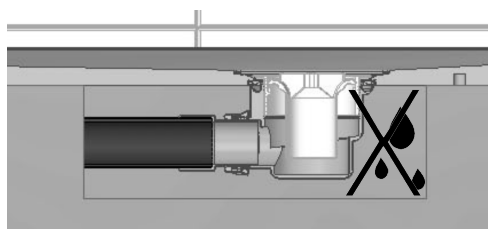



4. Ensure that the location of the shower tray is firm, level, and clean.

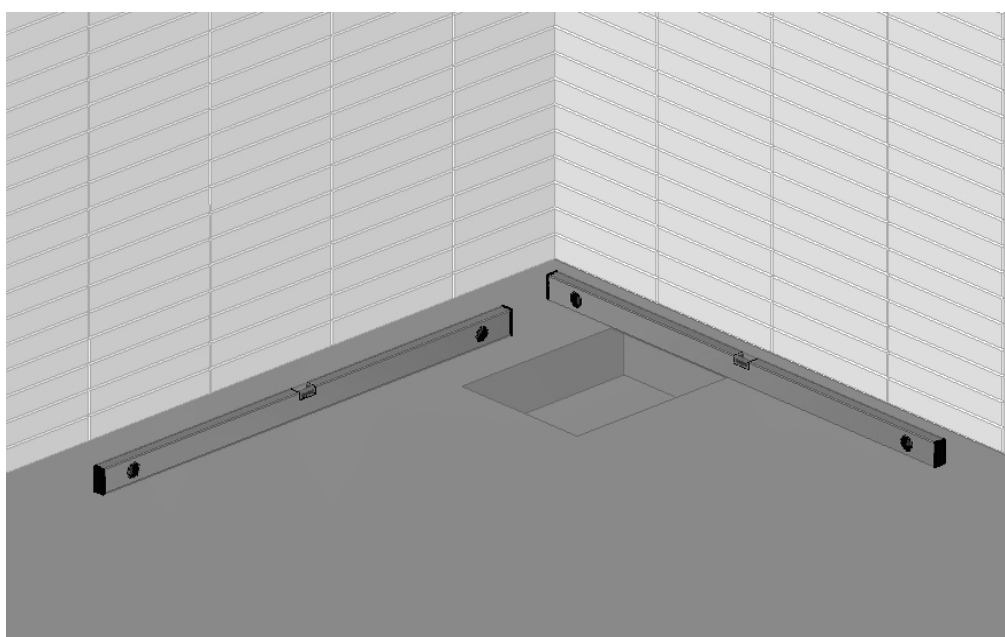


5. Install the shower tray on a 15mm depth of weak cement mix (sand/cement ratio 5:1). Please note if using water based adhesives, to enhance the bonding it is suggested that a suitable primer is applied to the base of the shower tray before installation.

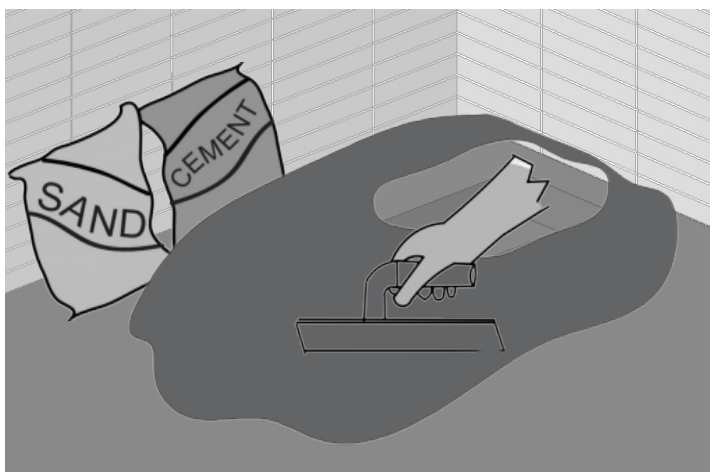

6. Pls make sure the shower tray is level.

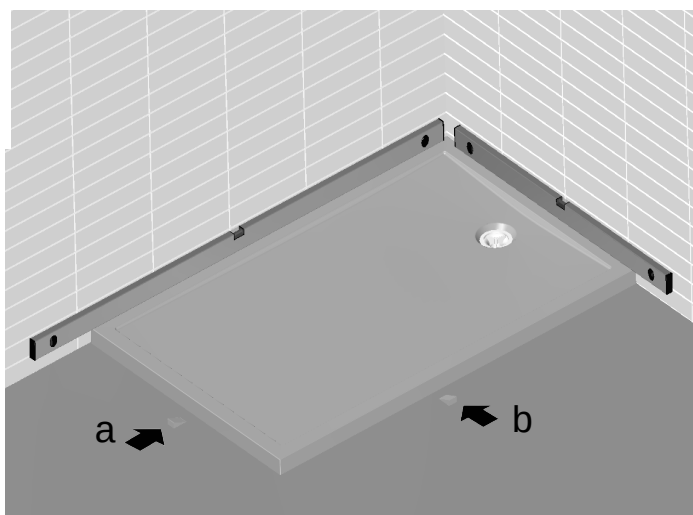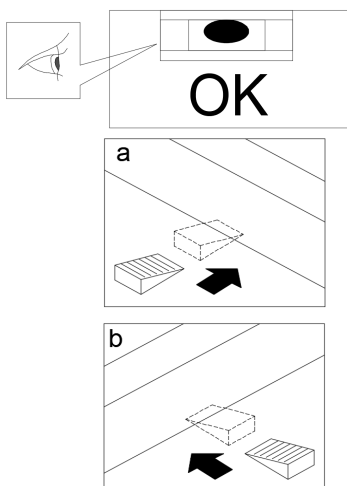


7 . Please seal joints between shower tray and wall, also tray and floor with an anti-fungal silicone sealant and allow to set for 24 hours.
Fit the showertray with waste.

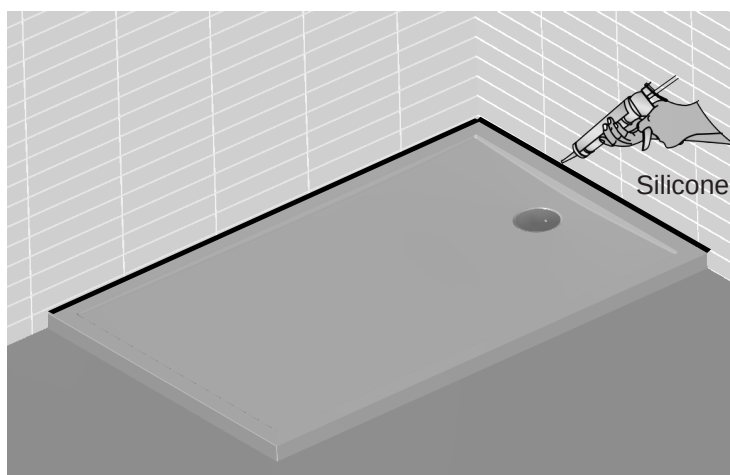

Feet installation


Remarks : The feet and panels are optional parts.

1. Clean the surface of the feet by alcohol.
Clean the position on the back of the tray with the alcohol that the feet should be fitted.

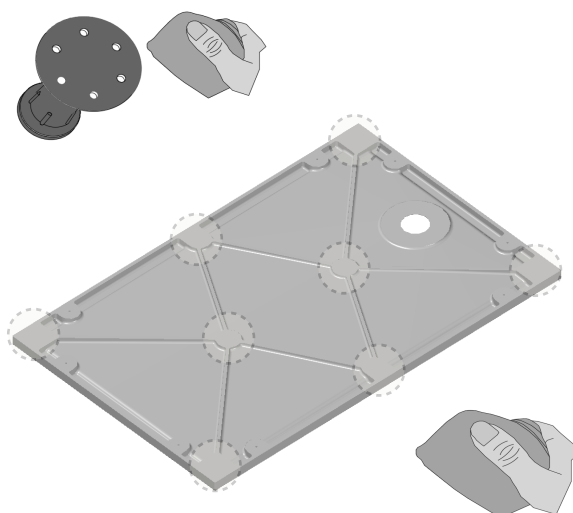


LFB Code	Product Name			
43383	Leg Kit for Square & Rectangular Shower Tray Up to 1200mm	5pcs	8pcs	8pcs
43385	Leg Kit for Square & Rectangular Shower Tray Up to 1800mm	6pcs	12pcs	12pcs



2. Get the 3M sticker tape onto the feet and firmly pressed.

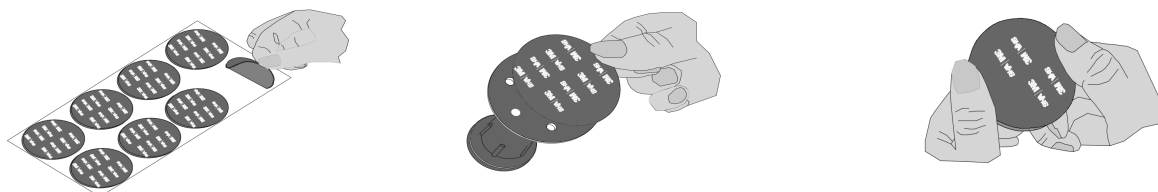



3. Take off the film and place the feet onto designed position with compress tightly and Install the skirt panel clip into the pre-embedded screw hole.

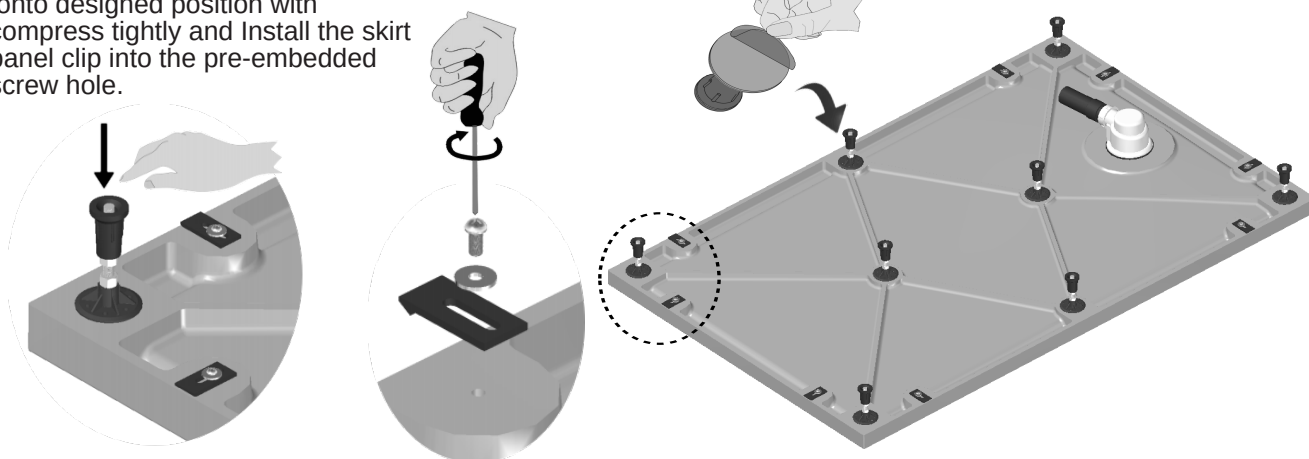

4. Adjust the feet with spirit level.


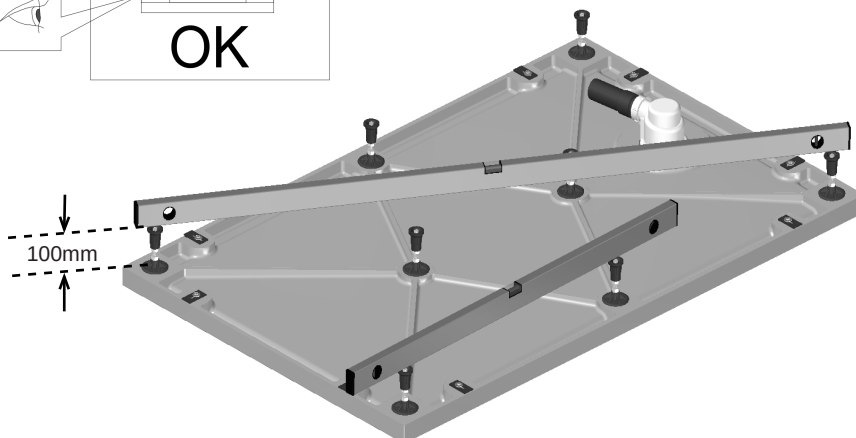
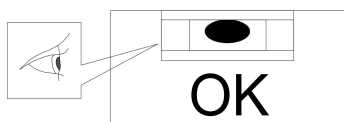


5. Mark the length of panel required for both edges and cut with a junior or standard hacksaw.

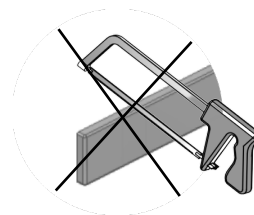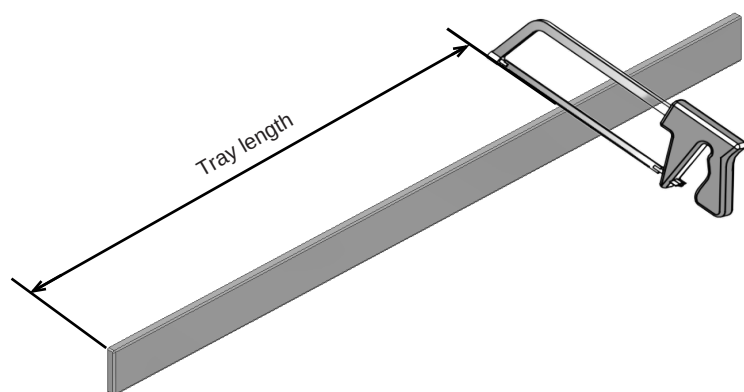

Ensure the rebated end is included in the length required.

6. Pls make sure the shower tray is level and install the skirt panel and snap it into the clips.

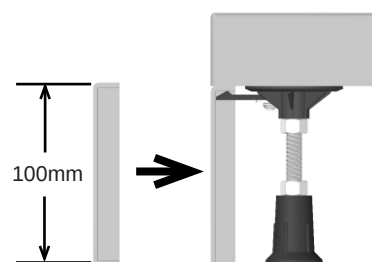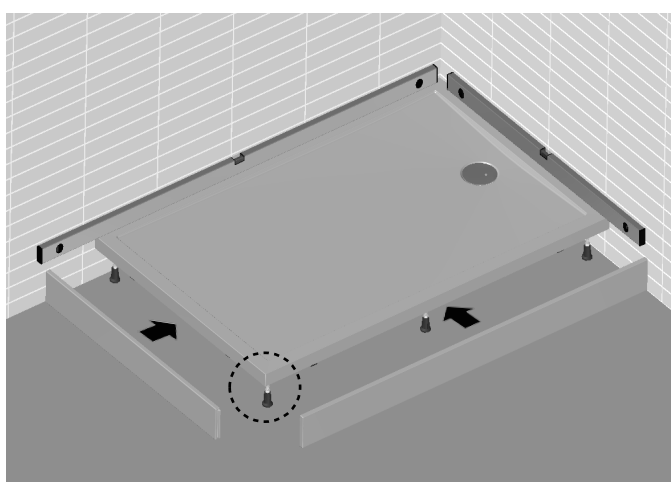

7. Please seal joints between shower tray and wall, also tray and floor with an anti-fungal silicone sealant and allow to set for 24 hours. Fit the showertray with waste.

