

BATHROOM CABINET INSTRUCTION MANUAL

71569 71570 71571 75198 75199 75190 71572 71573 71574



KEEP THIS MANUAL FOR FUTURE REFERENCE.

The warranty is valid only if the product is assembled by a qualified professional in strict accordance with this manual and all applicable local codes and regulations.

IMPORTANT: PLEASE READ PRIOR TO INSTALLATION

- **Handle with care during transportation and unpacking.**
 - **This product *MUST* be installed by a qualified, licensed professional.**
 - **Thoroughly inspect the product before installation to confirm it is undamaged and matches your order. Claims for damage or incorrect items will not be accepted after installation.**
-

START HERE


1. CHECK PRODUCTS FOR ANY ISSUES

Before opening any packaging, verify that all items received match your order invoice. If any items are incorrect, faulty, damaged, or differ from what you ordered:

Please DO NOT proceed with installation and contact your retailer immediately.

Claims will not be processed if installation has been attempted or completed.

.....

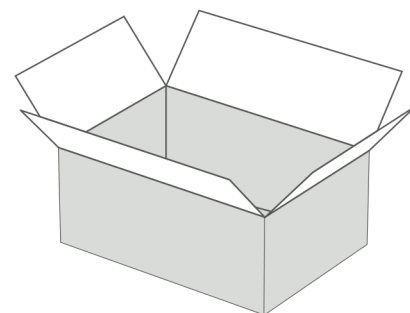


2. POSITIONING

Vanities must be installed a minimum of 400mm away from designated wet areas and heating units.

Do not expose furniture to direct shower spray.

Ensure your bathroom is adequately ventilated to prevent moisture buildup. Prolonged high humidity can cause dampness, mold, and damage to the vanities.

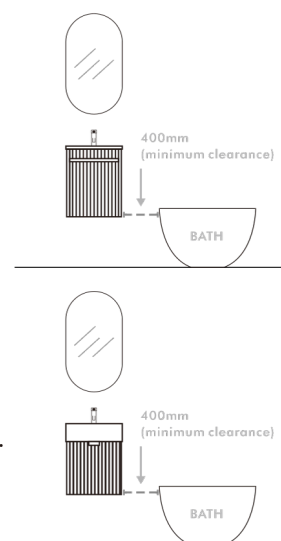

INSTALLATION STEPS:


⚠️ **PRODUCT CARE AND MAINTENANCE**

These products are precision-engineered and will provide continued superior and safe performance, provided that:

1. They are installed, commissioned, operated, and maintained in accordance with the recommendations in this manual.
2. Periodic maintenance is performed as necessary to keep the product in good working order.
3. Carefully inspect the new fixture for any signs of damage before installation.

1 REQUIRED TOOLS FOR INSTALLATION

⚠️ **TOOLS AND MATERIALS REQUIRED (Not Included)**


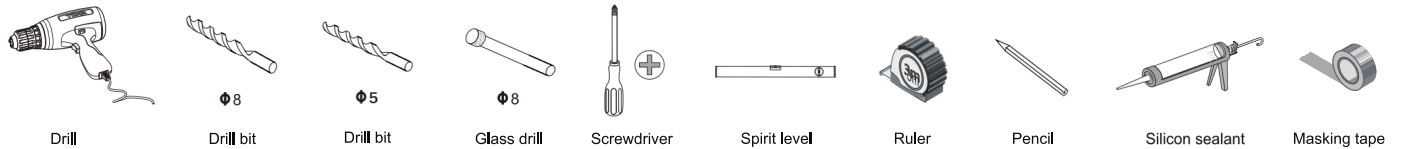


⚠️ **ACCESSORIES**



2 PREPARE THE CABINET (REMOVE DOORS)


DOOR ADJUSTMENT GUIDE

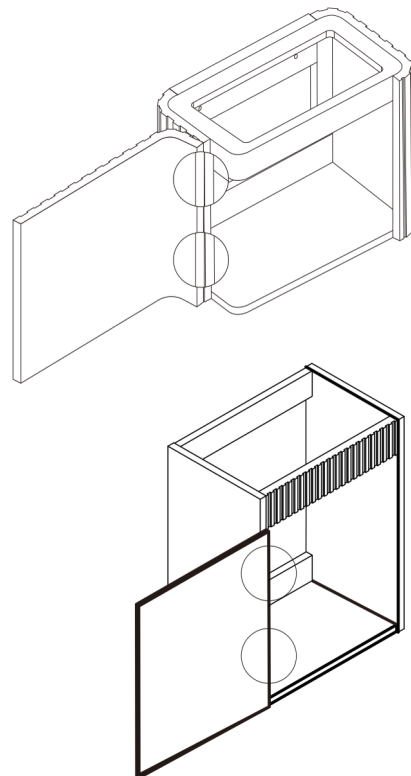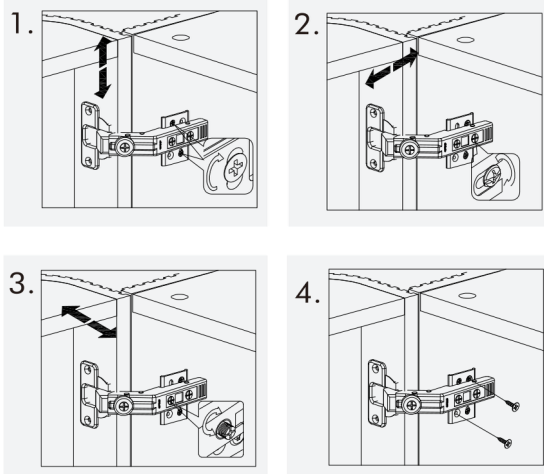

INSTALLATION STEPS:

3


LOCATION

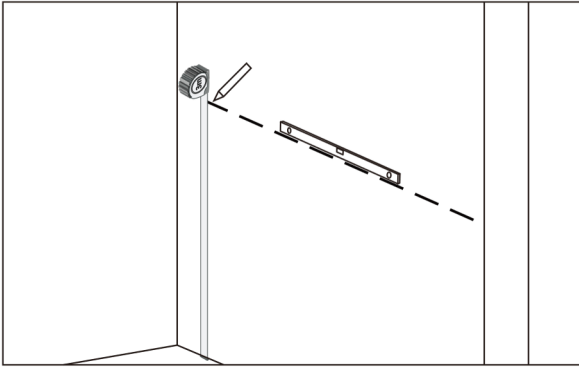

Note: Avoid the position of water pipes when drilling holes.


Mark the position of the top of the cabinet. Remember to factor in the thickness of the top/basin to achieve the correct final height.

MARK POSITIONS

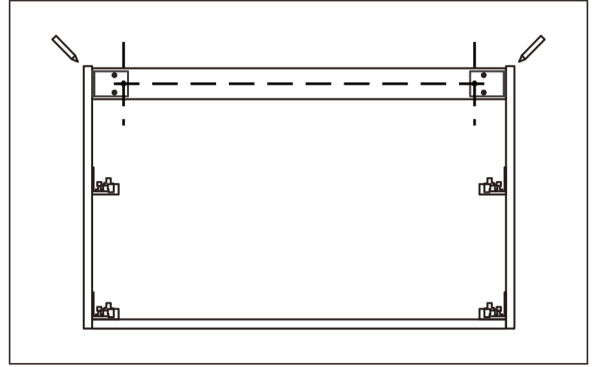


4

LEVEL SIDES

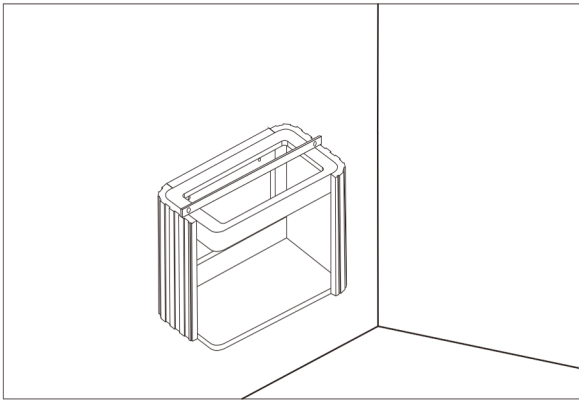


LEVEL FRONT & BACK

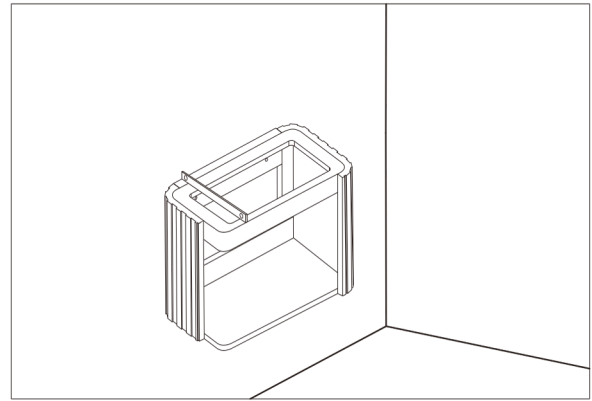

Use temporary supports (such as a sturdy crate or box) while positioning and securing the cabinet.


5

DRILL HOLES

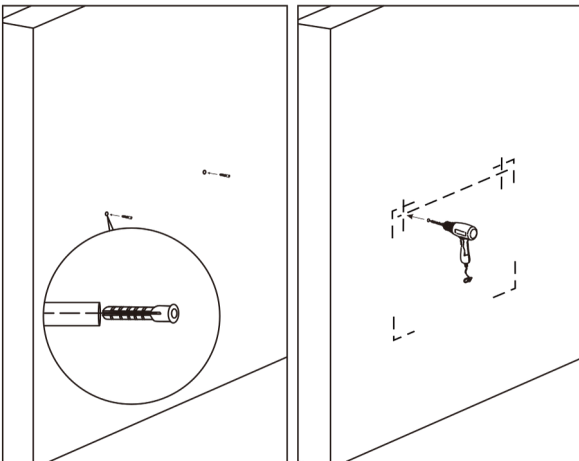

Drill holes for the provided mounting screws. Ensure holes are drilled into solid structural supports (e.g., masonry, brick wall, or wall studs).

SECURING THE CABINET

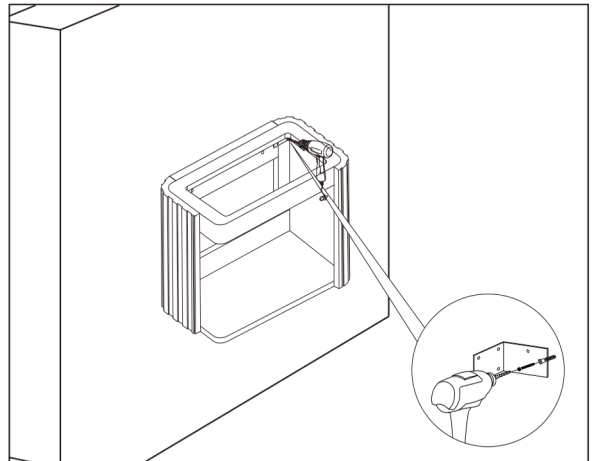


Assemble the mounting screws according to the provided guide. Position the cabinet against the wall at the marked location and install all screws. Ensure all fixing points are secure and each screw is tightly fastened.

INSTALLATION STEPS:

6


DRAWER PULL

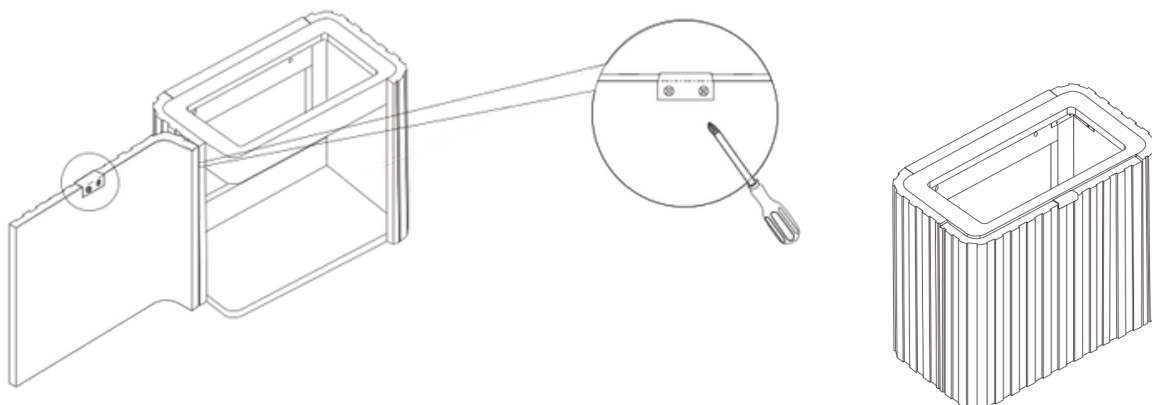

7


CLEANING

- Wipe off excess silicone immediately after application.
- Remove all dust and debris from drilling and cutting from inside the cabinet before reinstalling doors and drawers. Do not forget to clean runners and hinges.

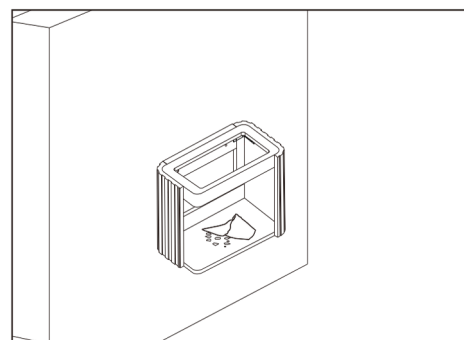


8

PLACING A WASHBASIN ON TOP OF THE CABINET

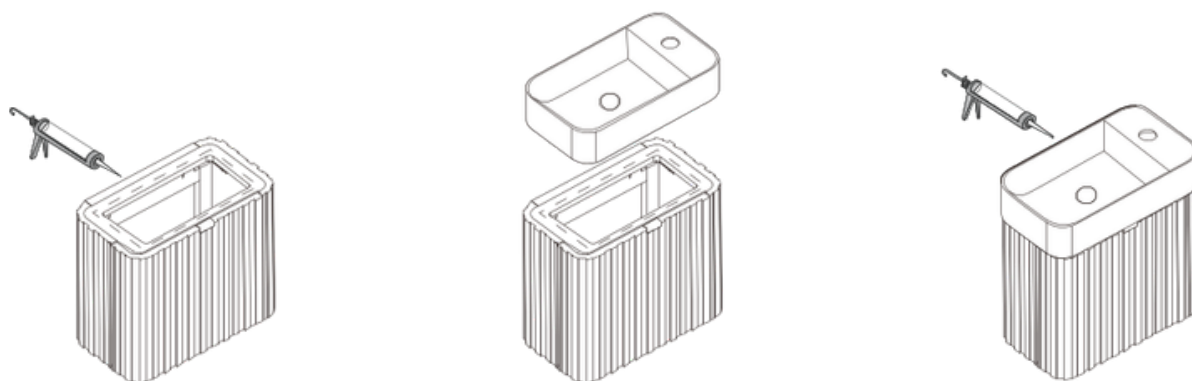

NOT INCLUDED

INSTALLATION STEPS:

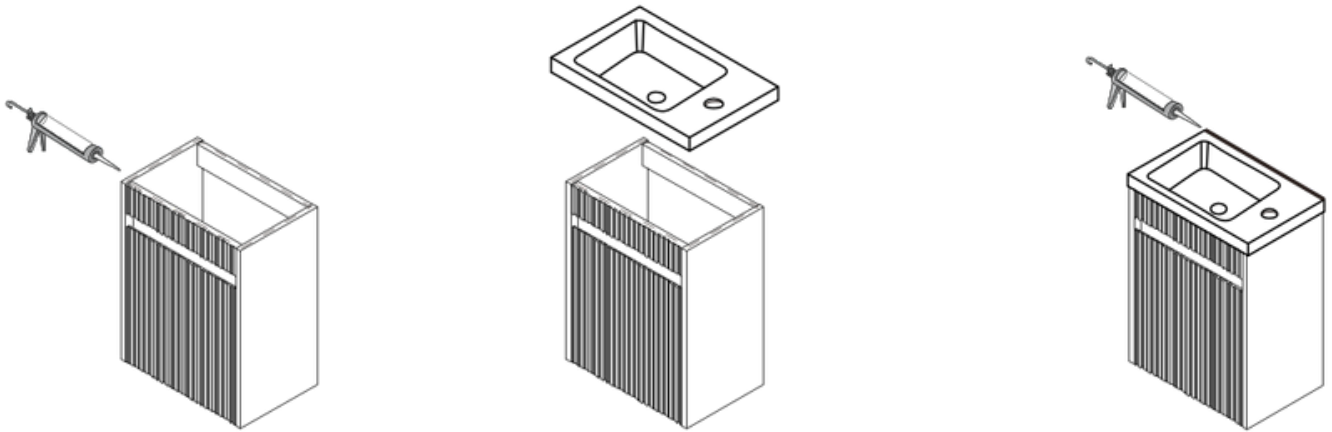

NOT INCLUDED

For vanities, place the top onto the cabinet and align all sides. Apply a thin bead of non-acidic silicone sealant along all four edges. Also, seal all cabinet edges against the floor and wall to prevent water penetration.

WARNING: DO NOT overtighten the waste fittings to the basin, as this can cause stress and damage to the basin or top. We recommend hand-tightening only, followed by sealing with silicone.

9

ADJUST THE DOORS & DRAWERS

After installation, some adjustment of doors and drawers may be necessary due to movement during transport and installation. The cabinet **MUST** be level before making any adjustments. It is the installer's responsibility to ensure these adjustments are performed correctly. No warranty claims will be considered until this adjustment process is completed. Refer to the specific adjustment instructions provided.

